



*MUSIC PRODUCTION CENTER*

**MPC**  
**1000**

**AKAI**  
**professional**

## **Operator's Manual**

### **WARNING**

To prevent fire or shock hazard,  
do not expose this appliance to  
rain or moisture.

## Important Notice

The material in this document is copyright to AKAI professional M.I. Corp., and may not be quoted or reproduced in any form without written permission from the company.

### LIMITED SOFTWARE WARRANTY POLICY

All the software provided with, or purchased especially for, AKAI professional products has been tested for functionality. AKAI professional M.I. Corp. will make its best efforts to correct reported software defects for future releases subject to technical practicabilities.

AKAI professional M.I. Corp. makes no warranty or representation either expressed or implied with respect to the system's performance or fitness for a particular purpose.

In no event will AKAI professional M.I. Corp. be liable for direct or indirect damages arising from any defect in the software or its documentation. Further, AKAI professional M.I. Corp. will not accept any liability for any programs, sounds, audio recording or sequences stored in or used with AKAI professional products, including the cost of recovery of such data.

The warranties, remedies and disclaimers above are exclusive and take precedence over all others, oral or written, express or implied, to the extent permitted by law in the geographical area of the product's use. No employee of AKAI professional M.I. Corp., agent, distributor or employee of an agent or distributor is authorised to offer any variation from this policy.

## WARNING!!

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

1-En



THE SYMBOLS ARE RULED BY UL STANDARDS (U.S.A.)



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure; that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

5B-En

This appliance is not equipped with a fully disconnect main power switch. Even when the appliance is turned off, the power supply to the appliance is not completely turned off when the power cord is plugged in. Pull out the power cord when not using the appliance for long periods.

**WARNING: WHEN USING ELECTRIC PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

**WARNING**

The MPC1000 is designed to be used in a standard household environment.

Power requirements for electrical equipment vary from area to area. Please ensure that your MPC1000 meets the power requirements in your area. If in doubt, consult a qualified electrician or AKAI professional dealer.

120 VAC	@ 60 Hz for USA and Canada
220~240 VAC	@ 50 Hz for Europe
240 VAC	@ 50 Hz for Australia

**IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat register, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

**PORTABLE CART WARNING**



**S3125A**

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.

For U.K. customers only

**WARNING**  
**THIS APPARATUS MUST BE EARTHED**  
**IMPORTANT**

This equipment is fitted with an approved non-rewireable UK mains plug.

To change the fuse in this type of plug proceed as follows:

- 1) Remove the fuse cover and old fuse.
- 2) Fit a new fuse which should be a BS1362 5 Amp A.S.T.A or BSI approved type.
- 3) Refit the fuse cover.

If the AC mains plug fitted to the lead supplied with this equipment is not suitable for your type of AC outlet sockets, it should be changed to an AC mains lead, complete with moulded plug, to the appropriate type. If this is not possible, the plug should be cut off and a correct one fitted to suit the AC outlet. This should be fused at 5 Amps.

If a plug without a fuse is used, the fuse at the distribution board should NOT BE GREATER than 5 Amp.

PLEASE NOTE: THE SEVERED PLUG MUST BE DESTROYED TO AVOID A POSSIBLE SHOCK HAZARD SHOULD IT BE INSERTED INTO A 13 AMP SOCKET ELSEWHERE.

The wires in this mains lead are coloured in accordance with the following code:

<b>GREEN</b> and <b>YELLOW</b>	— Earth
<b>BLUE</b>	— Neutral
<b>BROWN</b>	— Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wire which is coloured **GREEN** and **YELLOW** must be connected to the terminal which is marked with the letter **E** or with the safety earth symbol  $\perp$  or coloured **GREEN** or coloured **GREEN** and **YELLOW**.

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.

The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured **RED**.

**THIS APPARATUS MUST BE EARTHED**

Ensure that all the terminals are securely tightened and no loose strands of wire exist.

Before replacing the plug cover, make certain the cord grip is clamped over the outer sheath of the lead and not simply over the wires.

## **FCC WARNING**

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

21B-En

## **AVIS POUR LES ACHETEURS CANADIENS DU MPC1000**

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la Class B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

27-F

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

27-En

## **VENTILATION**

Do not prevent the unit's ventilation, especially by placing the unit on soft carpet, in a narrow space, or by placing objects on the unit's chassis—top, side, or rear panels. Always keep the unit's chassis at least 10 centimeters from any other objects.

31C-En

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

32-En

## **COPYRIGHT NOTICE**

The AKAI professional MPC1000 is a computer-based device, and as such contains and uses software in ROMs. This software, and all related documentation, including this Operator's Manual, contain proprietary information which is protected by copyright laws. All rights are reserved. No part of the software or its documentation may be copied, transferred or modified. You may not modify, adapt, translate, lease, distribute, resell for profit or create derivative works based on the software and its related documentation or any part thereof without prior written consent from AKAI professional M.I. Corp., Yokohama, Japan.

---

# Table of contents

Chapter 1 : Introduction	1
The user interface	1
Front Panel	3
Rear Panel	3
Connecting MPC1000 to External Audio/MIDI device	4
Terminologies in MPC1000	5
Chapter 2 : Basic Operation	7
Setting names	8
Entering numbers with NUMERIC key	9
Chapter 3 : Sequencer feature	10
Recording the performance	10
Playing back a sequence	11
Other useful features for recording sequences	12
Detailed information on sequence feature	15
Track features	20
MIDI sequencer features	22
Chapter 4 : Editing sequences	25
Selecting a region within a track to edit	25
Selecting the editing region by bar	27
Changing the order of tracks (TRACK MOVE)	29
Chapter 5 : Step editing	30
About step edit	30
Screens	30
Events	31
Copying/pasting an event	33
Deleting an event	34
Entering an event (Step recording)	34
Chapter 6 : Song mode	36
Structure of a song	36
Creating a song	37
Playing a song	37
Other features in the SONG mode	38
Chapter 7 : Functions of a pad	40
Playing with pads	40
Setting the track mute with pads	41
Selecting a sequence to play with pads	42

---

Chapter 8 : Q-Link slider	44
Setting the slider	44
Recording the slider value in a sequence	44
AFTER key	44
Chapter 9 : Using the MPC1000 with external devices	45
Sync with the MPC1000 as the master	45
Sync with the MPC1000 as the slave	45
Connecting the MPC1000 to the MIDI keyboard with the sound module	46
Setting the MIDI input	47
Chapter 10 : Recording a sample	48
Recording the sample - detailed information	50
Recording the digital signal	50
Recording the MAIN OUT	50
Other features	51
Chapter 11 : Editing a sample	52
Setting the start/end points for the sample	52
Deleting an unnecessary part from a sample (DISCARD)	53
Saving part of a sample as a new sample (EXTRACT)	54
Sample window features	54
Other editing functions	55
Setting the loop	56
Linking the loop point to the start point	57
Chapter 12 : Program	58
Creating a program	58
Assigning/Reassigning samples to the pads	58
Playing the sample while the pad is being hit	59
Setting the volume and the tuning for a sample	59
Changing the sample volume with velocity	59
Playing several samples with one pad	60
Switching between samples using velocity	60
Setting the envelope for a pad	61
The functions in the Program window	61
Editing the sound of a sample	63
Simulating the open/close hi-hat (setting the mute group)	64
Setting the overlap of the sounds on the same pad (voice overlap)	64
Delete all the unused samples at the same time (PURGE)	64
Setting a MIDI note number to the pads	65
Assigning MIDI note numbers to the pads (changing the default setting)	66

---

---


Chapter 13 : Mixer	67
Setting the level and pan of the pad	67
Setting the output for the sample	67
Selecting the pad to apply the effect	68
Chapter 14 : Effect	69
Applying effects to a specific pad sound	69
Applying effects of the FX2 to the effect sound of the FX1	70
Editing effects	70
Using the master effect	73
Editing the effect set	74
Chapter 15 : Save / Load	75
Saving the data	75
Loading a file	79
Renaming a file	83
Deleting a file	83
Setting the auto load function	83
Formatting the memory card	84
Saving the data to the internal flash memory	84
Chapter 16 : Connecting the MPC1000 to your computer	85
Connecting the MPC1000 to a Windows-based PC	85
Connecting the MPC1000 to a Macintosh	86
Chapter 17 : Other settings	87
Foot switch	87
Adjusting the master level	88
Adjusting the contrast of LCD	88
Initialize to Factory Preset	88
Index	89
Specifications	91
MIDI Implementation Chart	93
Preset Programs List	95

## Chapter 1 : Introduction

Welcome to MUSIC PRODUCTION CENTER MPC1000. This operator's manual describes how to use an MPC1000. Please read this manual before you start using your MPC1000, and keep it in a safe place so that you can refer to it as needed. In this manual, the names of the knobs and keys on panels and plugs are located in square brackets, as follows: [name].

### The user interface

Below is a brief overview of the MPC1000.

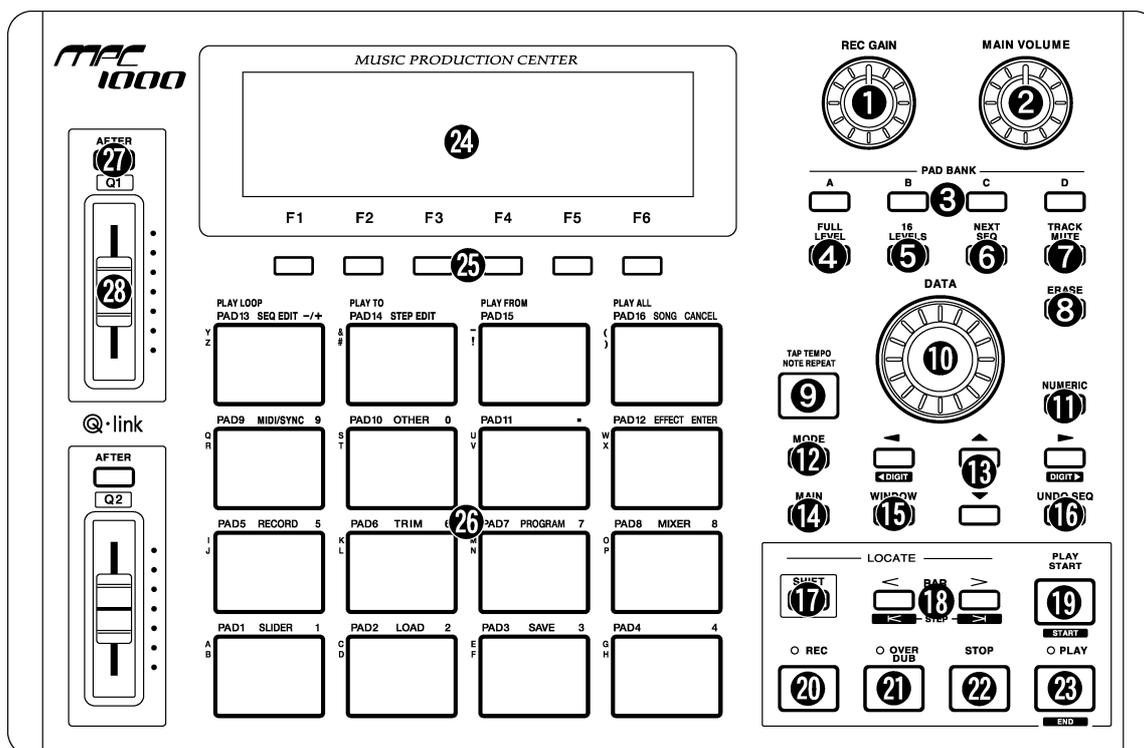

1. [REC GAIN] knob:

It controls the recording level of the incoming signal from [RECORD IN]. It cannot control the digital input level.

2. [MAIN VOLUME] knob:

It controls the levels of [STEREO OUT] and [PHONES] (headphone).

3. PAD BANK [A] through [D] keys:

Use these keys to switch between pad banks A, B, C, D. The LED above currently selected pad bank will be lit.

4. [FULL LEVEL] key:

When turned on (LED is lit), the MPC1000 always plays back at the maximum velocity (127).

5. [16 LEVELS] key:

When turned on, you can use 16 pads to change the selected pad's velocity and tune in 16 steps. For more information, see the "16 Level function"

section on page 40.

6. [NEXT SEQ] key:

This key calls up the NEXT SEQ page, where you can switch sequences with pads.

For more information, see the "Selecting the sequence to play with pad" section on page 42.

7. [TRACK MUTE] key:

This key calls up the TRACK MUTE page where you can mute a track with pads.

For more information, see the "Selecting track mute with pads" section on page 41.

8. [ERASE] key:

This key deletes event(s) within a track. You can delete events in real time on recording, or you can select the events to delete in the Erase window.

For more information, see the "Erase feature" section on page 12.

9. [TAP TEMPO/NOTE REPEAT] key:

You can set a tempo by tapping this key to the desired tempo (TAP TEMPO feature). Also, by holding a pad while pressing this key, you can repeat a note according to the setting in T.C. (NOTE REPEAT feature). For more information, see the "Tap Tempo feature" section on page 16, and the "Note Repeat feature" section on page 15.

10. [DATA] wheel:

This changes the value of the currently selected field.

11. [NUMERIC] key:

If you press this key in any field, allowing you to enter numbers, the LED will blink and you can enter numbers using pads.

12. [MODE] key:

When you press this key (LED will blink), you can switch modes with pads.

13. [CURSOR] key:

You can move the highlighted cursor up and down on the screen to select a field. In the value field, you can switch digits by pressing </> keys, holding [SHIFT] key.

14. [MAIN] key:

Pressing this key displays MAIN mode, regardless the current mode.

15. [WINDOW] key:

Pressing this key, when the LED is lit, displays a pop up window where you can make a detailed setting of the field.

16. [UNDO SEQ] key:

When you record a sequence, the LED of this key will light up. Pressing this key, when the LED is lit, resets the system to its status before recording, and LED will be turned off.

17. [SHIFT] key:

You can use various features with a combination of another key.

18. [BAR] key:

You can move sequences by bar. When you press </> keys holding the [SHIFT] key, you can step through sequences according to the value of the timing correct setting.

19. [PLAY START] key:

Plays a sequence from the start if LOOP:OFF.

If LOOP:ON plays sequence from loop start. Press [SHIFT] + [PLAY START] to go to start of sequence.

20. [REC] key:

Pressing the [PLAY START] key or the [PLAY] key holding this key starts recording to a sequence. Any event that is already recorded on the track will be replaced with new events.

You can punch in by pressing the [PLAY] + [REC] key while playing back a sequence, and punch out by pressing the [REC] key during recording.

For more information, see the "Punch In/Punch Out feature" section on page 15.

21. [OVER DUB] key:

This key is basically the same as the [REC] key, but it adds new events to the current events (over dub). You can punch in by pressing the [PLAY] + [OVER DUB] keys while playing back a sequence, and punch out by pressing the [OVER DUB] key while over dubbing.

22. [STOP] key:

This key stops the play back/recording of a sequence. If you hit this key 3 times quickly, you can stop all sound playing back.

23. [PLAY] key:

This key starts the play back of a sequence from its current position. Pressing the [SHIFT] + [PLAY] keys moves to the end of the sequence.

24. Display:

This is the LCD (Liquid Crystal Display) with backlight.

25. [F1] through [F6] keys:

These keys are used to call up pages to the bottom of the display, or to execute the feature assigned to the key. The available feature depends on the currently displayed screen.

26. [PAD1] through [PAD16]:

These are the drum pads to play the internal sampler. The pressure/strength you use to hit the pad controls the level of the sound. In TRACK MUTE mode, you can select a track and, in NEXT SEQ mode, you can select a sequence with a pad. You can also use these pads to select modes or to enter letters.

27. [AFTER] key:

When you turn on this key, the information of the Q-Link slider recorded on a track replaces the current value of the slider. For more information, see page 44.

28. [Q1] and [Q2] sliders

These sliders control the sound according to the setting in the SLIDER mode. For more information, see the "Q-Link slider" section on page 44.

## Front Panel



### 1. Compact flash slot:

This is a card slot for the compact flash memory card.

### 2. [FOOTSWITCH 1/2] plug:

This is where you connect a foot switch. You can use a foot switch to punch in/out. For more information, see the “Foot Switch” section on page 87.


There are two types of foot switches: normal open (the contact is open when it is not pressed), and normal closed (the contact is closed when it is not pressed).

If a foot switch has been connected to the MPC1000, when you turn on the power to the MPC1000, it automatically detects the type of foot switch connected. You can use either type of foot switch.

### 3. [PHONES] plug:


This is a stereo phone plug to connect a set of headphones. It sends out the same signal with the [STEREO OUT] plug.

## Rear Panel

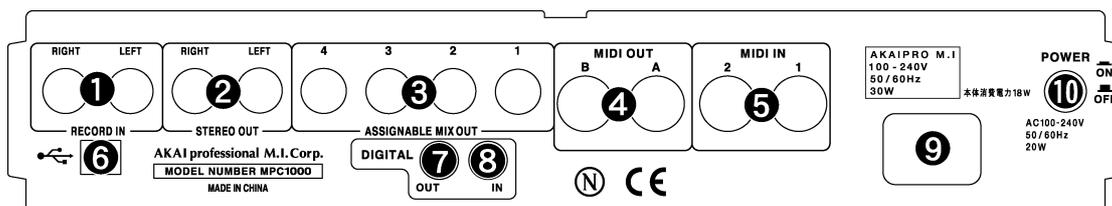

### 1. [RECORD IN L/R] plug:

This is an analog input for recording an analog signal. With a stereo phone plug, it can be used as balanced input.

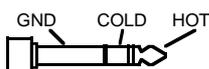

### 2. [STEREO OUT L/R] plug:

This is the main output

### 3. [ASSIGNABLE MIX OUT 1/2/3/4] plug:

These are outputs you can use to output each pad sound separately. With external mixers or effecters, you can perform advanced mixing.

### 4. [MIDI OUT A/B] plug:

This is the MIDI output. Each output can send independent MIDI signals.

### 5. [MIDI IN 1/2] plug:

This is the MIDI input. MIDI signals from MIDI IN 1 and 2 will be merged (mixed).

### 6. [USB] plug (slave):

You use this plug to connect the MPC1000 to your PC and transfer data. For more information, see the “Connecting the MPC1000 to your computer” section on page 85.

### 7. [DIGITAL OUT] plug:

This is the coaxial digital output. It sends out the same signal as the [STEREO OUT] plug.

### 8. [DIGITAL IN] plug:

This is the coaxial digital input. Use this input to connect digital outputs such as a CD player and a DAT.

### 9. Power plug:

Plug in the AC cable here.

### 10. [POWER] switch:


It switches the power on/off of the unit.

## Connecting MPC1000 to External Audio/MIDI device

The diagram below demonstrates how you can connect the MPC1000 to an external Audio/MIDI device.

Please note that this is one example, so, when you actually connect your devices, refer to the device's operator's manual.

*Note: When you connect devices, make sure the power is turned off.*

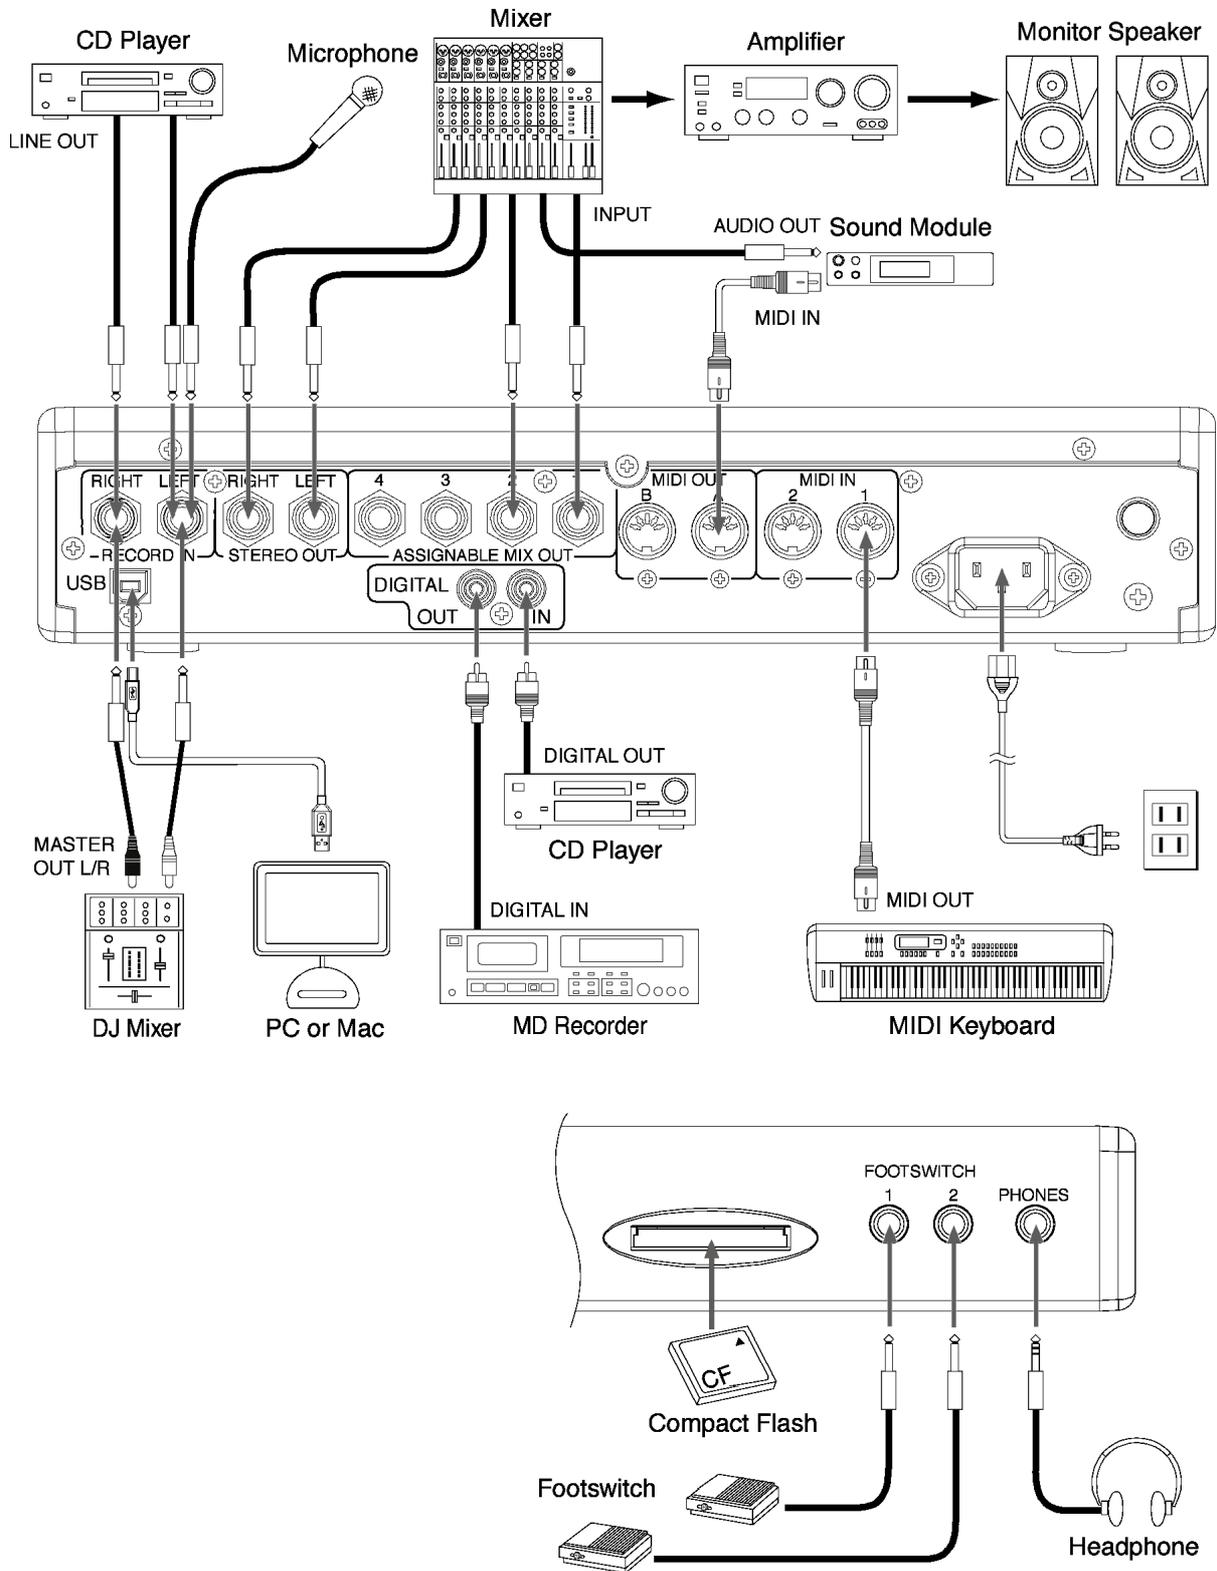


## Terminologies in MPC1000

These are the basic terminologies you need to know to operate the MPC1000:

### Sequence

Sequence is the most basic unit that you use when you create data with the MPC 1000. The data from the MIDI keyboard or pads will be recorded to each track in a sequence.


A sequence has 64 tracks, each of which can hold performance data. You can create up to 99 sequences. The length of a sequence can be set from 1 bar to 999 bars. You can create a whole song with one sequence; however you can also create a song with a combination of several short sequences with the Song feature.

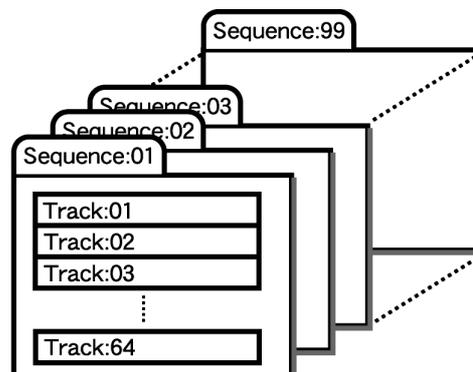

### Track

A sequence has 64 tracks. Each track can record separate performance data. For example, you can record instruments separately on each track (ex. Piano sound in track 1, Bass on Track 2, Organ on Track 3, etc...). You can record one track at a time; however, you can play back already-recorded tracks while recording a new track. Each track has the track mute setting (whether play back the contents of the track or not).


For example you record two Piano solos on Track 1 and Track4 and compare them using mute function. Performance data will be recorded on a track as a MIDI event. It does not record sounds directly on a track.

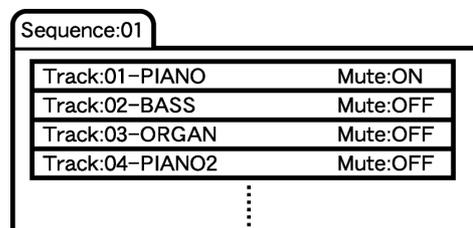

### Song

With the song feature, you can play back sequences in a certain order. You can set the order and number of sequences to play back freely. This is useful when you wish to play back several songs in a row, or when you are creating a song with a combination of several sequence data.

With the MPC1000, you can create up to 20 songs. When you arrange sequences into a song, assign them to each step in the song. A step is like a "container" of sequences. A song has 250 steps.

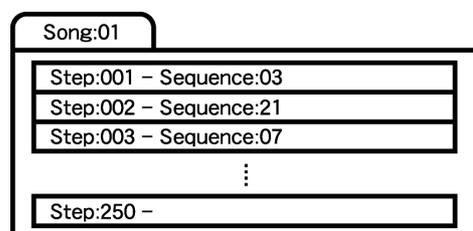

### Sample

With the MPC1000, sound data that is loaded into the unit is called a sample. A sample is loaded to the MPC1000 when you record in RECORD mode, load from a memory card, or transfer from PC through USB. You can change the start/end point of a sample or set loop in TRIM mode. To play back sounds, you need to assign samples to pads in PROGRAM mode. There are 2 kinds of samples: Stereo sample (2-channel sample with left and right channels), and Mono sample (1-channel sample).

### Drum Pad

The MPC1000 has 16 pads. You can play a sample that is assigned to a pad by hitting the pad. The MPC1000 has 4 pad banks that you can assign separate samples to. You can switch those 4 pad banks using the [PAD BANK] key, so you can use up to 64 pads. To assign samples to the pads, use the PROGRAM mode. The performance of the pad can be recorded to a track in a sequence.

## Program

Once you assign samples to the pads in the PROGRAM mode, you can play those samples with the pads. A set of 64 pads, each assigned samples, is called the Program. The program also has features that allow you to control the sound of samples, such as envelop and filter. You can make settings separately for each pad.

Program:01			
Pad bank	Pad	Sample	Level, Pan, Filter...
A	01	Side Stick	
A	02	Bass Drum	
A	03	Close Hihat	
		⋮	
D	16		

## RAM

RAM (Random Access Memory) is a space where you can load sounds or data temporarily. The MPC1000 comes with 16 MB (megabyte) of RAM that can record up to 136 seconds (monaural recording). The MB is a unit that represents the size of the memory. With the optional EXM128, you can increase your memory to 128MB. The data loaded in the RAM will be deleted when you turn off the MPC1000. If you wish to save your recordings, you need to save on a memory card, or transfer the data to PC through USB.

## Memory Card


The MPC1000 has a 32MB compact flash memory card. Compact Flash is a memory that is called "Flash Memory". You can save the data on the flash memory like RAM, but the data will remain after you turn off the unit. By saving the recordings in the MPC1000's RAM on the Memory card, you can save the data after you turn off the MPC1000. Please note that the MPC1000 cannot play back the data directly from a memory card. You have to load the data from a card to RAM to play back. There are several kinds of flash memory cards, but MPC1000 uses "compact flash" memory cards.

## Chapter 2 : Basic Operation

In this chapter, we will describe the basic operation of the MPC1000.

### MAIN Page

This is the main screen of the MPC1000, where you record and play back sequences. You can go back to this page at any time by pressing the [MAIN] key; for example, when you get lost while operating MPC1000 and want to go back to this page. You cannot go back to MAIN page by pressing [MAIN] key while processing (e.g. recording, loading/saving etc..).

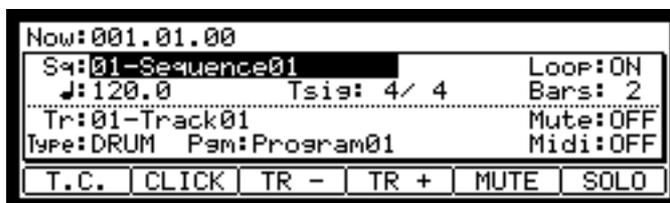

### Cursor, Cursor Keys, Field, DATA Wheel

The highlighted part on the screen is called the "Cursor" (On above screen, [01- Sequence01] on Main screen is highlighted). You can move the cursor on the screen using four cursor keys on the panel. Usually they move to a specific locations such as right to colon ( : ) . Those locations are called "field", where you can make various setting, or enter values. To change the settings of a field, select the field and turn the [DATA] wheel on the panel.

This operation, selecting a field by using a cursor key and changing its settings with the [DATA] wheel, is the most basic operation of MPC1000.

### Function Keys

Six keys (F1 to F6) aligned under the LCD (liquid crystal display) are function keys. Those keys correspond to each of the six functions that are displayed on the bottom of the LCD. Pressing each key activates its corresponding function. The function that each function key represents depends on the contents on the LCD.



When the LCD displays like this, pressing function keys starts some processing or displays windows.



When LCD displays like this, you can switch pages using function keys F1 to F4. The currently selected page is displayed with black letters on a white background. Pressing F5 and F6 keys does not make any changes.

Some pages display the page selection and processing function at the same time (see below).



In this case, use F1 and F2 for switching pages, and F6 for activating processing. You cannot use F3, F4 and F5.

In this book, function keys are described something like this: "[F1] (TRIM) key"- in the bracket, it shows the function displayed on LCD.

### WINDOW key

The MPC1000 has so many functions that they cannot be displayed in one screen. For efficiency, each page only displays the most frequently used functions. If you want to make an advanced setting, press the [WINDOW] key. This opens a window for the detailed setting of the selected field. This is not available for all fields. When you select a field in which you can use the [WINDOW] key, the LED of the key is lit.


## MODE key

With the MPC1000, each function (such as recording samples, editing samples, assigning samples to each pad, editing sequence data, loading from memory cards, etc...) has a separate screen. These screens are called "modes". For example, you will use the RECORD mode to record samples, and the TRIM mode to edit samples, the [MODE] key switches modes. By pressing the [MODE] key and hitting a pad, you can switch modes. The mode that a pad corresponds to is displayed above each pad.

## Setting names

The MPC1000 handles various types of data, from sound related data (such as samples and programs) to performance related data (such as sequences and tracks). These data are managed by names. In this section, you will learn how to name different data.

Select a field which you wish to name with the cursor and turn the DATA wheel. The Name windows will show up. In the Name windows, you can name the data.

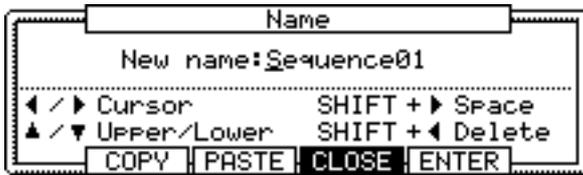

In this window, the cursor is displayed as an underscore instead of highlights.

You can enter the name, either by using pad or by using DATA wheel.

## Entering letters with DATA wheel

You can change letters selected with a cursor by turning DATA wheel in the Name window. Move the cursor with RIGHT/LEFT cursor key and enter letters. You can enter letters using both DATA wheel and pads.

## Entering letters with a pad

Two letters are assigned to each pad. By hitting a pad, the corresponding letter is entered.

Below, we will describe how to enter "Bass 01" instead of "Sequence 01".

**01. Press the UP cursor key to make the first letter capitalized.**

Pressing the UP cursor key allows you to enter a capitalized letter.

**02. Hit Pad 1 twice.**

Hitting Pad 1 once enters A, twice enters B. Each time you hit the pad, the letter switches between A and B.

**03. Press the RIGHT cursor key and move the cursor to the right.**

If you enter the next letter using a different pad, the cursor will move to the right automatically. However, when you enter the letters which are assigned to the same pad, you need to press the RIGHT cursor key to move the cursor manually. In this example, A and B are assigned to the same pad. So, you need to move the cursor manually.

**04. The next letter is a lower-case letter ("a"), so press the DOWN cursor key.**

Pressing the DOWN cursor key allows you to enter lower case letters.

**05. Hit Pad 1 once.**

The lower case letter "a" is entered.

**06. Hit Pad 10 once.**

The cursor will move to the right automatically and a lower-case letter "s" is entered.

**07. Press the RIGHT cursor key to move the cursor to the right and hit the pad 10 once.**

**08. Press the RIGHT cursor key to move the cursor to the right and press RIGHT cursor key holding the [SHIFT] key.**

The [SHIFT] + RIGHT cursor key inserts space.

- 
- 09. Press the right cursor key to move the cursor one step to the right, and select “0” by turning the DATA wheel.**  
To enter numeric values, numerically, use the DATA wheel.
  - 10. Press the right cursor key to move the cursor one step to the right, and select “1” by turning the DATA wheel.**
  - 11. Press the RIGHT cursor key to move the cursor to the right, and press the LEFT cursor key four times holding the [SHIFT] key.**  
The [SHIFT] + LEFT cursor keys delete selected letters.  
Now “Bass 01” is entered instead of “Sequence 01”.
  - 12. Press [F5] (ENTER) to confirm the entry and close the window.**  
Pressing [F4] (CANCEL) cancels the entry and closes the window. In this case, the name does not change.

## Other useful functions in the Name window

### Copy and Paste function

With the copy and paste function, you can copy the letters in the “New name” field and paste to set a name to another data. This is useful when you wish to create similar names for different data.

If you press [F2] (COPY ) key when Name window is open, the letters in the “New name” field will be copied (temporarily saved). When you press [F3] (PASTE) in the Name window , those copied letters can be pasted to the “New name” field.

## *Entering numbers with NUMERIC key*

In the value fields such as the sample’s TRIM page, you can enter numbers directly by using the [NUMERIC] key.

- 01. Press the [NUMERIC] key on an available field.**  
The key’s LED will blink and allows you to enter numbers using the pad.
- 02. Enter numbers by hitting the corresponding pads.**  
The number indicated on the upper right corner of the pad is entered. Pad 1 through 9 corresponds number 1 to 9 and Pad 10 corresponds to number 0.  
When you enter the wrong number, hit Pad 16. The number is canceled and you can enter the correct number.
- 03. Hit Pad 12.**  
That confirms your entry.

When you set the Time field, you can change the unit (digit) by hitting Pad 11.

In fields where you can set +/-, you can switch + and – by hitting Pad 13.


## Chapter 3 : Sequencer feature

The MPC1000 has a sequencer feature that allows you to record/playback your performance. With the sequencer feature, you can record the performance you created with the pads. And by playing back the recorded data, you can reproduce your performance. The actual performance will be recorded on a track within a sequence. For more information on sequences and tracks, see the “Terminologies in MPC1000” section on page 5.

The performance data you made by hitting the pads will be recorded on a track as a pad event. A track can contain other events, such as Q- Link slider information, tempo change etc... When you are using the MPC1000 with an external MIDI device, you can record the data from the external keyboard as MIDI events.

*Note: Please note that Sequencer feature records only performance data (when and which pad you hit, etc...). It does not record the actual sound.*

### MAIN page

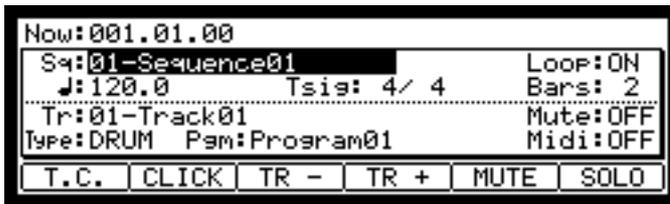

This is the page where you record/playback sequences. This is the MPC1000's main operation mode and, unlike the other pages, you can display this page just pressing the [MAIN] key at any time.

### Now field

The Now field, which is located in the upper left corner of the screen, displays the current time of the sequence. It shows the bar, beat, tick (1 beat = 96 ticks), from left to right. For example, “002.03.00” means the third beat in the second bar. A tick is a unit that divides a beat (1/4 note) into 96 parts. For example, 1 beat equals one 1/4 note (96ticks), so one 1/8 note equals the half of 1 beat, which is 48 ticks.

Below is the relationship between note and tick:

1/4 note = 96 ticks	1/8 note = 48 ticks	1/16 note = 24 ticks
1/4 triplets = 64 ticks	1/8 triplets = 32 ticks	1/16 triplets = 16 ticks

When you record/playback a sequence, the display updates constantly to show the current position of the sequence. You can move the cursor to the Now field to set the time manually.

### Sequence / Sq field

A Sequence is the most basic unit when you create data with the MPC1000. Performance data from the MIDI keyboard or pad can be recorded on each track within a sequence. You can select a sequence in the Sq field. An unused sequence is indicated as (unused). All the settings in the MAIN page can be set separately for each sequence.

### Track / Tr field

A sequence has 64 tracks where you can record various performance data separately. You can, for example, record Piano sounds on track 1, Bass on track 2, Organ on track 3 etc... In the Tr field, you can select a track within the sequence selected in the Sq field. An unused track is indicated as (unused). You can set Mute, Midi, Type, and Pgm fields separately for each track.

## Recording the performance

In this section, you will learn how to record the performance you made with pads to tracks in a sequence.

*Note: To record your performance data to a sequence, you need to load a program to the MPC1000 that you play using the pads. By default, the MPC1000 automatically loads a preset program and demo sequence when you switch it on. Here, we assume that you have already loaded a program to the MPC1000. If you have not done so, do this now by loading a program from a memory card, or by recording a sample and assigning it to a pad, etc... For more information on loading a program, see the “Loading a file” section on page 79. For more information on recording a sample, see the “recording a sample” section on page 48.*

**01. Press the [MAIN] key.**

The [MAIN] key displays the MAIN page where you record your sequences.

**02. In the Sq field, select a sequence to which you wish to record your performance.**

You can select any sequence for recording a performance; but here, select a sequence that says "unused". "Unused" indicates that the sequence is not used.

**03. In the Tr field, select a track on which you wish to record your performance.**

Your performance will be recorded on the track you select in the sequence. You can select any track, but here select "Tr:01".

**04. In the Pgm field, select a program you wish to play.**

You can select a program in the RAM by turning the DATA wheel.

**05. Hit pads to check the sounds that are assigned to the pads.**

You can play back the program selected in the Pgm field.

**06. Press the [PLAY START] key while holding the [REC] key.**

The recording will start after 4 counts.

**07. Play the pads to record your performance.**

By default, the sequence is set to 2 bars. After recording for 2 bars, the MPC1000 will start playing back the recorded performance. You can add to your original performance by continuing to play the pads when the track loops. The MPC1000 automatically switches to "over dub" recording and adds to the performance.

**08. You can stop overdub recording by pressing [STOP] key.****09. Press the [PLAY] key to play your recorded performance.****10. If you do not like the performance, you can start a new recording by pressing the [REC]+ [PLAY START] keys.**

This cancels the currently recorded performance data and starts a new recording.

**11. To add to the already recorded performance, press the [PLAY START] key while holding the [OVER DUB] key.**

It plays back the currently recorded performance and you can add the new performance by hitting pads.

*Tips: If you select another sequence in the Sq field, you can record a new performance separately. By playing back those sequences, you can create one whole song.*

*Tips: By default, the MPC1000 is set to load a demo sequence automatically when you turn it on. If you wish to remove the demo sequence and start from the scratch, see "Deleting all sequences" section on page 19.*

## Playing back a sequence

You can play back a recorded sequence by pressing the [PLAY START] key. The sequence will be played repeatedly until you press the [STOP] key. If you press the [PLAY] key again, the MPC1000 will resume the playback from where the previous play back was stopped.

## Repeat play back of a sequence

You can play back several sequences in a series by using the Next Sequence feature. The Next Sequence feature allows you to select the next sequence to play, during playing back a sequence, so that you can play the sequences in a series.

**01. In the Sq field in the MAIN page, select the sequence you wish to play first.****02. Press the [PLAY START] key to start the play back of the sequence.****03. Select the Sq field during play back, and select the next sequence to play.**

Selecting a sequence in the Sq field during the playback brings up the Next field, where you can select the next sequence.

After playing back the currently selected sequence to the end, the MPC1000 will start playing back the sequence you select in the Next field. By repeating this step, you can play back several sequences continuously.

*Tips: With the [NEXT SEQ] key, you can select the next sequence with a pad. For more information, see the "Selecting a sequence with pads" section on page 42.*

*Tips: In the SONG mode, you can set the order to play sequences. For more information, see the "SONG mode" section on page 36.*

## Other useful features for recording sequences

### Undo Sequence feature

When overdubbing sequences, you can cancel the last recording and reset to the setting before the recording.

- 01. During overdubbing, press the [STOP] key to stop the overdub and press the [UNDO SEQ] key.**

The LED of the [UNDO SEQ] key will be off and only the last added recording will be deleted. To restore the recording, press the [UNDO SEQ] key again to light the LED.

*Note: You can use the [UNDO SEQ] key only for the last recording.*

### Erase feature

You can delete a certain pad performance by using the [ERASE] key. There are two ways to use this feature: by deleting real-time during overdub, and by selecting a pad and part to delete in the ERASE window when overdub is stopped.

#### Deleting in real time

- 01. Press the [PLAY START] key while holding the [OVER DUB] key to start overdub.**
- 02. Hold the pad you wish to delete while holding the [ERASE] key.**

From the performance data being recorded, only the section from where you press the [ERASE] key and pad and you release them will be deleted. By pressing the pad at the right timing, you can delete the performance data at a certain timing in the phrase.

#### Deleting in the Erase window

Performance data will be recorded in a track as an event. In the Erase window, you can select specific events in a track to delete.

- 01. Press the [STOP] key to stop a sequence.**
- 02. Press the [ERASE] key.**


The Erase window will open up.



The Tr field displays the number and the name of the selected track. To delete all the events of the track, select "Tr:00- ALL TRACKS" by turning the DATA wheel to the left.

- 03. In the Time field, specify the area to delete events.**

You will select the start and end point of the area in the Time field. For example, to delete only the event in the first bar from 2-bar sequence, set "001.01.00 - 002.01.00". In this case, the event at 002.01.00 point will not be deleted.

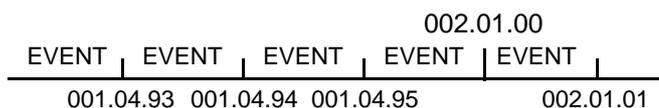

If you set the end point "002.01.00" like this, the area right before the end point will be included in the area.

#### 04. In the Erase field, select NOTE ONLY.

Note field will open up.

#### 05. Select the Note field.

If you wish to delete all events, leave it as ALL.. To delete only events on a specific pad, hit the pad to delete. You can select several pads. If you hit a different pad by mistake, you can cancel the selection by hitting the pad again. To restart the pad selection, turn the DATA wheel to the left. The value in the Note field will be reset to ALL so that you can select pad from the beginning.

#### 06. Press [F5] (DO IT) key.

The operation starts and the events of the selected pad within the selected area will be deleted.

*Tips: When you delete events with the Erase field set to ALL EVENT, the MPC1000 will delete other events in the selected area as well as pad events. When you delete events with the Erase field set to EXCEPT Note, the MPC1000 will delete the other events other than the pad events in the selected area.*

### Timing correct feature


When recording a pad performance, it is hard to play the pads to the tempo. By using the timing correct feature, you can correct the timing of the pad event you recorded by hitting pads. There are two ways to use this feature: by correcting the timing in real time during the recording, and by correcting the recorded event after the recording.

#### Real time timing correction

You can correct the timing real-time during the recording.

#### 01. When a sequence is stop, press [F1] (T.C.) key in the MAIN page.

The Timing Correct window will open up.

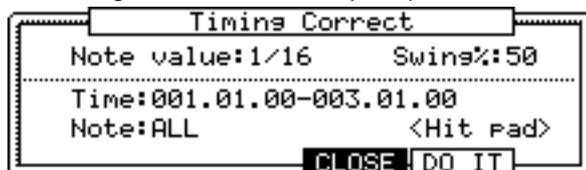

#### 02. In the Note value field, set the value for timing correction.

For example, if you set "1/16", each position of the performance data will be moved to the nearest 1/16 note. You can set the Note values as follows.

1/8 = 1/8 note, 1/8(3) = 1/8 note triplets, 1/16 = 1/16 note, 1/16(3) = 1/16 note triplets, 1/32 = 1/32 note, 1/32(3) = 1/32 note triplets, OFF = NO timing correction.

#### Swing feature

You can set the swing value in the Swing% field. With the swing feature, the even numbered events set in the Note value field will be off the rhythm according to the value in the Swing% field. With this feature you can create the shuffle groove.

#### 03. Press [F4] (CLOSE) key.

It closes the window.

*Note: If you press [F5] (DO IT) key, the MPC1000 will correct the timing of the recorded data.*

*Tips: If you press [F1] (T.C.) key during recording/playback, a small Timing Correct window will be displayed while you are holding the key. You can use the Note value field of this window to change the value for timing correction. It makes it easier to change the value during the recording.*

## Sequence feature

---

### Correcting the timing of recorded events

You can correct the timing of recorded events.

**01. When a sequence is stop, press [F1] (T.C.) key in the MAIN page.**

Timing Correct window will open up.

**02. In the Note value field, set the value for timing correction.**

For example, if you set "1/16", each position of the performance data will be gridded to the nearest 1/16 note.

You can set the Note values as follows:

1/8 = 1/8 note, 1/8(3) = 1/8 note triplets, 1/16 = 1/16 note, 1/16(3) = 1/16 note triplets, 1/32 = 1/32 note, 1/32(3) = 1/32 note triplets, OFF = NO timing correction.

### Swing feature

You can set the swing value in the Swing% field. With the swing feature, the even numbered events set in the Note value field will be off the rhythm according to the value in the Swing% field. With this feature you can create the shuffle groove.

**03. In the Time field, select the area to correct the timing.**

**04. In the Note field, hit the pad you wish to correct the timing.**

To correct the timing of all events, leave it as ALL. To correct the timing of only events on a specific pad, hit the pad. You can select several pads. If you hit a different pad by mistake, you can cancel the selection by hitting the pad again. To restart the pad selection, turn the DATA wheel to the left. The value in the Note field will be reset to ALL so that you can select pad from the beginning.

**05. Press [F5] (DO IT) key.**


The timing correction will start and the window will be close.

### Click/Metronome feature

In this section, you will learn about various settings for the metronome (click sound).

**01. When a sequence is in stop mode, Press [F2] (CLICK) key in the MAIN page.**

Click/Metronome window will open up.

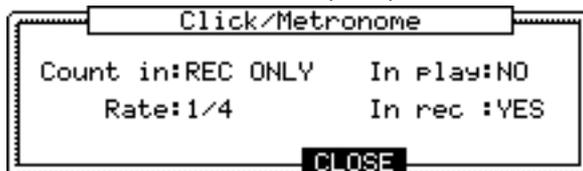

### Count in field

You can set how soon the recording/playback should start after the [PLAY] or the [PLAY START] key is pressed; right after the key is pressed, or after a 1-bar count.

- |          |   |
|----------|---|
| OFF      | Recording/playback will start right after the key is pressed without a count.             |
| REC ONLY | There will be a count only for recording/overdub. Playback will be start without a count. |
| REC+PLAY | There will be a count for both recording and playback.                                    |

### Rate field

You can select the rhythm for the metronome sound. The metronome will be played with 1/4 note if you set "1/4", and 1/8 note if you set "1/8".

### In play field

You can select this if you want the metronome sound during playback. If you select YES, you will hear the metronome sound during playback.

### In rec field

You can select this if you want the metronome sound during recording/overdub. If you select NO, you will not hear the metronome sound during the recording/overdub.

### Note repeat feature

If you press a pad while holding the [NOTE REPEAT] key, the pad sound will be played repeatedly according to the value of the timing correct until you release the pad. You can also control its velocity by changing the strength used to press the pad. With the Note repeat feature, you can record a difficult phrase to record in real time, such as 16 beat hi hat, snare roll, etc...

**01. Press the [NOTE REPEAT] key during recording/playback.**

**02. While holding the [NOTE REPEAT] key, press the pad to play repeatedly.**

The pad's sound will be played repeatedly according to the value of the timing correct until you release the pad. You can also control its velocity by changing the strength to press the pad.

### Punch In/Punch Out feature

You can start the recording in the middle of the sequence during the playback ("Punch In").

You can also stop the recording in the middle of the sequence and resume the playback ("Punch Out"). This is useful when you re-record the part of the recorded sequence.

#### Punch In

Press the [PLAY], or the [PLAY START] key to play back a sequence. At the point where you wish to start the recording, press the [REC] key while holding the [PLAY] key. The MPC1000 will start the recording.

If you press the [OVER DUB] key and the [PLAY] key instead, the MPC1000 will start the over dubbing.

#### Punch Out

If you press the [REC], or the [OVER DUB] key during the recording/overdubbing, the MPC1000 will stop the recording/overdubbing and resume the playback.

## *Detailed information on sequence feature*

### Setting the length of a sequence

By default, a sequence is set to a 2-bar length, but you can set this length between 1 to 999 bars.

**01. In the MAIN page, select the Bars field.**

The Bar field displays the current value.

**02. Turn the DATA wheel, or press [WINDOW] key.**

The Change Bars window will open up.

**03. In the New bars field, select the new number of bars.**

If you set a larger number than the current value, empty bars will be added at the end of the sequence.

If you set a smaller number, the bars in the end of the sequence will be deleted.

**04. Press [F5] (DO IT) key**

That applies the new setting and closes the window.

### Setting the time signature of the sequence


By default, the time of a sequence is set to the quadruple time (4/4), but you can change the setting.

**01. In the MAIN page, select Tsig field.**

The Tsig field displays the current value.

**02. Turn the DATA wheel or press the [WINDOW] key.**

The Change Tsig window will open up.

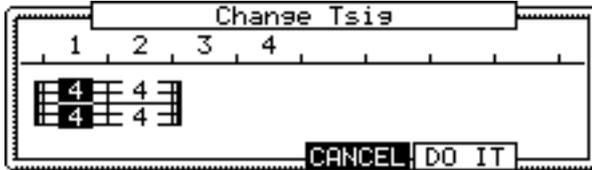

The upper part of the screen indicates the number of bars. The currently selected time is displayed below it.

**03. Select the desired time signature, and set to this.**

Select the bar to change the time with the right/left cursor keys and change the time with DATA wheel. ■ will be displayed under the time display at the bar to which you changed the setting.

**04. Press [F5] (DO IT) key**

That changes the time signature of the bars and closes the window.

### Setting tempo

You can set the tempo in the  $\downarrow$  (Tempo) field of the MAIN page.

You can set the tempo for a sequence between 30.0 and 300.0. You can change the tempo after you create the sequence. You can also change the tempo in the sequence by inserting the tempo change event in the STEP EDIT mode.

#### Tap tempo feature

You can set the tempo using the [TAP TEMPO] key as well as in the  $\downarrow$  (Tempo) field. Tap the [TAP TEMPO] key to the desired tempo. The MPC1000 will calculate the tempo starting with the timing that you tap with the [TAP TEMPO] key, and set the sequence's tempo to that. The MPC1000 takes the average interval of 4 taps of the [TAP TEMPO] key. You can set the number of taps used to calculate the tempo in the Tap average field in the MISC. page in OTHER mode.

#### Changing tempo of all sequences at one time

You can change the tempo of all sequences to the same tempo at one time. You can change the tempo of each sequence at any time after you create the sequence, but it is useful to change all the sequence at one time when you are creating one song with several sequences.

**01. In the MAIN page, select  $\downarrow$  (Tempo) field and press the [WINDOW] key.**

The Tempo Change window will open.

**02. Press [F5] (FIX) key.**

The Fix Tempo window will open.

**03. In the Fix tempo field, set the tempo.**

**04. Press [F3] (DO IT) key.**

It changes the tempo of all of the sequences to the value set in the Fix tempo field.



### Changing the default settings

Some settings for a sequence (such as number of the bars, time, tempo, loop) are automatically set to the default setting when you create a new sequence. You can change the default settings for your convenience.

**01. In the MAIN page, set the Loop field, ♩ field, Tsig field, Bars field as you like.**

**02. Select the Sq field and press the [WINDOW] key.**

The Sequence window will open.

**03. Press [F3] (USER) key.**

The User Default window will open.

**04. Press [F5] (DO IT) key.**

The values currently set in the Loop, ♩, Tsig, Bars field in the MAIN page will be saved as default setting.

The Next time you create a new sequence, these values are applied.

### Changing the sequence name

**01. In the Sq field in the MAIN page, select a sequence that you wish to change the name of.**

**02. Press the [WINDOW] key.**

The Sequence windows will open.

**03. In the Sequence name field, enter the new name.**

For more information for setting the name, see the "Setting the name" section on Page 8.

**04. Press [F4] (CLOSE) key.**

It closes the window and goes back to MAIN page.

### Changing the default name for a sequence

Usually, when you create a new sequence, the name will be set to the default name as "Sequence## (## will be the sequence number)" automatically. You can change the default name.

**01. In the MAIN page, select the Sq field.**

**02. Press the [WINDOW] key.**

The Sequence window will open.

**03. In the Default name field, enter the new name.**

For more information for setting the name, see the "Setting the name" section on Page 8.

**04. Press [F4] (CLOSE) key.**

This closes the window and goes back to the MAIN page.

### Copying a sequence

You can copy a sequence to another sequence.

**01. In the Sq field in MAIN mode, select a sequence to copy.**

**02. Press the [WINDOW] key.**

The Sequence window will open.

**03. Press [F5] (COPY) key.**

The Copy Sequence window will open.

**04. In the Sq field (below), select a sequence to copy to.**

**05. Press [F3] (DO IT) key.**

Copying the sequence will start. To cancel the operation, press the [F4] (CANCEL) key.

## Deleting a sequence

You can remove a sequence from the memory of the MPC1000.

**01. In the S<sub>q</sub> field in MAIN mode, select a sequence to delete.**

**02. Press the [WINDOW] key.**

The Sequence window will open.

**03. Press [F2] (DELETE) key.**

The Delete Sequence window will open.

**04. Press [F5] (DO IT) key.**

That deletes the selected sequence and changes its name to “unused”.

## Deleting all sequences

You can delete all the sequence data in the memory at one time.

**01. In the MAIN mode, select the S<sub>q</sub> field and press the [WINDOW] key.**

The Sequence window will open.

**02. Press [F2] (DELETE) key.**

The Delete Sequence window will open.

**03. Press [F3] (ALL SQ) key.**

The Delete ALL Sequences window will open.

**04. Press [F5] (DO IT) key.**

That deletes all the sequences and changes their names to “unused”.

## Handling the duration (the length of a note) at the loop boundary

When you are recording a sequence in the loop mode, you can specify how the MPC1000 should operate when it reaches the boundary of the loop (it reaches the end of the sequence and jumps back to the beginning) while you are holding a pad.

**01. Press the [MODE] key and then the [PAD 10] (OTHER) key.**

That switches to the OTHER mode.

**02. Press [F2] (MISC.) key.**

The MISC. page will be displayed.

**03. Select the Truncate duration field and select the option how to handle the duration between loops.**

TO SEQUENCE LENGTH      The MPC1000 records as played up to sequence length.

TO SEQUENCE END      The MPC1000 cuts the note at the end of the sequence even if you hit the pad.  
You cannot record beyond the loop.

AS PLAYED      The MPC1000 records your performance as it is played.

## Track features

### Setting the track type

You can set the track type in the Type field in the MAIN page.

There are two types of track: DRUM and MIDI. They are called DRUM track and MIDI track respectively.

Below are the differences of each track type.

- |      |   |
|------|---|
| DRUM | Select this track type when you play the MPC1000's internal sampler by hitting pads. The DRUM track data will be managed per pad.   |
| MIDI | Select this track type when you use the MPC1000 as a MIDI sequencer with external MIDI devices (MIDI keyboard etc...). The MIDI track data is managed per MIDI note event. For more information, see the "MIDI sequencer feature" section on Page 22. |

### Selecting a program

You can select the program to play for the track. You can select a program loaded in the memory by turning the DATA wheel in the Pgm field in the MAIN page. If you set it to OFF, the MPC1000 does not play internal programs. When you wish to use the MPC1000 to play the external sound module, set this field to OFF.

### Track mute feature

You can set the track mute in the Mute field in the MAIN page.

You can set the mute for each track separately. For example, let's assume you have recorded a Piano solo on track 1 and another piano solo on track 2. By setting either track to mute, you can compare these two piano solos and choose the better one. If you set the mute ON for a track, the MPC1000 won't play back that track.

*Tips: With the [TRACK MUTE] key, you can set the track mute with a pad. For more information, see the "Setting the track mute with pads" section on page 41.*

### Setting the MIDI Output channel

You can set the MIDI out put channel in the MIDI field in the MAIN page.

You can set the MIDI output channel for a track. You need to set the output channel when you use the MPC1000 to play an external MIDI sound module. You do not have to set this when you are using the internal sampler.

The MPC1000 has two MIDI outputs. Channels1A through 16A will be sent out via MIDI OUT A, and MIDI channels 1B through 16B will be sent out via MIDI OUT B.

### Changing a track name

**01. In the Tr field in the MAIN page, select a track you wish to change the name on.**

**02. Press the [WINDOW] key.**

The Track window will open.

**03. In the Track name field, enter the new name.**

For more information for setting the name, see the "Setting the name" section on Page 8.

**04. Press [F4] (CLOSE) key.**

This closes the window and goes back to the MAIN page.

---

## Changing the default name for a track

Usually, when you create a new track, the name will be automatically set as default "Track##" (## indicates track number). You can change the default track name.

**01. In the MAIN page, select the Tr field.**

**02. Press the [WINDOW] key.**

The Track window will open.

**03. In the Default name field, enter the new name.**

For more information about setting the name, see the "Setting the name" section on Page 8.

**04. Press [F4] (CLOSE) key.**

This closes the window and goes back to the MAIN page.

## Copying a track

You can copy a track to another track.

**01. In the Tr field of the MAIN mode, select a track to copy.**

**02. Press the [WINDOW] key.**

The Track window will open.

**03. Press [F5] (COPY) key.**

The Copy Track window will open.

**04. In the Tr field (below), select a track to copy to.**

**05. Press [F3] (DO IT) key.**

Copying the sequence will start. To cancel the operation, press [F4] (CANCEL) key.

## Deleting a track

You can remove a track from the memory of the MPC1000.

**1. In the Tr field in MAIN mode, select a track to delete.**

**2. Press the [WINDOW] key.**

The Track window will open.

**3. Press [F2] (DELETE) key.**

The Delete Track window will open.

**4. Press [F5] (DO IT) key.**

That deletes the selected track and changes its name to "unused".

## Deleting all tracks

You can delete all the track data in the memory at one time.

**01. In the MAIN mode, select the Tr field and press the [WINDOW] key.**

The Track window will open.

**02. Press [F2] (DELETE) key.**

The Delete Track window will open.

**03. Press [F3] (ALL TR) key.**

The Delete ALL Tracks window will open.

**04. Press [F5] (DO IT) key.**

That deletes all the tracks and changes their names to "unused".

## Selecting a track with function keys

You can select a track in the Tr field in the MAIN page. You can also select a track using [ F3] (TR -) key and [F4] (TR +) keys. With [F3] (TR -) and [ F4] (TR +) keys, you can select a track without moving a cursor to the Tr field.

## Solo function of a track

When you are working on a sequence that has many tracks, it is useful to use the solo function to play back only the selected track. For example, when you are recording various instruments on several tracks, you can check the contents of each track with this feature.

**01. In the Tr field in the MAIN page, select a track you wish to play back.**

**02. Press [F6] (SOLO) key and start recording/playback of the sequence.**

The [F6] (SOLO) key will be highlighted and the MPC1000 plays back only the selected track and mutes all the other tracks.

**03. To cancel the solo, press [F6] (SOLO) key again.**

The MPC1000 plays back all tracks.

## *MIDI sequencer features*

When you are playing the internal sound module with the pads, you can start recording just by selecting the desired program in the Pgm field in the MAIN page. However, the MPC1000 can be used as a MIDI sequencer.

By connecting an external MIDI keyboard to it, you can record the data from the keyboard and control the external sound module.

### About MIDI...

MIDI is a standard for transferring the performance data between electronic instruments regardless of the manufacturer. Devices are connected using a special cable called MIDI cable. For example, when you connect the keyboard's MIDI OUT to MIDI IN of the MIDI sound module, the performance data you made with your keyboard will be sent to the MIDI sound module, which plays the sound. MIDI can transfer only the performance data, not the actual sound. To transfer as much data as possible through one MIDI cable, there are MIDI channels. By using a MIDI channel, you can transfer different performance data to each channel separately. You can transfer the performance data to up to 16 channels. The MIDI channel is very important when you handle MIDI.

You must set the same MIDI channels for both the keyboard and the sound module even if you play the sound from the keyboard. For example, if the keyboard's output channel is set to 1, the sound module's input channel should also be 1. Some sound modules can receive several channels. In that case, you can assign a separate instrument (Piano, Bass, Strings etc...) to each separate channel.

### About MIDI sequencer

A MIDI sequencer is a device that can record and play back MIDI data. The MPC1000 can be used as a MIDI sequencer.

When you connect an external MIDI keyboard to use the MPC1000 as a MIDI sequencer, connect the keyboard's MIDI OUT to MPC1000's MIDI IN, and the MPC1000's MIDI OUT to the external MIDI sound module's MIDI IN. Thus, you can record the keyboard performance to the MPC1000 and play sounds from the MIDI sound module.

---

In this section, you will learn how to record the performance data from the external MIDI keyboard to the MPC1000 and play sounds from the external sound module.

**01. Connect the external MIDI devices as described in the “Connecting MPC1000 to External Audio/MIDI device” section on page 4.**

Connect the MIDI OUT of the keyboard to the MPC1000's MIDI IN, and the MPC1000's MIDI OUT to MIDI IN of the external sound module.

*Note: You may still want to connect the MPC1000's stereo out to a mixer so that you can hear a metronome sound even when you use the MPC1000 as a MIDI sequencer.*

**02. In the Type field, select MIDI.**

**03. In the Pgm field, select OFF.**

You can select a program and play the external MIDI device while playing an internal program, but here, set this field to OFF to play the external MIDI module.

**04. In the Midi field, select a MIDI channel.**

Here, you set the MIDI channel to send the MIDI data on. Set the same channel as the one on of the sound module.

*Tips: By default the MPC1000's input MIDI channel is set to receive all MIDI channels, so you don't have to set the channel to the keyboard's MIDI channel.*

**05. Play the keyboard to make sure the sound module works.**

If you don't hear any sound, check the connection and make sure you have the correct settings for the keyboard and the sound module.

**06. Press the [PLAY START] key while holding the [REC] key.**

The recording starts after 4 counts.

**07. Play the keyboard in time with the click sound.**

By default, sequence is set to 2 bars. After recording for 2 bars, the MPC1000 will start playing back the recorded performance. If you make another performance with pads, you can add the performance to the currently recorded one. This is called “over dub”.

**08. You can stop over dub by pressing the [STOP] key.**

**09. Press the [PLAY] key to play the recorded performance.**

**10. If you don't like the performance, you can start the new recording by pressing the [REC] + [PLAY START] key.**

It cancels the currently recorded performance data and starts the new recording.

**11. To add the recording to the already recorded data, press the [PLAY START] key while holding [OVER DUB] key.**

This plays back the currently recorded performance and you can add the new performance by hitting pads.

*Tips: If you select another sequence in the Sq field, you can record a new performance separately. By playing back those sequences, you can create one whole song.*

*Tips: You can use the other useful features for sequence recording (see page 12) like when you record the performance data from pads.*

*Tips: for more information on how to connect a MIDI keyboard with sound module to the MPC1000, see the “connecting MPC1000 to a MIDI keyboard with sound module” section on page 46.*

## Handling the sustain pedal

In this section, you will learn how to set the option to handle the sustain pedal information when you are connecting the MPC1000 to the external MIDI keyboard to use it as a MIDI sequencer.

Sustain pedal data is a MIDI event used to make the sound continue after a key on the keyboard is released. Usually a foot switch controls this data. The keyboard sends out Sustain pedal data as separate event from note event, so normally the sequencer recognize this data as separate data. However, when you are overdubbing on a short sequence loop, it might be better to convert the sustain pedal data to the recorded note's duration (the length of the note).. For example, if you record the sustain pedal data as it is, once you press the sustain pedal during the loop, the sustain will be applied to all the data after that. If you convert the sustain pedal data to a note's duration, the movement of the sustain pedal will not affect the other notes.

Thus, the MPC1000 is set to convert the sustain pedal data to a note's duration by default, but you can change the setting to record the data as the sustain pedal data.

**01. Press the [MODE] key and then the [PAD 10] (OTHER) key.**

It switches to OTHER mode.

**02. Press [F2] (MISC.) key.**

The MISC. page will be displayed.

**03. In the Sustain pedal to duration field, select the option how to handle sustain pedal.**

YES     The MPC1000 converts the sustain pedal information into duration.

NO      The MPC1000 records the sustain pedal information as it is.

## Chapter 4 : Editing sequences

There are two ways to edit sequences. You can select a region and edit all events at one time, or you can edit each event in detail. In this section, you will learn about the SEQ EDIT mode, where you can select a region to edit your event(s).

### Selecting a region within a track to edit

You can edit the events within a region that you set in the track. This is done in the EVENTS page of the SEQ EDIT mode, which can be accessed by pressing the [MODE] key and then the [PAD 13].




### Selecting a region for the editing

In the EVENTS page, there are 3 different editing options in the Edit field: COPY, MOVE and TRANSPOSE. The procedure to select the editing region is the same for all three options. Let us begin with the selection of the editing region.

#### Setting the time

##### 01. Select the Time field in the EVENTS page of the SEQ EDIT mode.

In the Time field, you can set the start and end points of the editing region. For example, to edit the first bar of a 2-bar sequence, set this field to "001.01.00 - 002.01.00". In this case, the event at the "002.01.00" point will not be edited.

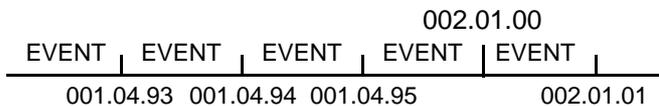

If you set the end point "002.01.00", like in this picture, the area right before this point will be included in the area.

#### Setting the pad/note number

##### 01. Select the Notes field in the EVENTS page of the SEQ EDIT mode.


The display of the Notes field depends on the type of the track that you have selected.

#### When DRUM track is selected:

In default, the field is set to ALL, which means the MPC1000 will edit all the pads. If you wish to edit only a specific pad, position the cursor in the Notes field and hit the desired pad. The pad number will be displayed in the Notes field. You can select several pads. If you hit a different pad by mistake, you can cancel the selection by hitting the pad again. To restart the pad selection, turn the DATA wheel to the left. The value in the Note field will be reset to ALL so that you can select the pad that you want from the beginning.

#### When MIDI track is selected:

The display changes to show the selected region by note number.

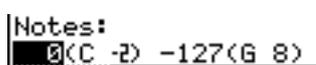

You will set the upper limit and the lower limit of the note in the field, The MPC1000 will edit only the events within the note numbers set in this field.

## Copying events (COPY)

You can copy events within the selected region to another place. The source data will remain in the original location.

**01. Select the Edit field in the EVENT page of the SEQ EDIT mode, and select COPY.**

The various fields necessary for the copying will be displayed.

```

Edit: COPY ..... From sq: 1 Tr: 1
Time:           To sq: 1 Tr: 1
001.01.00-003.01.00 Mode: REPLACE
Notes:         Start: 001.01.00
ALL           Copies: 1
    
```

**02. In the Time field and the Notes field, select the region and notes that you wish to copy.**

**03. In the From sq field and the Tr field in the right, select the source sequence and track.**

**04. In the To sq and the Tr field in the right, select the destination sequence and track.**

*Tips: In the EVENTS page, the From sq, Tr field and the To sq, Tr field only display the sequence number and the track number respectively, but pressing the [WINDOW] key when the cursor is in the From sq, Tr or To sq, Tr field, will bring up the Select window, where you can browse the sequence or track name to select.*

**05. In the Mode field, specify how to copy the data to the destination.**

**REPLACE** The MPC1000 will overwrite the destination with the source data. The data that is already in the destination will be removed.

**MERGE** The MPC1000 will merge the source data with the data that is already in the destination.

**06. In the Start field, set the start point of destination time.**

The MPC1000 will start the copy to the time set here.

**07. In the Copies field, set the number of times to copy.**

To copy the same phrase repeatedly, enter the number of copies in the Copies field. You can copy it repeatedly with one operation.

**08. Press the [F6] (DO IT) key.**

The MPC1000 will start copying the data.

## Moving events (MOVE)

You can move events within the selected region to another location. Unlike the copy function, this function will remove the source data from the original location.

**01. Select the Edit field in the EVENT page of the SEQ EDIT mode, and select MOVE.**

The various fields necessary for moving will be displayed.

```

Edit: MOVE ..... From sq: 1 Tr: 1
Time:           To sq: 1 Tr: 1
001.01.00-003.01.00 Mode: REPLACE
Notes:         Start: 001.01.00
ALL
    
```

**02. In the Time field and the Notes field, select the region that you wish to move.**

**03. In the From sq field and the Tr field on the right, select the source sequence and track.**

**04. In the To sq and the Tr field on the right, select the destination sequences and tracks.**

*Tips: In the EVENTS page, the From sq, Tr field and the To sq, Tr field only display the sequence number and the track number respectively, but pressing the [WINDOW] key when the cursor is in the From sq, Tr or To sq, Tr field, will bring up the Select window, where you can browse the sequence or track name to select.*

**05. In the Mode field, specify how to move the data to the destination.**

- REPLACE     The MPC1000 will overwrite the destination with the source data. The data that is already in the destination will be removed.
- MERGE       The MPC1000 will merge the source data with the data that is already in the destination.

**06. In the Start field, set the start point of destination time.**

The MPC1000 will start moving the event to the time selected here.

**07. Press the [F6] (DO IT) key.**


The MPC1000 will start moving the event.

### Changing the key of the event (TRANSPOSE)

You can transpose (change the key of) the note events. This edit only applies to the note events of a MIDI track. It does not change DRUM track data.

**01. Select the Edit field in the EVENT page of the SEQ EDIT mode, and select TRANSPOSE.**

The various fields necessary for the transpose will be displayed.

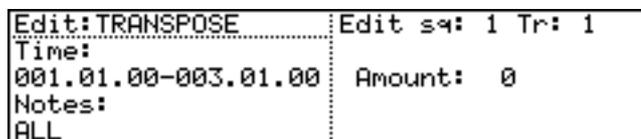

**02. In the Time field and the Notes field, select the region that you wish to edit.**

**03. In the Edit sq field and the Tr field on the right, select the sequence and track that you wish to edit.**

In the Edit sq field and the Tr field, you can select ALL by turning the DATA wheel. When you select ALL, the MPC1000 will transpose all the sequences and tracks.

*Note: This edit only applies to the note events of a MIDI track. It does not change DRUM track data.*

**04. In the Amount field, set the amount of the transpose.**

You can set by semitones.

**05. Press the [F6] (DO IT) key.**

The MPC1000 will start the transpose.

### Selecting the editing region by bar


You can edit the sequence by bar. This is done in the BARS page in the SEQ EDIT mode, which can be accessed by pressing the [MODE] key and then the [PAD 13].

### Copying bars (COPY)

You can copy bars within the selected region to another place. The length of the destination sequence will be extended to add the copied bars.

**01. Select the Edit field in the BARS page of the SEQ EDIT mode, and select COPY.**

The various fields necessary for copying will be displayed.

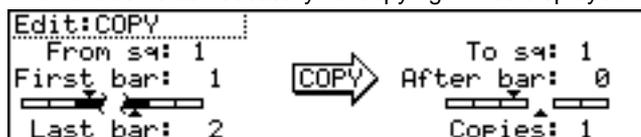

**02. In the From sq field, select the source sequence.**

**03. In the To sq, select the destination sequence.**

*Tips: In the EVENTS page, the From sq, Tr field and the To sq, Tr field only display the sequence number and the track number respectively, but pressing the [WINDOW] key when the cursor is in the From sq,Tr or To sq,Tr field, will bring up the Select window, where you can browse the sequence or track name to select.*

**04. In the First bar field, select the first bar of the source sequence.**

**05. In the Last bar field, select the last bar of the source sequence.**

**06. In the After bar field, select the destination.**

The selected bars will be copied to the end of the bar set here.

**07. In the Copies field, select the number of times to copy the data.**

To copy the same phrase repeatedly, enter the number of copies in the Copies filed. You can copy it repeatedly with one operation.

**08. Press the [F6] (DO IT) key.**


The MPC1000 will start copying the bars.

### Inserting a bar (INSERT)

To insert empty bars in the sequence, proceed as follows:

**01. Select the Edit field in the BARS page of the SEQ EDIT mode, and select INSERT.**

The various fields necessary for inserting bars will be displayed.

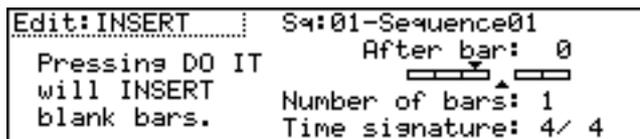

**02. In the Sq field, select the sequence that you wish to insert the bars.**

**03. In the After bar field, select the location to insert the bars in.**

The selected bars will be inserted at the end of the bar set here.

**04. In the Number of bars field, set the number of bars to insert.**

**05. In the Time signature field, select the time signature of the bars to insert.**

**06. Press the [F6] (DO IT) key.**


The number of empty bars selected will be inserted at the selected location.

### Deleting a bar (DELETE)

To delete the selected bar(s) in the sequence, proceed as follows:

**01. Select the Edit field in the BARS page of the SEQ EDIT mode, and select DELETE**

The fields necessary for deleting the bars will be displayed.

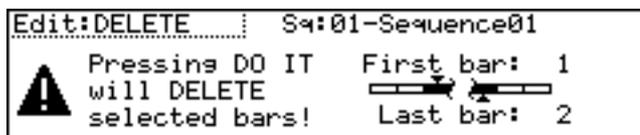

**02. In the Sq field, select the bars to delete.**

**03. In the First bar field, specify the first bar to delete.**

**04. In the Last bar field, specify the last bar to delete.**

**05. Press the [F6] (DO IT) key.**

The selected bar(s) will be deleted.

## Changing the order of tracks (TRACK MOVE)

When you are creating a song by combining several short sequences, normally you would use the SONG feature to play back sequence in the specified order. The MPC1000 can convert the song data with short sequences to one long sequence. To do this, you need to arrange the order of the tracks in each sequence. In this section, you will learn how to use the track move function that allows you to change the order of the tracks in a sequence.

You can set the track move in the TrMOVE (Track move) page of the SEQ EDIT mode, which can be accessed by pressing the [MODE] key and then the [PAD 13].

### 01. In the SEQ EDIT mode, press the [F3] (TrMOVE) key.

The TrMOVE (Track move) page will be displayed.

Reference sq:01	Sq:01-Sequence01
Track01	Tr:01-Track01
Track02	Tr:02-Track02
Track03	Tr:03-Track03

### 02. In the Sq field, select the track that you wish to change the order.

### 03. In the Reference sq field, select the sequence to be used as the reference when changing the order.

For example, if you want other tracks to follow the order in sequence 01, you should select sequence 01 in the Reference sq field.

### 04. Using the down cursor key, move the cursor to the track list.

### 05. You can scroll through the list by turning the DATA wheel.

Select the track that you wish to move.

### 06. Press the [F6] (SELECT) key.

This selects the track.

To select a track again, press the [F5] (CANCEL) key.

### 07. Select the destination by turning the DATA wheel.

The list will scroll with the track selected in steps 5 and 6 fixed.

Refer to the list on the left to select the destination position.

### 08. Press the [F6] (MOVE) key.

The track will move to the selected location and the order will be changed.


## Chapter 5 : Step editing

There are two ways to edit sequences. You can select a region and edit several events at one time, or you can edit each event in detail. In this section, you will learn about the STEP EDIT mode, where you can edit each event in detail.

### About step edit

Each track has the performance data you made with pads, or MIDI note information from an external MIDI keyboard. The Step Edit function allows you to edit each event separately. There are other types of events than Pad and MIDI note information. There are also events specific to the MPC1000, such as Q-Link slider information and tempo information, and MIDI events such as pitch bend and modulation wheel.

Step edit is done in the STEP EDIT mode, which is accessed by pressing the [MODE] key and then [PAD 14].

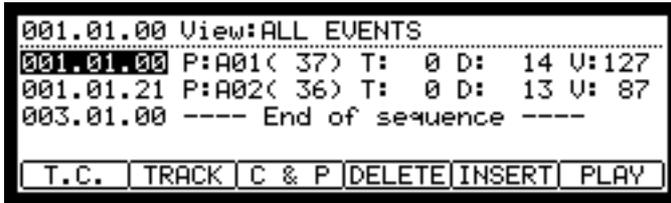

### Screens

#### Now field

The time display on the upper left corner on the screen is the Now field. The Now field always displays the current position of a sequence. This is the same as the Now field in the MAIN page.

#### View field

You can set the type of events to display in the event list in this field. The event list displays only the events set in this field. It is useful when you wish to edit only specific events.

#### Event list

The event list is displayed below the Now field and the View field. It lists the events within the active track.

#### Event time field

The event time field is displayed to the left of the event list. It displays the positions of the events within the track.

#### Event field

The Event field is displayed to the right of the event time field. The display differs depending on the type of event. You can change the value by moving the cursor.

### Basic operation

#### Event list

When the cursor is in the Now field or View field, pressing the down cursor key moves the cursor to the event list.

You can scroll through the event list with the up and down cursor keys. When the cursor is in the event time field, you can scroll through the list by turning the DATA wheel.

When the cursor is in the event time field, pressing the left cursor key moves the cursor to the Now field.

In the event list, you can select several events at one time by pressing the down cursor key while holding the [SHIFT] key.

### [F1] (T.C.) key

This key works the same as the [F1] (T.C.) key in the MAIN page. You can set the timing correction. For more information, see the “Timing correct feature” section on page 13.

### [F2] (TRACK) key

Pressing this key displays the window to change tracks until you release the key. You can select a track without switching back to the MAIN page.

### [F6] (PLAY) key

Pressing this key plays back the selected event.

### Editing method

In the step edit page, the events in the track are listed. You can select the event with up/down cursor keys and the field with right/left cursor keys. You can change the value in the field by turning the DATA wheel.

## Events

### Pad event

```
P:A01( 36) T: 0 D: 14 U:127
```

This is the event that is recorded when you hit the pads in the DRUM track.

### P (pad) field

You can set the pad number in this field.

### Note variation field

In the above picture, the area that displays “T” is the note variation field. You can select the type of note variation data to record with the Q-Link sliders.

- T Tune (pitch)
- F Filter
- L Layer
- A Attack time
- D Decay time

### About the note variation

Note variation data, which is used for the Q-Link sliders or 16LEVELS function, is the information used to control the sound of a pad, and is saved in the track along with the pad event. With the note variation data, you can switch the sounds of the pad even when you are playing back the same pad.

### Note variation value field

In this field, displayed to the right of the note variation field, you can set the note variation value.

### D (duration) field

You can specify the length of a note.

### V (velocity) field

You can set the velocity of the pad.

### Tempo change event

`%:100.00 ↵=120.0▶125.0`

Tempo change event is used to change the tempo within the sequence.

The tempo change event is different from other events. It does not belong to a specific track.

By selecting TEMPO in the View field, you can display the tempo change event information separately, regardless of the selected track. Even when you have selected ALL EVENTS in the View field, the tempo change event will not be displayed in the event list.

#### % field

You can set the amount of the tempo change.

#### Initial tempo field, Current tempo field

The field on the left with a note symbol is the initial tempo field. The field on the right is the current tempo field.

The initial tempo field displays the original tempo set in the tempo field of the sequence, the Current tempo field displays the new tempo changed by the setting in the % field.

### Effect select event

`EFFECT SELECT:01`

This event is used to switch the effect settings within the sequence.

The events described above are specific events to the MPC1000.

Below are the MIDI events that you use when using the MPC1000 as a MIDI sequencer.

*Note: How a MIDI event effects an external sound module depends on the specification of the sound module.*

*For more information about the effect of each MIDI event, see the operation manual of your sound module.*

### Note event

`N: 36<C 1> D: 14 V:127`

This is a MIDI note event.

#### N (Note number) field

You can set the note number in this field. A note number indicates the location on a keyboard as a numbers, with the middle C of the piano as note number 60.

#### D (duration) field

You can specify how long a note is held (length of a note). In the MIDI standard, pressing a key is called "Note on", releasing a key is called "Note off". In this field, you will set the time from Note on to Note off.

#### V (velocity) field

You can set the velocity of the note event. In the MIDI standard, the speed used to trigger a note is called velocity. The velocity is shown in 127 steps, with 127 the maximum.

### Pitch bend event

`PITCH BEND : 0`

You can set the pitch bend. Normally this event is used to control the pitch in real time.

### Control change event

`CC: 1-BANK SELECT MSB : 0`

The control change, which is used for various applications, is the most versatile event in the MIDI standard.

The control change event consists of a control number, which determines the type of the control change, and the control change value.

#### CC field

You can select the type of the control change in this field, and the control change value in the field on the right.

## Program change event

PROGRAM CHANGE : 1

You can set the program change. This event is normally used to switch the sound of an external sound module. If program numbers are assigned to programs in the internal sampler section, you can switch the programs that are assigned to the track within the sequence.

## Channel pressure event

CHANNEL PRESSURE : 0

You can set the channel pressure. Normally, a Channel pressure event is used for aftertouch. This feature allows you to control the sound depending on the pressure used to press the keyboard.

## Poly pressure event

POLY PRESSURE : 60(C 3) : 0

The Poly pressure event is used for aftertouch much like the channel pressure event, however the Poly pressure event can be set to different values for each individual note.


## Exclusive data event

EXCLUSIVE 120Byte

Exclusive data event is used to set the sound module, or to give a more detailed setting to the sound module, which cannot be done using control changes. The MPC1000 can edit the exclusive data as well as record and play them back. However, the type of exclusive data you can receive and their functions are determined by each manufacturer.

### Editing the exclusive data

An exclusive data event displays only the size of the event data and you cannot edit this event directly. To edit the exclusive data, you need to select the desired exclusive data event and press the [WINDOW] key to display the Edit Exclusive Event window.

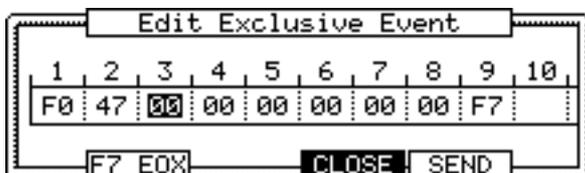

The data of each byte will be displayed. You can scroll through the display with right/left cursor keys.

Select the byte that needs change, and change the setting with the DATA wheel.

To change the length of the exclusive data, press the [F2] (F7 EOX) key. Pressing the [F2] (F7 EOX) key enters "F7", which indicates the end of the exclusive data, to the selected byte.

Pressing the [F5] (SEND) key sends out the currently set exclusive data.

When you finish editing, press the [F4] (CLOSE) key and close the window.

## Copying/pasting an event

To copy the selected event and paste it to another location, proceed as follows.

### 01. In the event list, select the event that you wish to copy.

You can select several events by pressing the down cursor key while holding the [SHIFT] key.

### 02. Press the [F3] (C &P) key and the [F4] (COPY) key at the same time.

When you press the [F3] (C &P) key, the display of the [F3] and the [F4] key will change to (COPY) and (PASTE) respectively until you release the key.

### 03. In the Now field, select the time position that you wish to paste the event to.

### 04. Press the [F3] (C &P) key and the [F5] (PASTE) key at the same time.

The selected event will be pasted.

## Deleting an event

To delete the selected event, proceed as follows.

**01. In the event list, select the event that you wish to delete.**

You can select several events by pressing the down cursor key while holding the [SHIFT] key.

**02. Press the [F4] (DELETE) key.**

The selected event will be deleted.

## Entering an event (Step recording)

In the STEP EDIT mode, when you hit a pad, or when the MPC1000 receives MIDI data from an external device, you can record the event in the current time position (the time displayed in the Now field). Move the event to the desired time position by moving through the event list with the up/down cursor keys, or by setting the time position in the Now field, and you can add events to the desired time position one by one. This method, recording each event individually when MPC1000 is in the stop mode, is called step recording.

**01. In the STEP EDIT mode, Press the [REC] key or the [OVER DUB] key.**

The LED of the [OVER DUB] key will be lit, which indicates that you can now enter events by hitting a pad.

**02. Move through the list with the up/down cursor keys, or select the Now field, to select the time position to insert event.**

**03. Hit a pad.**


The event of the pad will be recorded.

**04. Press the [STOP] key.**

The LED of the [OVER DUB] key will be turned off and you can finish the step recording.

## Detailed setting for step recording

Pressing the [WINDOW] key in the STEP EDIT mode brings up the Step Edit Options window, where you can make various settings for the step recording.

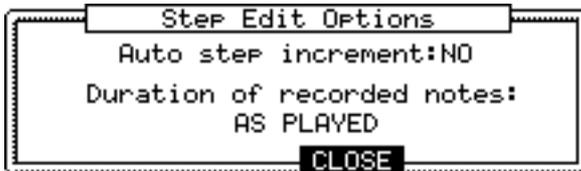

### Auto step increment field

If you select YES, the MPC1000 will automatically update the sequence according to the setting of the timing correct when it receives a pad event or a note event.

### Duration of recorded notes field

You can determine how the length that a pad (MIDI keyboard) is pressed affects the event to be recorded during step recording.

**AS PLAYED** The length that a pad (MIDI keyboard) is pressed will be applied to the event. When you hit a pad (MIDI keyboard), the metronome sound will start automatically. Refer to the metronome sound to set the length to press a key. When you release a pad (MIDI keyboard), the length that a key was pressed will be entered in the D (duration) field.

**TC VALUE%** When set to 100%, the value set in the timing correct will be entered in the D (duration) field, regardless of the length that you actually pressed the pad (MIDI keyboard). Selecting the TC VALUE% will display the field, where you can set the percentage of the duration to apply to the current timing correct value. (Ex. 50% will set duration to one-half timing correct value.)

## Inserting an event

During the step recording, you can enter events using the insert function as well as using pads and MIDI keyboard.

- 01. Move to the time position that you wish to insert the event, and press the [F5] (INSERT) key.**

The Insert Event window will open.

- 02. In the Type field, select the event to insert, and press the [F5] (DO IT) key.**

The selected event will be inserted.


## Chapter 6 : Song mode

In the SONG mode, you can set the order of multiple sequences and play them in a series. The SONG mode is useful when you are creating a song by combining short sequences. You can check the structure of an entire song while working, so you can finish the song easily. You cannot record the performance in the SONG mode, you can convert the song that you created in the SONG mode to one long sequence so that you can record/edit it like you would a normal sequence.

### Structure of a song

The MPC1000 can handle up to 20 songs. Each song has 250 steps. You can create a song by assigning sequences to each step in the list. For each step, you can assign a sequence, and also set the number of times the MPC1000 should repeat the sequence. You can create a song in the SONG mode, which can be accessed by pressing the [MODE] key and then the [PAD 16].

Now:001.01.00 Song:01-(unused)				
Step	Sequence	Reps	Tempo	Bars
	(end of song)			
CONVRT DELETE INSERT				

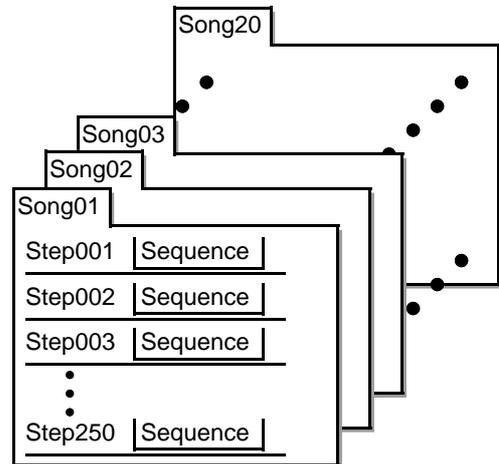

### Screens

#### Now field

The time display on the upper left corner on the screen is the Now field. The Now field always displays the current position of a sequence. This is the same as the Now field in the MAIN page.

#### Song field

You can set the song number in this field. The song name will be displayed to the right of the number. If there is an unused song, it is displayed as (unused).

#### Step list

The list that is displayed below the Now field and the Song field is the step list, which is used to assign the sequences to each step. Pressing the down cursor key when the Now field or the Song field is selected moves the cursor to the step list. When there are many steps with different sequences assigned, you can scroll through the list with the up/down cursor keys. Pressing the left cursor key in the Step field of the step list moves the cursor to the Now field.

#### Step field

This field displays the step number. You can scroll through the list by turning the DATA wheel.

#### Sequence field

You can assign the sequences in this field by turning the DATA wheel.

#### Reps field

You can set the number of times to repeat the sequence.

#### Tempo field

Displays the tempo of the selected sequence. You can change the tempo of the sequence, but if you are using the same sequence in another step, the tempo of that sequence will be changed as well.

#### Bars field

Displays the number of bars of the selected sequence. This field only displays the number of bars, you cannot make any changes in this field.

## Creating a song

- 01. Press the [MODE] key and then the [PAD 16] (SONG). The SONG page will be displayed.**
- 02. In the Song field, select a song whose name is (unused).**
- 03. Move the cursor to (end of song) and select the sequence to play first using the DATA wheel.**  
Turning the DATA wheel creates the new step and you can select a sequence. Then the new song will be created and its name will change from (unused) to Song## (## indicates the song number).
- 04. In the Reps field, set the times to repeat a sequence.**  
The MPC1000 will repeat the sequence the number of times set here before starting to play the next step.  
1 – 99      The MPC1000 will repeat the sequence the selected number of times.  
HOLD      The MPC1000 will repeat the sequence until you press the [F4] (SUDDEN) or the [F6] (NEXT) key.  
If you set the Reps field to 0, the MPC1000 will finish the play back after the previous step. It will not play the next step.
- 05. Select the (end of song) field by pressing the down cursor key, and select the sequence that you want played back next.**  
Assign the sequences in the desired order by repeating the steps 03. and 04.
- 06. Press the [PLAY START] key.**  
The assigned sequence will be played in the selected order.

## Deleting a step

To delete a step in the list, proceed as follows.

- 01. Select the step that you wish to delete.**  
You can select the step by using the up/down cursor keys in the step list.
- 02. Press the [F5] (DELETE) key.**  
The selected step will be deleted and the following steps will be moved forward.

## Inserting a step

To insert a step in a song, proceed as follows.

- 01. In the Step list, select a step that you wish to insert a new step into.**  
The new step will be inserted before the selected step.
- 02. Press [F6] (INSERT) key.**  
A new step with the same contents as the select step will be inserted right before the selected step.

## Playing a song

You can play the song by pressing the [PLAY START] key. To play from the middle of the song, select the position that you wish to start the playback, using the cursor, and press the [PLAY] key.

During the playback, the function key will change as follows.



[F4] (SUDDEN) key

If you press this key during the playback, the MPC1000 will skip to the next step before it finishes the current sequence.

[F6] (NEXT) key

If you press this key during the play back, the MPC1000 will skip to the next step after it finishes playing back the current sequence regardless of the number of repeats in the Reps field.

*Tips: If HOLD is selected for a step in the Reps field, the MPC1000 will not go to the next step until you press the [F4] (SUDDEN) key or the [F6] (NEXT) key.*

## *Other features in the SONG mode*

### Changing the song name

- 01. In the Song field of the SONG page, select a song that you wish to change the name of.**
- 02. Press the [WINDOW] key.**

The Song window will open.
- 03. In the Song name field, enter the new name.**

For more information for setting the name, see the "Setting names" section on Page 8.
- 04. Press the [F4] (CLOSE) key.**

It closes the window and goes back to the SONG page.

### Copying a song

To copy a song to another song, proceed as follows.

- 01. In the Song field of the SONG mode, select a song that you wish to copy.**
- 02. Press the [WINDOW] key.**

The Song window will open.
- 03. Press the [F5] (COPY) key.**

The Copy Song window will open.
- 04. In the Song field (below), select a song that you wish to copy the selected song to.**
- 05. Press the [F3] (DO IT) key.**

The MPC1000 will start copying the song. To cancel the operation, press the [F4] (CANCEL) key instead.

### Deleting a song

To remove the selected song from the memory of MPC1000, proceed as follows.

- 01. In the Song field of the SONG mode, select a song that you wish to delete.**
- 02. Press the [WINDOW] key.**

The Song window will open.
- 03. Press the [F2] (DELETE) key**

The Delete Song window will open.
- 04. Press the [F5] (DO IT) key.**

This deletes the selected song and changes its name to "unused".

### Deleting all the songs

You can delete all the song data in the memory at one time. Proceed as follows.

- 01. In the SONG mode, select the Song field and press the [WINDOW] key.**

The Song window will open.
- 02. Press the [F2] (DELETE) key.**

The Delete Song window will open.
- 03. Press the [F3] (ALL SG) key.**

The Delete ALL Songs window will open.
- 04. Press the [F5] (DO IT) key.**

All the songs will be titled (unused).

---

## Setting all sequences to the same tempo

Each sequence has its own tempo. When you are creating a song in the Song mode, it is useful to change all the sequences to have the same tempo at once. With this feature, you can change all the sequences that you are using for a song to the same tempo at once.

**01. In the Tempo field of the step list, press the [WINDOW] key.**

The Tempo Change window will be displayed.

**02. Press the [F5] (FIX) key.**

The Fix Tempo window will be displayed.

**03. In the Fix tempo field, select the desired tempo.**

**04. Press the [F3] (DO IT) key.**

All the sequences used in the song will be set to the tempo that is set in the Fix tempo field.

## Ignoring tempo change events in a sequence

You can set the MPC1000 to ignore tempo change events that are set set in a sequence.

**01. In the Tempo field in the step list, press the [WINDOW] key.**

The Tempo Change window will be displayed.

**02. Select a setting in the Ignore tempo change events in sequence field.**

NO The MPC1000 will execute the tempo change events in the sequence.

YES The MPC1000 will ignore the tempo change events in the sequence.

**03. Press the [F4] (CLOSE) key.**

This closes the window.

## Converting a song to a sequence

You can convert a song to one long sequence. You can record or over dub to the converted sequence in the MAIN mode like other sequences. You can also edit the sequence in the STEP EDIT mode or the SEQ EDIT mode.

**01. In the SONG mode, press the [F4] (CONVRT) key.**

The Convert Song to Seq window will be displayed.

**02. In the From song field, select the song that you wish to convert.**

**03. In the To seq field, select the destination sequence.**

**04. Press the [F5] (DO IT) key.**

The song will be converted to a sequence.

### Note : during song conversion

When you convert a song, the specific settings used in each track within the sequence, such as track type, MIDI channel setting, selection of the program, etc, will be set to the values that you set in step 1. If the track setting of the sequence in another step is different from those in the step 1, the song may not be converted properly. To avoid this, it is better to make the track settings and the order of each sequence the same. For more information on how to change the order of the tracks, see the "Changing the order of the tracks" section on page 29.

## Chapter 7 : Functions of a pad

The MPC1000 has 16 drum pads. The pads perform various function besides making sounds when hit. In this section, you will learn about various functions of the pad.

### *Playing with pads*

By assigning the sounds in memory to a pad, you can play those sounds.

Below are some useful functions when playing with pads.

### Switching pad banks

The MPC1000 has 16 pads, but you can play up to 64 samples by switching between the four pad banks.

The LED of the currently selected pad bank (from banks A through D) is turned on. By pressing the desired [PAD BANK] key, you can switch pad banks.

### Full level function (FULL LEVEL key)

You can control the level of the sound by the velocity used to hit the pads, but if you press the [FULL LEVEL] key, the MPC1000 will play the sample at the maximum level regardless of the velocity.

If you press the [FULL LEVEL] key, the LED will be lit, and the full level function will be activated. To deactivate this function, press the [FULL LEVEL] key again.

### 16 level function (16LEVELS key)

You can play a sound using 16 parameter levels assigned to the 16 pads.

#### **01. Hit the pad that you wish to play in 16 levels.**

#### **02. Press the [16 LEVELS] key.**

The Assign 16 Levels window will be displayed.

The Pad field displays the pad you selected in step 1.

#### **03. In the Type field, select the type of the parameter that you wish to play in 16 levels.**

You can select the following parameters;

VELOCITY	The MPC1000 will play the velocity in 16 levels.
TUNE	The MPC1000 will play the pitch in 16 levels by semitone.
FILTER	The MPC1000 will play the filter cutoff value in 16 levels.
LAYER	The MPC1000 will play the layer value in 16 levels.
DECAY	The MPC1000 will play the decay value in 16 levels.
ATTACK	The MPC1000 will play the attack value in 16 levels.

When TUNE is selected, the Original key pad field will be displays. In this field, you can specify the pad that plays the original key pad.


#### **04. Press the [F5] (TurnON) key.**

The window closes and the LED of the [16 LEVELS] key is turned on, which indicates you can play in 16 levels. Pressing the [16 LEVELS] key turns its LED off and deactivates the 16 levels function.

*Tips: When you select VELOCITY in the Type field, the velocity of the pad event can be played in 16 levels, but if you select an option other than VELOCITY, the note variation value will be played in 16 levels. The note variation data can change the value of a specific parameter when you play the pad's sample. For example, if you select TUNE in the Type field, when you hit the pad, the note variation data of TUNE will be sent to the sampler section with the pad event, and the TUNE value will be changed according to the pad you played. During Sequence recording, the Note variation data will be recorded with the note event and you can play back the sequence exactly what was played. The note variation value is also used for the Q- Link slider function.*

## Setting the track mute with pads

You can mute/unmute tracks in real time during playback by hitting the pads. This is useful when you have several instruments assigned to different tracks, so that you can play a song and switch tracks on/off using the pads while playing back your sequence. Pressing the [TRACK MUTE] key brings up the track mute page.

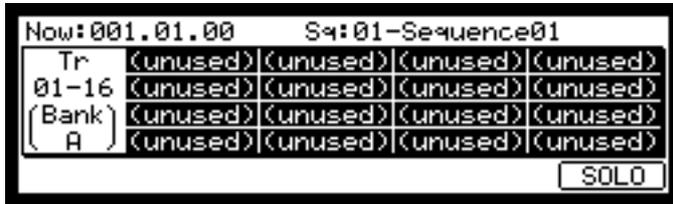

### TRACK MUTE Screen

#### Now field

Like the Now field in the MAIN page, this field displays the current time position of the sequence.

#### Sq field

Like the Sq field in the MAIN page, you can select a sequence in this field.

#### Track list

The track list is displayed under the Now field and the Sq field.

The track list displays the first 8 letters of the track name. The tracks are displayed according to the position of the pads; Track 1 on the lower left and track 16 on the upper right. You can display 16 pads at one time, but you can display 1 to 64 tracks by switching pad banks. The track whose track mute is set to off will be highlighted.

#### Operation

Hitting a pad when the track mute page is displayed switches the track mute setting of that track instead of playing the sound.

### Solo function

With the Solo function, you can play back only the selected track.

#### 01. Hit the pad that corresponds to the track that you wish to play, while pressing the [F6] (SOLO) key.

The [F6] (SOLO) will be highlighted and MPC1000 will play only the selected track while it mutes the other tracks. You can switch the tracks to play, by hitting a pad.

#### 02. Pressing the [F6] (SOLO) key deactivates the solo function.

#### Setting the track mute in solo mode

Solo function switches the track mute setting temporary. Turning off the solo function resets the track mute settings for each track to the same status as before the solo function was activated. However, you can also turn off the solo function while keeping the track mute setting unchanged. With this feature, you can make a performance starting with many tracks followed by only a simple rhythm track and then gradually add tracks.


#### Operation

When the solo function is on, press the [F6] (SOLO) key while holding the [SHIFT] key.

The Solo function will be deactivated and the mute setting for the track set to solo will be turned off. The setting for other tracks will be turned on.

## Selecting a sequence to play with pads

You can select a sequence that you wish to play next, by hitting the pads. This is useful for live performances, which change a song structure in real time. Also, you can check the relationship between sequences while you are working on a song with several short sequences. Pressing the [NEXT SEQ] key brings up the next sequence page.

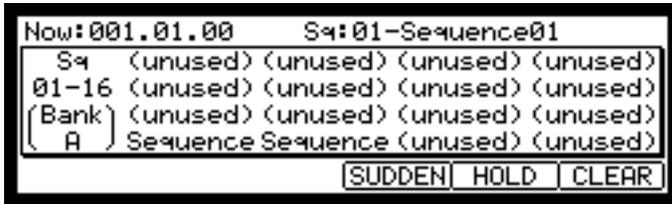

### NEXT SEQ Screens

#### Now field

Like the Now field in the MAIN page, it displays the current time position of the sequence.

#### Sq field

Like the Sq field in the MAIN page, you can select a sequence in this field.

#### Sequence list

The sequence list is displayed under the Now field and the Sq field.

The sequence list displays the first 8 letters of the sequence name. The sequences are displayed according to the position of the pads; Sequence 1 on the lower left and sequence 16 on the upper right. You can display 16 pads at one time, allowing you to display 1 to 64 sequences by switching pad banks.

*Note: you cannot select a sequence between 65 and 99 using pads, but you can select them in the Sq field.*

#### Operation

**01. In the Sq field, select a sequence that you wish to play first.**

**02. Start to play back the Sequence.**

**03. Select another sequence that you wish to play next, using a pad.**

The number and name of the selected sequence will be displayed below the Sequence list. The MPC1000 will switch to the next sequence after it plays the current sequence to the end.

*Tips: You can change the next sequence by hitting the pads until the current sequence ends.*

*Tips: When no other sequence is selected, the MPC1000 will continue to playback the current sequence over and over.*

*Tips: You can cancel the next sequence that is displayed below the sequence list, by pressing the [F6] (CLEAR) key.*

### SUDDEN key

Normally, the MPC1000 will switch to the next sequence after it plays the current sequence to the end.

However, you can also switch to the next sequence before the MPC1000 finishes playing back the current sequence by pressing the [F4] (SUDDEN) key.

It is useful for the live performance, where you need to switch to the next phrase at a certain cue.

**01. Select the next sequence with the pads, and press the [F4] (SUDDEN) key.**

The MPC1000 will switch to the next sequence at the point the key is pressed.

*Tips: If you press the pad while holding the [F4] (SUDDEN) key, the MPC1000 will switch to the next sequence at the point the pad is hit.*

## HOLD key

Normally, when the next sequence is selected, the MPC1000 will switch to the next sequence after it finishes playing the current sequence. If you press the [F5] (HOLD) key, the MPC1000 will keep playing back the current sequence until you press the [F5] (HOLD) again. It is useful for the live performance, where you wish to change the phrase according to the response of the audience.

### **01. Select the next sequence with the pad, and press the [F5] (HOLD) key.**

The key will be highlighted and the MPC1000 will keep playing back the current sequence, instead of switching to the next sequence.

If you press the [F5] (HOLD) key again, the Hold function will turn off and the MPC1000 will switch to the next sequence after it finishes playing back the current sequence.

*Tips: If you press the [F4] (SUDDEN) key when the hold function is on, the MPC1000 will switch to the next sequence right away.*


## Chapter 8 : Q-Link slider

By using the Q-Link sliders, you can control certain pad parameters (filter, tune, etc...) with a slider.

When you hit a pad which has a Q-Link slider function assigned, the information of the slider position will be sent to the sampler section as note variation data. The note variation data converts the parameters value to slider position data, before the pad's sample is played back. For example, when you select TUNE as a parameter, moving the slider sends out the tune's note variation data to the pad and changes the sample's tune.

In this section, you will learn how to set the Q-Link sliders. This is done in the SLIDER mode, which can be accessed by pressing the [MODE] key and then the [PAD 1](SLIDER) key.

The SLIDER mode has 2 pages, [ F1] (Q1) and [ F2] (Q2), and you can set the Q-Link slider 1 and 2 separately.

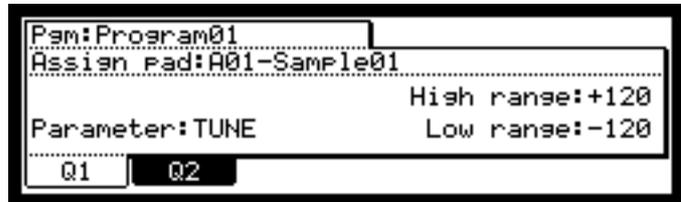

### Setting the slider

**01. In the Assign pad field, select the pad to which you wish to assign the slider.**

You can select the pad directly by hitting it. The effect of the slider will be applied only to the selected pad. If you do not wish to use the Q-Link slider function for any pad, select OFF by turning the DATA wheel.

**02. In the Parameter field, select the type of the parameter you are going to make changes.**

TUNE	This controls the sample's pitch.
FILTER	This controls the filter's cutoff frequency.
LAYER	This switches layers.
ATTACK	This controls the attack time of the Amp Envelope.
DECAY	This controls the decay time of the Amp Envelope.

**03. The High range field and Low range field set the upper and lower limit of the slider.**

The value of the controlled parameter is determined by the value set here. The value depends on the type of the parameter selected in the Parameter field.

TUNE (-120 to +120)	This controls the sample's pitch (10 equals a semitone).
FILTER (-50 to +50)	This offsets the cut off frequency of the currently selected filter.
LAYER (0 to 127)	This value switches layers instead of Velocity.
ATTACK (0 to 100)	The attack time of the envelope will be replaced with this value.
DECAY (0 to 100)	The decay time of the envelope will be replaced with this value.

### Recording the slider value in a sequence

If you use the Q-Link slider while recording, the note variation data will be recorded with the pad event. You can play back the sequence exactly the same as when you played during the recording.

### AFTER key

Changes the effect of the Q-Link slider, allowing you to control previously recorded note variation data during playback (after being recorded.).

If you move the Q-Link slider while playing back a sequence with note variation when the [AFTER] key is OFF (the LED is turned off), the pad's note variation is played back as recorded. If you hit the pad during the playback, the pad that you hit will have the effect of the Q-Link slider.

If you move the Q-Link slider while playing back the sequence with note variation when the [AFTER] key is ON (the LED is lit), the note variation value will be replaced with the current position of the Q-Link slider.

## Chapter 9 : Using the MPC1000 with external devices

In this section, you will learn how to sync the MPC1000 to the other MIDI devices using MIDI clock. MIDI clock is a function of the MIDI standard and allows several MIDI devices to synchronize. If your MIDI device supports MIDI clock, you can use the device and the MPC1000 in sync. If you are not sure if your MIDI device supports MIDI clock or not, refer to the device's operation manual.

### *Sync with the MPC1000 as the master*

When you play the MPC1000's sequence, the connected MIDI device will follow. MIDI clock data will be sent from the MPC1000 to the connected MIDI device. In this case, the MPC1000 is called the "master", and the connected MIDI device the "slave".

**01. Connect the MIDI OUT of the MPC1000 to MIDI IN of the external MIDI device using a MIDI cable.**

The MPC1000 has two MIDI OUTs: MIDI OUT A and MIDI OUT B. You can connect to either MIDI output, but for this example connect to the MIDI OUT B.

**02. Select the MIDI/SYNC mode by pressing the [MODE] key and hitting the [PAD 9] (MIDI/SYNC).**

**03. Press the [F2] (SYNC) key.**

The SYNC page will be displayed.

**04. Select the Sync out field and select the output of the MIDI clock.**

You can send out MIDI clock from both MIDI OUT A and B. In this example, since you have connected the external MIDI device to MIDI OUT B in step 1, select MIDI OUT B.

**05. Press the [MAIN] key.**

The main page, where you play back the sequence, will be displayed.

**06. Set the external MIDI device to receive the MIDI clock.**

Refer to the device's operation manual.

**07. Press the [PLAY START] key.**

The MPC1000 starts playback and the external MIDI device should start playback at the same time.

### *Sync with the MPC1000 as the slave*

The external MIDI sequencer triggers the MPC1000. When the external MIDI sequencer starts playback, the MPC1000 starts playback as well. The MIDI clock is sent from the external MIDI sequencer to the MPC1000. In this case, the external MIDI sequencer works as the master, and the MPC1000 as the slave.

**01. Connect the MIDI IN of the MPC1000 to MIDI OUT of the external MIDI device using the MIDI cable.**

The MPC1000 has two MIDI Ins: MIDI IN 1 and MIDI IN 2. You can connect to either MIDI IN, but here, connect to the MIDI IN 2.

**02. Select the MIDI/SYNC mode by pressing the [MODE] key and hitting the [PAD 9] (MIDI/SYNC).**

**03. Press the [F2] (SYNC) key.**

The SYNC page will be displayed.

**04. Select the "Sync in" field and select the input of the MIDI clock.**

You can receive the MIDI clock from both MIDI IN 1 and 2. In this example, as you have connected the external MIDI device to MIDI IN 2 in step 1, select MIDI OUT 2.

**05. Press the [MAIN] key.**

The main page, where you play back the sequence, will be displayed. (EXT) will be displayed in the  (Tempo) field.



**06. Set the external MIDI device to send out the MIDI clock.**

Refer to the device's operation manual.

**07. Start the playback of the external MIDI sequencer.**

The MPC1000 starts the playback as well.

*Note: The MIDI clock signal has tempo information. The slave device will follow the master device's tempo regardless of its original tempo.*

*Note: The MIDI clock signal does not have time information. If the time settings of the master and the slave are different, they will still play in sync but their time position display may be different.*

## Connecting the MPC1000 to the MIDI keyboard with the sound module


In this section, you can learn how to connect the MPC1000 to a MIDI keyboard which has an internal sound module to use the MPC1000's sequencer feature.

Normally, The MIDI keyboard with the sound module is set to generate the sound from the internal sound module when you play the keyboard. However, The MPC1000 sends out any incoming MIDI signals to the MIDI keyboard at the MIDI output. So, if you play the keyboard, the performance will be played in duplicate. To use the MPC1000 as a sequencer, you need to change the setting on the MIDI keyboard so that the MPC1000, not the MIDI keyboard, plays the keyboard's internal sound module. Normally this could be done by changing the setting called "local control". By setting the MIDI keyboard's local control to OFF, you can use the external keyboard and its internal sound module separately. In this case, the MIDI signal flows as in the figure in the right.

The performance data from the MIDI keyboard will be entered to the MPC1000. It will not be sent to the internal sound module.

The MIDI output of the MPC1000 will be sent back to the MIDI keyboard, which will play the keyboard's sound module.

For more information about the setting of your MIDI keyboard's local control, see the keyboard's operation manual.

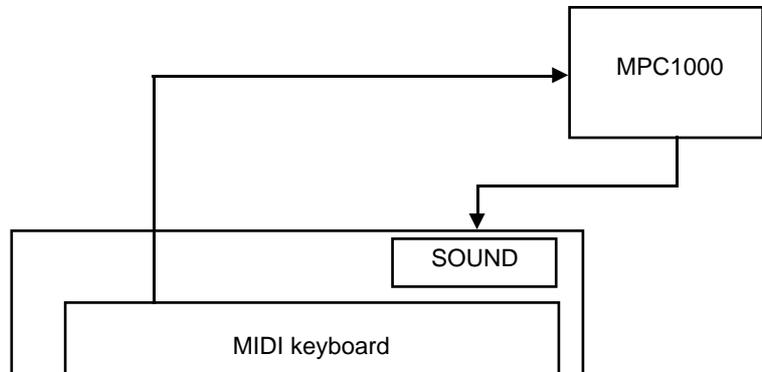

If your MIDI keyboard does not have a local control setting, deactivate the MPC1000's soft thru function. In this case, the MPC1000 will output only the data that is recorded on the track, not the incoming MIDI signal. However, if you do this, you cannot use some MPC1000 features, such as note repeat.

**01. Select the MIDI/SYNC mode by pressing the [MODE] key and hitting the [PAD 9] (MIDI/SYNC).**

**02. Press the [F1] (MIDI) key.**

The MIDI page will be displayed.

**03. Select the Soft thru field and select OFF.**

The soft thru field determines how to output the incoming MIDI signal.

You can select the following options:

OFF            The MPC1000 will not output the incoming MIDI signal.

AS TRACK     The MPC1000 refers to the MIDI channel setting of the sequence's track. The channel information of the incoming MIDI signal will be replaced with the MIDI channel set in the track.

OMNI- A	The MPC1000 will output the incoming MIDI data as it is from MIDI OUT A.
OMNI- B	The MPC1000 will output the incoming MIDI data as it is from MIDI OUT B.
OMNI- AB	The MPC1000 will output the incoming MIDI data as it is from both MIDI OUT A and B.

### *Setting the MIDI input*

Normally, the MPC1000 can receive the incoming MIDI data regardless of the MIDI channel, so you do not have to worry about the MIDI channel of the connected MIDI devices. You can change the setting to receive only the data on a specific MIDI channel.

**01. Select the MIDI/SYNC mode by pressing the [MODE] key and hitting the [PAD 9] (MIDI/SYNC).**

**02. Press the [F1] (MIDI) key.**

The MIDI page will be displayed.

**03. Select the Active track receive channel field and select the MIDI channel from which you wish to receive the data.**

If you set this field to ALL, the MPC1000 will receive all channels. If you select any channel from 1 to 15, the MPC1000 will receive only the selected channel.

## Chapter 10 : Recording a sample

In this chapter, you will learn how to record from an analog external device (CD player's analog output, microphone, etc...) so that you can play the sound by hitting the pads.


### Preparing the recording

- 01. Connect the external device to the RECORD IN, which is located on the MPC1000's rear panel.**

The format of the analog input of the MPC1000 is standard phone jack. If your device's format is different, you will need an adapter.

- 02. Press the [MODE] key and then [PAD 5] (RECORD).**

When you press the [MODE] key, its LED will blink. Pressing [PAD 5] with the [MODE] key's LED on displays the RECORD page, where you set the setting for the recording.

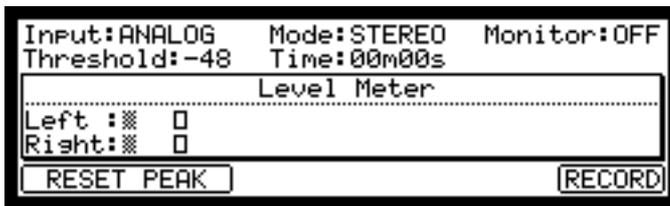

- 03. Select the Input field, and select the recording source.**

**ANALOG** The MPC1000 will record the incoming signal from the RECORD IN on the rear panel.

**DIGITAL** The MPC1000 will record the incoming signal from the DIGITAL IN on the rear panel.

**MAIN OUT** The MPC1000 will record the same signal with the signal from the STEREO OUT on the rear panel.

For this example, please select ANALOG.

- 04. Select the Mode field and select STEREO or MONO.**

**STEREO** The MPC1000 will record the left and right channel signals as a stereo sample.

**MONO** The MPC1000 will record only the left channel signal.


- 05. Play the source. Check the level meter on screen and adjust the recording level using the [REC GAIN] knob.**

*Note: When you select DIGITAL or MAIN OUT in the Input field, you cannot adjust the recording level with the [REC GAIN] knob.*

*The level meter moves according to the input level. If the meter goes too far to the right, the sound will be distorted, but if the sound level is too low, the sample will gain a lot of noise. Set the level as high as possible without reaching the right edge (clip).*

- 06. Select the Threshold field and set the threshold level to start the recording.**

When the MPC1000 is in the recording enable mode, it starts the recording automatically when the level of the incoming source exceeds the threshold level. If you set the threshold level too high, the MPC1000 may not start the recording when you play the input source, or the beginning of the recording may be missing. If you set the threshold level too low, the MPC1000 may start the recording before you play the external source. Set this to the appropriate level using the level meter. The threshold level will be indicated as "□" as the figure below.

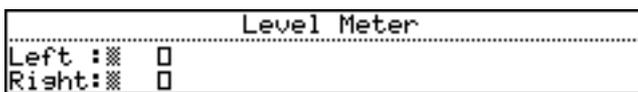

- 07. Select the Time field and set the recording time.**

The MPC1000 will record for the time set in this field. We recommend you set the time a little longer than the actual recording time. You can finish the recording manually.

## Starting the recording

### 08. Press [F6] (RECORD) key.

The MPC1000 will be in the record ready mode, and the bottom of the screen will change as below.

```
Waiting for input signal.. [CANCEL] [START]
```

This indicates that the MPC1000 is waiting for the incoming signal. It starts the recording when the input signal exceeds the threshold level.

Pressing the [F5] (CANCEL) key cancels the record ready mode and resets the MPC1000.

Pressing the [F6] (START) key starts the recording, even when the incoming signal does not exceed the threshold level.

*Note: If you press the [F6] (RECORD) key when the external source is higher than the threshold level, the MPC1000 will start the recording right after you press the [F6] (RECORD) key.*

### 09. Play the external source.

The MPC1000 will start the recording automatically when the level of the input signal exceeds the threshold level. During the recording, the bottom of the screen will change as below:

```
Recording... [CANCEL] [STOP]
```

The MPC1000 stops the recording at the time set in the Time field.

You can stop the recording manually before the time set in the Time field, by pressing the [F6] (STOP) key.

To cancel the recording, press the [F5] (CANCEL) key.

After the MPC1000 ends the recording, the Keep or Retry window will be displayed.

```

  _____
 | Keep or Retry |
 |               |
 | New name:Sample01 |
 |               |
 | Assign to pad:OFF |
 |               |
 | [RETRY] [PLAY] [KEEP] |
 |_____
```

### 10. Check the recorded sample by pressing [F4] (PLAY) key.

If you press the [F4] (PLAY) key, you can play back the recorded sample until you release the key.

If you do not like the recording, you can remove the recording and return to the RECORD page by pressing the [F2] (RETRY) key. If you like the recording and decide to keep it, proceed to the next step.

### 11. Select the New name field with the cursor, and set the name for the sample.

In the New name field, the recorded sample will have a new name automatically. You can select the New name field with the cursor and change the sample name if needed. For more information about setting the sample name, see the "Setting names" section on page 8.

### 12. Select the Assign to pad field with the cursor and select the pad to which you wish to assign the sample.

You can select the pad directly by hitting the pad when the cursor is in the Assign to pad field. If you just wish to keep the recorded sample in the MPC1000's memory and not to assign to the pad, select OFF with the DATA wheel.

### 13. Press the [F5] (KEEP) key.

This closes the Keep or Retry windows and goes back to the RECORD page.

*Note: The recorded sample will be removed when you switch the unit off. To keep the sample, you need to save on a memory card or import it to a PC. For more information about saving the data, see the "Save / Load" section on page 75 or see the "Connecting the MPC1000 to your computer" section on page 85 .*

## *Recording the sample - detailed information*

In this section, you will learn about several features regarding the recording which were not described in the "Recording the sample" section.

## *Recording the digital signal*

Here, you will learn how to record a digital signal.

*Note: You can record only from the devices whose sampling rate is set to 44.1kHz (ex. CD player). The MPC1000 does not support the other sampling rates.*

*Note: The format of the MPC1000's digital input is coaxial type. If your digital device has an optical output, you cannot connect it to the MPC1000 directly. You will need an adapter.*

### Preparing the recording

- 01. Connect the external device to the DIGITAL IN which is located on the MPC1000's rear panel.**
- 02. Press the [MODE] key and then [PAD 5] (RECORD) to display the RECORD page.**
- 03. Select the Input field and select DIGITAL.**  
When you select DIGITAL, a digital device MUST be connected to the MPC1000.
- 04. Select the Mode field and select STEREO or MONO.**
- 05. Play the source. Check the level meter on screen.**  
*Note: With the digital recording, you cannot adjust the recording level.*
- 06. Select the Threshold field and set the threshold level to trigger the recording.**
- 07. Select the Time field and set the recording time.**

For the next steps, proceed as described in the "Starting the recording" section on page 49.

## *Recording the MAIN OUT*

In this section, you will learn how to record the same signal found on the STEREO OUT of the MPC1000. With this feature, you can add the effects to the recorded sample and re-record it, or you can record the phrase that you created with the sequence feature, as one sample.

### Preparing the recording

- 01. Prepare the system so that you can play the desired sound by hitting the pads or playing back the sequence.**  
The sound that the MPC1000 will actually record is exactly the same as the sound from the STEREO OUT. Before going back to the RECORD mode, set the program and sequence so that the desired sound will be output from the STEREO OUT.
- 02. Press the [MODE] key and then [PAD 5] (RECORD) to display the RECORD page.**
- 03. Select the Input field and select MAIN OUT.**
- 04. Select the Mode field and select STEREO or MONO.**
- 05. Select the Time field and set the recording time.**

*Note: When MAIN OUT is selected, you cannot adjust the recording level.*

*Note: When MAIN OUT is selected, the level meter is not displayed.*

For the next steps, proceed as described in the "Starting the recording" section on page 49.

## Other features

### Monitoring feature

In the Monitor field of the RECORD page, you can determine if you want to monitor the input signal (output the signal from the STEREO OUT) in RECORD mode or not.

- ON You can monitor the input signal. This is useful when you record sounds directly from the CD player.
- OFF You cannot monitor the input signal. For example: when you send the signal to the MPC1000 through a mixer, both the source sound and the monitored sound may be sent to the mixer. To avoid this, you should set this to OFF.

### Peak hold/Reset peak feature


The level meter in the RECORD page has the peak hold feature. This is a useful feature for adjusting the signal level during recording. Normally, the display of the level meter changes in real time according to the level of the incoming signal. However, the peak hold displays the maximum level and keep the level even when the level decreases.



To reset the peak hold display, press the [F1] [F2] (RESET PEAK) key in the RECORD page.

### Sample Memory Window

When you press the [WINDOW] key in the RECORD page, the Sample Memory window will be displayed.

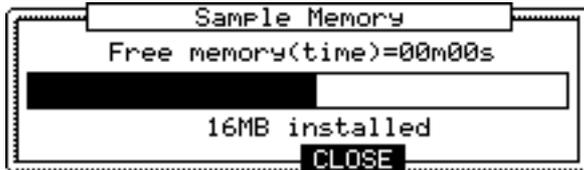

The Free memory field displays the time you can record with the current memory. Below it, the status of the memory is indicated as bar graph.

Below the bar graph, the total amount of the RAM in the MPC1000 is displayed.

## Chapter 11 : Editing a sample


In this section, you will learn about the TRIM mode, where you can set the sample's start/end points, or the loop.

### Setting the start/end points for the sample

The start/end points sets the part of the sample data, which will actually be played back. The recorded sample may have an unnecessary part at the beginning, which may make it more difficult to place the sound in the correct spot timing when hitting the pad. You can fix this problem by adjusting the start point. You can also adjust both the start and end points to play only a part of the phrase. If the sample has empty parts at the end, which consumes unnecessary memory, you can delete the empty parts by adjusting the end point and using the edit feature. Start/end points are displayed in sample points. The sample point is the minimum unit used for sample editing. The MPC1000 has the 44100 sample points per second.

### About the waveform display

The TRIM page displays the waveform of the sample selected in the Sample field.

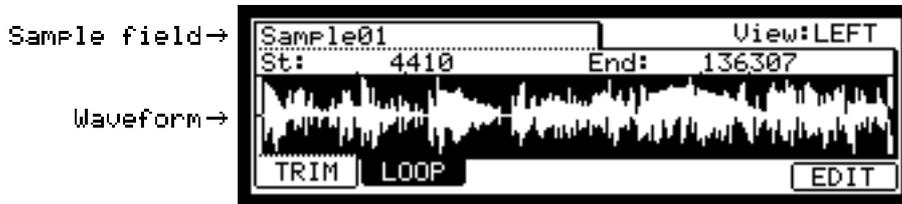

It displays the waveform of the whole sample, with the parts set by start/end points highlighted. If you select a stereo sample, you can select the channel (LEFT/RIGHT) to display in the View field.

### Adjusting the start point

#### 01. Press the [MODE] key and then the [PAD 6] (TRIM).

When you press the [MODE] key, its LED will blink. Press the [PAD 6] while the [MODE] key's LED is blinking to display the TRIM page.

#### 02. Select the Sample field and select a sample you wish to edit.

The Sample field is located in the upper left corner of the screen, which displays the sample name. It displays the waveform of the selected sample.

#### 03. Select the St (start) field and adjust the start point.

You can change the start point by turning the DATA wheel.

If you press the left/right cursor key while holding the [SHIFT] key, you can select the digit with the DATA wheel.

You can also enter the value directly using the [NUMERIC] key and pads. When you press the [NUMERIC] key, its LED will blink, which indicates you can enter numbers with pads.

#### 04. Hit the pad to check the start point.

When you hit the pad, the MPC1000 plays the sample. The playback method varies depending on the pad.

If you hit the [PAD 14] (PLAY TO), the MPC1000 will play the sample before the start point.

If you hit the [PAD 15] (PLAY FROM), the MPC1000 will play the sample from the start point.

If you hit the [PAD 16] (PLAY ALL), the MPC1000 will play the whole sample regardless of the start/end point settings.

If you hit any pad from the [PAD 1] to [PAD 12], the MPC1000 will play from the start point to the end point.

## Adjusting the end point

### 01. Select the End field and adjust the end point.

You can change the end point by turning the DATA wheel.

If you press the left/right cursor key while holding the [SHIFT] key, you can select the digit with the DATA wheel.

You can also enter the value directly using the [NUMERIC] key and pads. When you press the [NUMERIC] key, its LED will blink, which indicates you can enter numbers with pads.

### 02. Hit the pad to check the end point.

When you hit the pad, the MPC1000 plays the sample. The playback method varies depending on the pad.

If you hit the [PAD 14] (PLAY TO), the MPC1000 will play the sample until the end point.

If you hit the [PAD 15] (PLAY FROM), the MPC1000 will play the sample from the end point.

If you hit the [PAD 16] (PLAY ALL), the MPC1000 will play the whole sample regardless of the start/end point settings.

If you hit any pad from the [PAD 1] to [PAD 12], the MPC1000 will play from the start point to the end point.

## Zooming in/out of the waveform

With the Fine window, you can zoom in to a part of the waveform and edit the part in details. Press the [WINDOW] key in the TRIM page, when the cursor is either in the St (Start) or End field, and the Fine window will be displayed.



In the Fine windows, the waveform display varies depending on the location of the cursor. When you select the St (Start) field with the cursor, it displays the start point in the center of the window. When you select the end field, it displays the end point in the center.

If you press the [F2] (ZOOM-) key the waveform will be zoomed out, if you press the [F3] (ZOOM+) key, it will be zoomed in.

## LINEAR and LOGARITHMIC displays

The vertical axis indicates the sample's level. Normally, the waveform display is set to LINEAR, which displays the sample level as it is. However, some parts (fade out part etc...) may not be displayed in the waveform if the level is too low. In this case, you can switch to the LOG (logarithmic) display by pressing the [F5] (LOG) key and you can see the parts whose level is low. When you switch to the LOG mode, the display in the [F5] key will change to LINEAR. To switch back to the LINEAR mode, press the [F5] key again.

## Deleting an unnecessary part from a sample (DISCARD)

The MPC1000 plays back only the part of the sample from the start point to the end point. The parts outside these points are not used for the playback. With the Discard function, you can delete these unnecessary parts and save the memory space.

### 01. Adjust the start/end points.

Set the points so that the MPC1000 plays back only the necessary part.

### 02. Press the [F6] (EDIT) key.

The Sample Edit window will be displayed.

### 03. In the Edit field, select DISCARD.

### 04. Press the [F5] (DO IT) key.

The data outside the start/end points will be deleted. The deleted data will be returned to the available memory.

## *Saving part of a sample as a new sample (EXTRACT)*

You can extract the part of the sample set with the start/end points, as a new sample. For example, you can extract the snare sounds from the recorded drum loop and save it as a new sample to use it separately.

**01. Adjust the start/end points.**

Set the desired part with the start and end points.

**02. Press the [F6] (EDIT) key.**

The Sample Edit windows will be displayed.

**03. In the Edit field, select EXTRACT.**

**04. In the New name field, set the name for the new sample.**

**05. Press the [F5] (DO IT) key.**

The part between the start/end points will be saved as a new sample.

## *Sample window features*

Pressing the [WINDOW] key in the sample field bring up the Sample window. In the Sample window, you can make several settings for the selected sample.



### Changing the sample name

**01. In the Sample field in the TRIM page, select a sample that you wish to change the name of.**

**02. Press the [WINDOW] key.**

The Sample windows will open.

**03. In the Sample name field, enter the new name.**

For more information for setting the name, see the "Setting names" section on Page 8.

**04. Press [F4] (CLOSE) key**

It closes the window and goes back to TRIM page.

### Changing the pitch of a sample

In the Tune field, you can set the sample's pitch. The 2 digits in the left is semitones, the 2 digits in the right is cents (100 cents = 1 semitone). You can change the pitch in the PROGRAM mode as well. The changes you made in the Sample window will be applied to the actual sample. So if you assign one sample to several pads, or use one sample in several programs, the change will be applied to all of them. To change the sample of a specific pad, use the PROGRAM mode.

---

## Copying a sample

You can copy a sample and create a new sample.

**01. In the Sample field in the TRIM mode, select a sample to copy.**

**02. Press the [WINDOW] key.**

The Sample window will open.

**03. Press the [F5] (COPY) key.**

The Copy Sample window will open.

**04. In the New name field, set the name to the newly created sample.**

For more information regarding setting the name, see the "Setting names" section on Page 8.

**05. Press the [F3] (DO IT) key.**

The MPC1000 will start copying the sample. To cancel the operation, press the [F4] (CANCEL) key instead.

## Deleting a sample

You can remove a sample from the memory of the MPC1000.

**01. In the Sample field in the TRIM mode, select a sample to delete.**

**02. Press the [WINDOW] key.**

The Sample window will open.

**03. Press [F2] (DELETE) key.**

The Delete Sample window will open.

**04. Press [F5] (DO IT) key.**

This deletes the sample you have selected.

## Deleting all samples

You can delete all the sample data in the memory at one time.

**01. In the TRIM page, select the Sample field and press the [WINDOW] key.**

The Sample window will open.

**02. Press [F2] (DELETE) key.**

The Delete Sample window will open.

**03. Press [F3] (ALL) key.**

The Delete ALL Samples window will open.

**04. Press [F5] (DO IT) key.**

This deletes all the samples from the MPC1000's memory.

## Other editing functions

### NORMALIZE

When you assign a sample recorded at low level, its playback level will also be low. You can set the levels of pads in the MIXER mode, but you have to set some pads to a lower level. With the normalize function; you can increase the sample level to the highest level possible without being distorted.

**01. In the sample field, select the sample you wish to adjust the level of.**

**02. Press the [F6] (EDIT) key.**

The Sample Edit window will be displayed.

**03. In the Edit field, select NORMALIZE.**

**04. Press the [F5] (DO IT) key.**

Normalizing will start. It may take some time to process depending on the length of the sample.

## Setting the loop

The loop feature plays the sample repeatedly. With the loop feature, you can play the sample from the loop point to the end point repeatedly. To activate the loop feature, turn on the loop field, which is located in the upper right corner of the LOOP page. When the loop feature is on, the MPC1000 first plays the part from the start point set in the TRIM page to the end point, and then plays the part from the loop point set in the LOOP page to the end point repeatedly.

*Note: If you set the pad to ONE SHOT in the PROGRAM mode, the MPC1000 will play the sample assigned to that pad like when the loop is off, even when the loop feature is on. When you use the loop feature, set the pad's play mode to NOTE ON. For more information, see the "Playing the sample while the pad is being hit" section in the page 59.*

### Adjusting the loop point

**01. In the TRIM mode, press the [F2] (LOOP) key.**

The LOOP page will be displayed.

**02. Select the Sample field and select a sample you wish to edit.**

The Sample field is located in the upper left corner of the screen, which displays the sample name. It displays the waveform of the selected sample.

**03. Select the Lp (loop) field and adjust the loop point.**

You can change the loop point by turning the DATA wheel.

If you press the left/right cursor key while holding the [SHIFT] key, you can select the digit with the DATA wheel.

You can also enter the value directly using the [NUMERIC] key and pads. When you press the [NUMERIC] key, its LED will blink, which indicates you can enter numbers with pads.

**04. Hit the pad to check the loop point.**

When you hit the pad, the MPC1000 plays the sample. The playback method varies depending on the pad.

If you hit the [PAD 13] (PLAY LOOP), the MPC1000 will play the sample from the loop point to the end point repeatedly.

If you hit the [PAD 14] (PLAY TO), the MPC1000 will play the part before the loop point.

If you hit the [PAD 15] (PLAY FROM), the MPC1000 will play the sample from the loop point.

If you hit the [PAD 16] (PLAY ALL), the MPC1000 will play the whole sample.

If you hit any pad from the [PAD 1] to [PAD 12], the MPC1000 will first play from the start point to the end point, and then play from the loop point to the end point repeatedly.

### Adjusting the end point


**05. Select the End field and adjust the end point.**

*Note: The end point of the loop is the same with the end point of the sample, which is set in the TRIM page.*

*If you change the end point in the LOOP page, the end point in the TRIM page will be changed as well.*

## Zooming in/out of the waveform

With the Loop Fine window, you can zoom into a part of the waveform and edit the part in details. Press the [WINDOW] key in the LOOP page, when the cursor is either in the Lp (loop) or End field, and the Loop Fine window will be displayed.

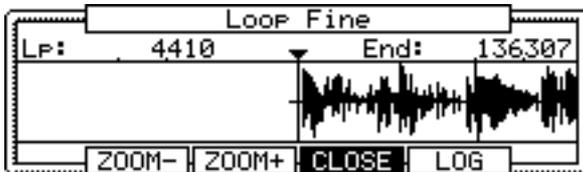

The waveform of the end point is displayed in the left of the waveform display, and the waveform of the loop point in the right, so you can adjust the loop and end points while checking the relationship of the waveform.

If you press the [F2] (ZOOM-) key the waveform will be zoomed out, if you press the [F3] (ZOOM+) key, it will be zoomed in.

## LINEAR and LOGARITHMIC displays

The vertical axis indicates the waveform's level. Normally, the waveform display is set to LINEAR, which displays the sample level as it is. However, some parts (fade out part etc...) may not be displayed as the waveform if the level is too low. In this case, you can switch to the LOG (logarithmic) display by pressing the [F5] (LOG) key and you can see the parts whose level is low. When you switch to the LOG mode, the display in the [F5] key will change to LINEAR. To switch back to the LINEAR mode, press the [F5] key again.

## Linking the loop point to the start point

When you loop the whole sample (ex: loop the phrase sample to the rhythm), it is better to set the start and loop point to the same value so that you can change both points at the same time.

**01. In the LOOP page, select the  $\text{st} \cdot \text{lp}$  (start/loop link) field.**

**02. Turn the DATA wheel and set the field to  $\text{st} \cdot \text{lp}$  (locked by the key).**

Loop point is set to the value of the start point. If you change the loop point later, the start point will be changed as well and vice versa.

If you reset the start/loop link field, you can set the start point and loop point separately.

## Chapter 12 : Program

In this section, you will learn how to edit a program. This is done in the PROGRAM mode, which can be accessed by pressing the [MODE] key and then the [PAD 7] (PROGRAM).

### Creating a program

To create a new program, proceed as follows.

*Note: the MPC1000 is set to load the preset program automatically when turned on. You can set the MPC1000 to start without loading preset program. For more information, see the "Setting the auto load function" on page 83.*

**01. Press the [MODE] key and then the [PAD 7] (PROGRAM).**

When you press the [MODE] key, its LED will blink. When you press the [PAD 7] with the [MODE] key's LED blink, you can enter the PROGRAM mode.

**02. Select the Pgm field and press the [WINDOW] key.**

The Program window will be displayed.

**03. Press the [F3] (NEW) key.**

The New Program window will be displayed.

**04. In the New name field, turn the DATA wheel.**

The name window will be displayed. Set the name for the new program and press the [F5] (ENTER) key. For more information about setting the name, see the "Setting names" section on page 8.

**05. In the New Program window, press the [F5] (DO IT) key.**

The new program will be created.

The new program is "empty", which means it does not have any samples assigned. To play the program, you need to assign samples to the pads in the SAMPLE page of the PROGRAM mode.

### Assigning/Reassigning samples to the pads

You need to assign samples to the pads in the PROGRAM mode so that you can play the samples with the pads. In this section, you will learn how to assign samples to these pads and how to change the current assignment.

**01. Press the [MODE] key and then the [PAD 7] (PROGRAM).**

When you press the [MODE] key, its LED will blink. When you press the [PAD 7] with the [MODE] key's LED blinking, you can enter the PROGRAM mode.

Pressing the [F1] (SAMPLE) key displays the SAMPLE page.

Pgm: Program01	Lvl	Tune	Range
A 1: Sample01	100	+00.00	0-127
0 2:	100	+00.00	0-127
0 3:	100	+00.00	0-127
1 4:	100	+00.00	0-127

SAMPLE | FILTER | PARAMS | NOTE | PURGE

The Pgm field in the upper left corner displays the name of the currently selected program. You can change the selected program in the Pgm field.

**02. Hit the pad you wish to assign a sample to.**

The pad number will be displayed in the left (the section which says A01 in the above picture). The pad number will change according to the pad you hit.

**03. Select the 1 field and select the sample to assign to the pad.**

You can select the sample currently stored in the MPC1000's RAM by turning the DATA wheel.

You can assign samples by selecting 2 through 4 fields. If you assign samples to 2 through 4 fields, you can play several samples by hitting the pad once.

## Playing the sample while the pad is being hit

When you play a sample by hitting the pad, the sample will be played until the end regardless of the length you hit the pad for. This is useful when you play short drum sounds. However, when you play a long sample such as a phrase sample, it is better to set the MPC1000 to play the sample only when you hold the pad. In this section, you will learn how to play the sample when you hit the pad.

**01. In the SAMPLE page of the PROGRAM mode, hit the pad you wish to change.**

The pad number display in the left of the screen will change according to the pad that you hit.

**02. Select the 1 field and press the [WINDOW] key.**

The Play Mode window will be displayed.

**03. Select the Layer 1 field and select the option.**

ONE SHOT     The MPC1000 plays the sample until the end regardless of how long you hold the pad.

NOTE ON     The MPC1000 plays the sample only while you hold the pad.

**04. Press the [F4] (CLOSE) key to close the window.**

It will bring you back to the SAMPLE page.

*Note: when you loop the sample, set the play mode to NOTE ON. When you select ONE SHOT, the loop feature will not work even when it is on.*

## Setting the volume and the tuning for a sample

You can set the volume and the tuning for samples that are assigned to the pads.

**01. In the SAMPLE page of the PROGRAM mode, hit the pad you wish to change its volume and pitch.**

The pad number display in the left of the screen will change according to the pad you hit.

**02. Select the Lvl field.**

Pad	Program	Lvl	Tune	Range
A	1: Sample01	100	+00.00	0-127
a	2:	100	+00.00	0-127

**03. Adjust the volume to the desired level while checking the level by hitting pad.**

**04. Select the Tune field.**

The Tune field has two fields divided by a decimal point. The 2 digits on the left set the tuning by semitones.

The 2 digits on the right change the tuning by cents (100 cents = 1 semitone).

**05. Adjust the pitch to the desired level while checking the tune by hitting pad.**

## Changing the sample volume with velocity

You can control the sample volume by velocity (how hard you hit the pad). With this feature, you can play the pads like real drums; when you hit the pad strongly, the sound will be loud and vice versa.

**01. In the SAMPLE page of the PROGRAM mode, hit the pad you wish to edit.**

The pad number display in the left of the screen will change according to the pad you hit.

**02. Select the Lvl field.**

**03. Press the [WINDOW] key.**

The Amp Envelope window will be displayed.

**04. Select the V>Level field.**

**05. Adjust the field to the desired value while checking the level by hitting the desired pad.**

If you set this field to 0, the sample will be played back at the maximum level regardless of the amount of pressure. The larger you set the value, the bigger the difference of the level will be.

## Playing several samples with one pad

You can assign up to 4 samples to one pad. When you assign more than one sample to a pad, you can play several samples by hitting one pad.

**01. In the SAMPLE page of the PROGRAM mode, select the desired pad.**

The pad number display in the left of the screen will change according to the pad you hit.

The Pgm field in the upper left corner displays the name of the currently selected program. You can change the currently selected program in the Pgm field.

**02. Select the 1 field and select the sample to assign to the pad.**

You can select the samples currently saved in the MPC1000's memory by turning the DATA wheel.

**03. Select the 2 field and select the sample to assign it to the pad.**

When you hit the pad, both samples, which are assigned to the pad in the 1 field and the 2 fields, will be played at the same time.

**04. Assign the samples to the 3 and 4 fields if necessary.**

## Switching between samples using velocity

When you assign more than one sample to a pad, you can switch between samples by the velocity used to hit the pad.

**01. In the SAMPLE page of the PROGRAM mode, select the desired pad by hitting it.**

**02. Assign the samples to the 1 field and the 2 field.**

**03. Select the Range field in the same row with the 1 field, and set the velocity range to trigger the sample assigned to the field.**

Pgm:Program01	Lvl	Tune	Range
A 1:Sample01	100	+00.00	0-127
A 2:Sample02	100	+00.00	0-127

The Range field has two fields to set the upper and the lower limits. You can set the lower limit in the left field and the upper limit in the right field. Here, set the upper limit (the right field) to 63.

**04. Select the Range field in the same row with the 2 field, and set the velocity range to trigger the sample assigned to the field.**

Pgm:Program01	Lvl	Tune	Range
A 1:Sample01	100	+00.00	0- 63
A 2:Sample02	100	+00.00	64-127

In this example, set the lower limit (the left field) to 64.

**05. Check the result by hitting the pad.**

If you hit the pad strongly, the MPC1000 will play the sample assigned to the 2 field. If you hit the pad weakly, the MPC1000 will play the sample assigned to the 1 field.

*Tips: The pressure used to hit the pad will be displayed in the 128 steps (0 to 127). The maximum level is 127. This is the same with the "MIDI velocity", which indicates the pressure used to play the keyboard.*

*Tips: You can also use the Q- Link slider to switch layers. For more information, see the "Q-Link Slider" section on page 44.*

## Setting the envelope for a pad

You can set the envelope for the samples assigned to the pads. You can set the beginning of the sound with the attack time, and the fade out of the sound with the decay time.

**01. In the SAMPLE page of the PROGRAM mode, select the pad you wish to make a setting by hitting it.**

**02. IN the Lvl field, press the [WINDOW] key.**

The Amp Envelope window will be displayed.

Attack field

You can set the sample's attack time in this field. The larger the value, the slower the sound will start. (fade in)

Decay field

You can set the sample's decay time in this field. The larger you set the value, the slower the fade out becomes.

Dcy md (decay modulation) field

You can set the start point that the decay starts the fade out in this field.

START The decay will begin right after the attack time set in the Attack field.

END The start point of the delay will be set so that the fade out will end at the sample's end point.

*Tips: When you work with the drum sounds or phrase sampling, select END. Select START if you need the fade out effect for the phrase.*

## The functions in the Program window

Pressing the [WINDOW] key in the Pgm field brings up the Program window. In the Program window, you can edit the setting for the selected program.



### Changing the program name

**01. In the Pgm field of the PROGRAM page, select a program that you wish to change the name of.**

**02. Press the [WINDOW] key.**

The Program windows will open.

**03. In the Program name field, enter the new name.**

For more information for setting the name, see the "Setting names" section on Page 8.

**04. Press [F4] (CLOSE) key.**

It closes the window and goes back to PROGRAM mode.

## Copying a program

You can copy a program to make a new program.

- 01. In the Pgm field in PROGRAM mode, select the program that you wish to copy.**
- 02. Press the [WINDOW] key.**

The Program window will open.
- 03. Press [F5] (COPY) key.**

The Copy Program window will open.
- 04. In the New name field, set the name for the new program.**

For more information regarding setting the name, see the "Setting names" section on Page 8.
- 05. Press [F3] (DO IT) key.**

Copying the program will start. To cancel the operation, press [F4] (CANCEL) key instead.

## Deleting a program

You can remove a program from the memory of the MPC1000.

- 01. In the Pgm field in PROGRAM mode, select the program that you wish to delete.**
- 02. Press the [WINDOW] key.**

The Program window will open.
- 03. Press [F2] (DELETE) key**

The Delete Program window will open.
- 04. Press [F5] (DO IT) key.**

This deletes the selected program.

## Deleting all programs

You can delete all the program data in the memory at the same time.

- 01. In the PROGRAM mode, select the Pgm field and press the [WINDOW] key.**

The Program window will open.
- 02. Press [F2] (DELETE) key.**

The Delete Program window will open.
- 03. Press [F3] (ALL PG) key.**

The Delete ALL Programs window will open.
- 04. Press [F5] (DO IT) key.**

This deletes all the programs.

## Setting the program change number

You can switch the programs assigned to a track within the sequence by setting the program change numbers in each program. You do not have to set the program change numbers if you do not need to switch the programs . To switch the programs, program change events are used. You can enter these events in the STEP EDIT mode. For more information about entering the program change events, see the "Step editing" section on page 30.

- 01. In the Pgm field of the PROGRAM mode, press the [WINDOW] key.**


The Program window will be displayed.
- 02. Select the MIDI program change field and set the program change number.**

If a track has a program change event with the same number set in this field, the MPC1000 switches the program at the event while playing back the sequence. If you do not wish to switch the program during the playback, set this field to OFF.

## Editing the sound of a sample

Each pad has a parameter to change the sound, which is called “Filter”. You can edit the sound of the sample by editing this parameter. This is done in the FILTER page of the PROGRAM mode.

Each pad has two filters. You can create a more complicated sound by combining these two filters. Also you can link these two filters to make a more powerful filter.

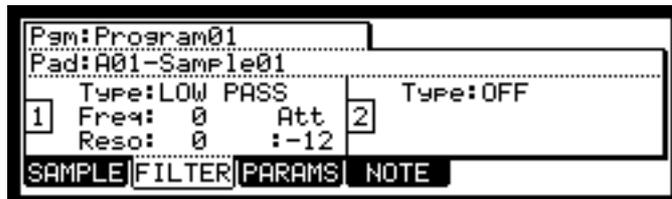

### 01. In the PROGRAM mode, press the [F2] (FILTER) key.

The FILTER page will be displayed. You can select the program to edit in the Pgm field.

### 02. Select the pad you wish to edit for the sound by hitting it.

The Pad field displays the pad number of the selected pad. To the right of the pad number, the name of the sample assigned to the pad is displayed.

### 03. Select the Type field of filter 1 (to the left) and select which filter type to use.

The MPC1000 has several types of filter to edit the sound. With these filters, you can cut or boost the specific frequency of the sound.

- LOW PASS This filter cuts out the high frequencies and passes the low frequencies. This filter is frequently used in the electronic instruments such as synthesizers.
- HIGH PASS This filter cuts out the low frequencies and passes the high frequencies.
- BAND PASS The filter passes the specific frequencies and cuts out the other frequencies.
- OFF No filter is used.

### 04. Select the Freq field and set the cut off frequency.

The cut off frequency is the frequency that triggers the filter. When you select the LOW PASS filter, if you set the cut off frequency too low, the sound will seem dull. This is because most of the higher frequencies of sound are cut off by the filter. When you select the HIGH PASS filter, if you set the cut off frequency too high, most of the lower frequencies are cut off, which results in a more hollow sound.

### 05. Set the Reso field to adjust the resonance of the filter.

If you set the resonance value at a larger value, the frequencies set in the Freq field will be boosted more. It is hard to describe the effect of the resonance, because it differs depending on the cut off frequency and filter type. Experiment several settings in the Type field, Freq field, and Reso field.

*Note: If you notice distorted sound while using the FILTER, you can use the Att parameter to adjust the level of the signal sent to the filter, and remove the unwanted distortion.*

### 06. Set the filter of the filter 2 (to the right) in the same way.

*Tips: You do not have to edit both filter 1 and 2. If you do not need the filter, set the Type field to OFF.*

## Linking the two filters

You can link the two filters to make it as one powerful filter.

To link the filters, select the LINK in the Type field for the filter 2 (in the right).

The MPC1000 will ignore the settings in the Freq field and the Reso field for the filter 2 and apply the same setting as those for the filter 1, which provides you with a powerful filter effect.

## Controlling the sound with velocity

You can control the cutoff frequency of the filter by the velocity used to hit the pad. With this feature, you can control the sound by changing the velocity used to hit the pad.

**01. In the PROGRAM mode, press the [F2] (FILTER) key.**

The FILTER page will be displayed.

**02. Select the desired pad by hitting it.**

The Pad field displays the pad number of the selected pad.

**03. Select any of the Type, Freq, or Reso fields and press the [WINDOW] key.**

The Filter Modulation will be displayed.

**04. Select the V>Freq field.**

The larger value you set, the bigger the change you can make to the sound by hitting the pad.

*Tips: You can set the V>Freq for the filter 1 and 2 separately.*

## Simulating the open/close hi-hat (setting the mute group)

Normally, when you hit a pad when another pad is played back, the samples of these two pads will be played back overlapped. With the mute group function, you can stop the playback of the sample of a pad when you hit another pad. You can simulate the open/close hi-hat; the sound of the open hi-hat will stop when the close hi-hat sound is triggered.

You can use this function by setting two pads to the same mute group.

The pads set to the same mute group will not be played at the same time.

**01. In the PROGRAM mode, press the [F3] (PARAMS) key.**

The PARAMS page will be displayed.

**02. Select one of the pads to set the mute group, by hitting the pad.**

**03. In the Mute group field, select a number.**

You can set any number except OFF.

**04. Select the other pad to set the mute group, by hitting the pad.**

**05. In the Mute group field, set the same number you set for the first pad in the step 3.**

You must set the same number to activate the mute group.

Hit one pad while playing back another. The first sample will be stopped and only the sample of the pad you hit will be played.

*Tips: You can set the mute group to more than two pads.*

## Setting the overlap of the sounds on the same pad (voice overlap)

Normally, when you hit the same pad several times, the same sound will be overlapped. When you use the MPC1000 as a drum machine, you can make the performance sound natural with this feature. However, when you are using a phrase sample, it may be better not to overlap the same sound. With the voice overlap function, you can set the MPC1000 not to overlap the same pad sound.

**01. In the PROGRAM mode, press the [F3] (PARAMS) key.**

The PARAMS page will be displayed.

**02. Select the desired pad by hitting it.**

**03. In the Voice overlap field, select MONO.**

POLY     The MPC1000 overlaps the sound.

MONO     The MPC1000 does not overlap the sound.

If you select MONO, when you hit the pad several times, only the pad that was hit last will be played.

## Delete all the unused samples at the same time (PURGE)

When you use the MPC1000 to record or load several samples, you may have unused samples (samples not assigned to any pads in the program) in the MPC1000's memory. In this case, it is time consuming to browse the contents of the program for unused samples and delete them one by one. With the PURGE function, you can delete all the unused samples at the same time.

**01. In the PROGRAM mode, press the [F1] (SAMPLE) key.**

The SAMPLE page will be displayed.

**02. Press the [F6] (PURGE) key.**

The Purge Samples window will be displayed.

**03. Press the [F5] (DO IT) key.**


All the samples, which are not assigned to the program, will be deleted at the same time.

## Setting a MIDI note number to the pads

The performance data you made by hitting the MPC1000's pads is sent to the internal sampler and sequencer section directly. You can also send the data as a MIDI signal at the same time. The performance data will be sent as MIDI note information. To do so, you need to determine which MIDI note to send out when you hit each pad. Also, when you load sequence data, which was created with the external sequencer, to the MPC1000 and play the internal sampler section, you have to determine which pad to play by the MIDI note date in the sequence data. In this section, you will learn how to assign MIDI notes to the pads.

**01. In the PROGRAM mode, press the [F4] (NOTE) key.**

The NOTE page will be displayed.

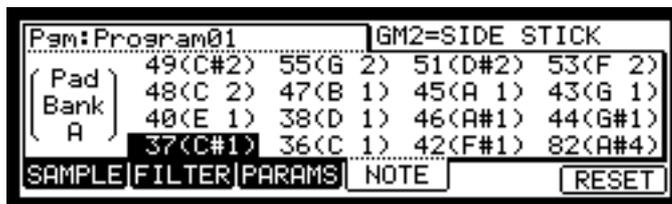

**02. Select the desired pad by hitting it.**

The note number of the selected pad will be highlighted.

**03. Select the note number with the DATA wheel.**

In the upper right corner of the screen, the MIDI GM standard name of the drum, which represents the selected note number, is displayed.

To reset the setting to the default, press the [F6] (RESET) key. All the notes assigned to the pads will be reset to the default setting.

## *Assigning MIDI note numbers to the pads (changing the default setting)*

Normally, when you hit a pad, the MPC1000 will output the MIDI note data assigned to the pad in the program.

However, when the selected track does not have any program assigned, hitting a pad sends out the default MIDI note number, instead of the number set in the program.

When you create a new program, this setting will be used as the default setting. You can change this default pad setting in the MIDI/SYNC mode, which can be accessed by pressing the [MODE] key and then the [PAD 9] (MIDI/SYNC).

**01. Press the [MODE] key and then the [PAD 9] (MIDI/SYNC).**

You can enter the MIDI/SYNC mode.

**02. Press the [F3] (NOTE) key.**

The NOTE page will be displayed.

**03. Select the desired pad by hitting it.**

The note number of the selected pad will be highlighted.

**04. Select the note number with the DATA wheel.**

In the upper right corner of the screen, the MIDI GM standard name of the drum, which represents the selected note number, is displayed.

To reset the setting to the default, press the [F6] (RESET) key. All the notes assigned to the pads will be reset to the default setting.


## Chapter 13 : Mixer

In this section, you will learn about the mixer feature. In the MIXER mode, you can edit several settings while checking the status of the pads graphically. This is done in the MIXER mode, which can be accessed by hitting the [MODE] key and then the [PAD 8] (MIXER).

### Setting the level and pan of the pad

#### 01. Press the [MODE] key and then the [PAD 8] (MIXER).

When you press the [MODE] key, its LED will blink. When you press the [PAD 8] when the [MODE] key's LED is blinking, you can enter the MIXER mode. Pressing the [F1] (L/PAN) key brings up the Level/Pan page.

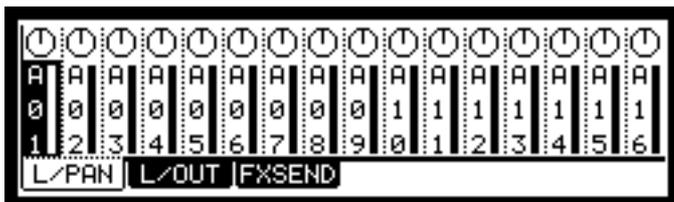

In this picture, each column indicates pad 1 through 16 from the left, and the currently selected pad is highlighted. The bar display on the bottom indicates the current level. Longer bars indicate a higher level.

The circle in the top of the lane indicates the pan setting. The location of the line in the circle indicates the current pan setting.

#### 02. Hit the desired pad.

The lane of the selected pad will be highlighted.

#### 03. Press the down cursor key to set the level, and the up cursor key to set the pan.

When you press the up cursor key, the cursor will move to the pan display, and you can change the pan setting with the DATA wheel. When you press the down cursor key, the cursor will move to the level display and you can change the level setting with the DATA wheel.

### Setting the output for the sample

The MPC1000 has 4 outputs (assignable mix out) as well as the stereo out.

To apply an effect to the specific pad by using the external effector, output the desired pad from the assignable mix out and connect the out to the external effector. Then mix the sound from the stereo out with the effected sound using the external mixer. In this section, you will learn how to change the output of the sample of the pad.

*Note: For more information about connecting to the external effector or mixer and about the operation of them, see the operation manual of these devices.*

#### 01. In the MIXER mode, press the [F2] (L/OUT) key.

The Level/OUT page will be displayed.

Each column indicates pad 1 through 16 from the left and the currently selected pad is highlighted. The display at the top is the field, where you make a setting to send the pad sound to the assignable outputs.

#### 02. Hit the desired pad.

The column for the selected pad will be highlighted.

#### 03. Press the up cursor key.

The Out field to set the output will be selected. You can change the setting by turning the DATA wheel.


- ST The pad will be output to the stereo out.
- 1/2 The pad will be output to the assignable mix out 1/2.
- 3/4 The pad will be output to the assignable mix out 3/4.

*Tips: The output setting is made by stereo pairs. If you wish to output four monaural signals separately from the four assignable mix outs, use the pan settings in the L/PAN page. For example, to use the assignable mix out 1/2 as two mono outs, in the L/OUT page, set the output to 1/2 and set the pan setting of the pad you wish to output from the out 1 and 2 to L and R respectively.*

## Selecting the pad to apply the effect

With the MPC1000, you can apply two effects to one pad sound. To apply effects, you need to set the pad's sample to be sent to the effect section. In this section, you will learn how to send the pad sound to the effect section.

*Tips: This picture displays the signal flow of the sample sound to the stereo out through the effect section. As you can see in this picture, you can apply the effects only to the pads whose outputs are set to the stereo out. You cannot apply the effects to the pads whose outputs are set to the assignable mix outs.*

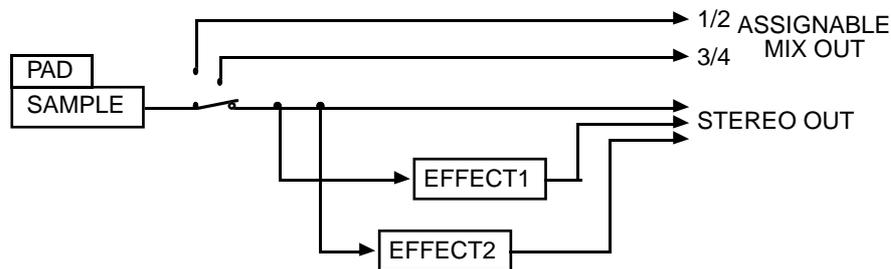

### 01. In the MIXER mode, press the [F3] (FXSEND) key.

The FX SEND page will be displayed.

Each column indicates pad 1 through 16 from the left and the currently selected pad is highlighted. The display at the top indicates the output setting. The bar display on the bottom indicates the current send level. The level setting is the same as the setting in the L/PAN page.

### 02. Hit the desired pad.

The lane of the selected pad will be highlighted.

### 03. Press the UP cursor key.

The FX Send field for the effect setting will be selected. You can change the setting by turning the DATA wheel.

OF No effect will be used.

1 The effect 1 will be used. The Pad sound will be sent to the FX1 of the effect section.

2 The effect 2 will be used. The Pad sound will be sent to the FX2 of the effect section.

## Chapter 14 : Effect

In this section, you will learn how to select and edit effects. The MPC1000 has two stereo effects and one master effect. To apply the effects to a specific pad sound, use the two stereo effects. To apply effects to the entire sound, use the master effect.

*Note: The effect settings will be saved with the ALL file, which is created when you save the data by selecting SAVE ALL SEQS & SONGS.*

### *Applying effects to a specific pad sound*

You can apply effects to the selected pad sound. Here, let's apply BIT GRUNGER to the selected pad sound.

**01. Press the [MODE] key and then the [PAD 12] (EFFECT).**

The EFFECT mode will be displayed.

**02. Press the [F1] (SELECT) key.**

The SELECT page will be displayed.

**03. Move the cursor to the FX1 type field and turn the DATA wheel, or press the [WINDOW] key.**

The Select Effect window will be displayed. You can select the effect type by turning the DATA wheel.

**04. Select BIT GRUNGER and press the [F5] (SELECT) key.**

This closes the window and goes back to the SELECT page.

BIT GRUNGER is selected in the FX1 type field.

**05. Press the [MODE] key and then the [PAD 8] (MIXER) to display the MIXER mode.**

You select the pad for the effect in the MIXER mode.

**06. Press the [F3] (FXSEND) key.**

The FX SEND page will be displayed.

**07. Hit the desired pad.**

This pad will be selected and its display will be highlighted.

**08. Press the UP cursor key to select the FX Send field.**

The FX Send field for the effect setting will be selected.

OF No effect will be applied to the pad.

1 The effect of the FX1 will be applied to the pad.

2 The effect of the FX2 will be applied to the pad.

Here, select 1.

When you hit the selected pad, the processed sound will be played.

The effected sound will be output from the stereo out.

*Tips: you can apply the effect to several pads. The effect of the FX 1 is applied to all the pads whose FX SEND are set to 1 In the FX SEND page of the MIXER mode.*

*Tips: you can set the effects in details. For more information about detailed editing of each effect, see the "Editing effects" section.*

**Note:** You cannot apply the effects to the pads whose outputs are NOT set to ST (stereo out) in the L/OUT page of the MIXER mode.

Like FX 1, you can use the effects of the FX 2 by selecting an effect in the FX2 type field of the SELECT page in the MIXER mode and setting the FX SEND field to 2 in the FX SEND page of the MIXER mode.

## Applying reverb

When you select Reverb in the FX type, you need to apply this effect to a specific pad in a slightly different way. Here, assume you have selected REVERB in the FX2 type field.

**01. Select REVERB in the FX2 type field and then select the FX SEND page of the MIXER mode.**

**02. Hit the desired pad.**

**03. Press the up cursor key to select the FX SEND field and select 2 in the field.**

You cannot apply the reverb effect by just selecting the FX SEND. To apply the effect, you need to adjust the signal level sent to the reverb in the send level field.

**04. To adjust the signal level sent to the reverb, press the down cursor key and turn the DATA wheel.**

This field is called the Send level field, and it displays the value as the bar. The larger the signal level is, the greater the reverb effect becomes.

*Tips: You can adjust the send level field to adjust the amount of the reverb for each pad, individually.*

## Applying effects of the FX2 to the effect sound of the FX1

Normally, the effect sound is sent to the stereo out directly. For example, when using the PHASE SHIFTER in the FX1 and REVERB in the FX2, you cannot apply REVERB in the FX2, since the effect sound of the FX1 is sent to the stereo out. By using the To FX2 field, you can send the output of the FX1 to the FX2 to apply the effect of FX2.

**01. In the SELECT page of the EFFECT mode, set the To FX2 field to YES.**

The sound from the FX1 will be sent to the FX2.

If you set 1 to a pad in the FX SEND page of the MIXER mode, you can apply the effects of both FX 1 and 2 to them.

If you set 2 to a pad in the FX SEND page of the MIXER mode, you can apply the effects of FX2.

## Editing effects

In this section, you will learn how to edit effects.

When you press the [F2] (FX1) key in the EFFECT mode, the FX1 page will be displayed, where you can edit the effects selected in the FX1. Likewise, when you press the [F3] (FX2) key in the EFFECT mode, the FX2 page will be displayed, where you can edit the effects selected in the FX2. Also, you can change the effects assigned to FX1 and 2 by selecting the effect type in the FX type field, which is located at the top of each page.

*Tips: If you press the [F5] (BYPASS) key in the FX1 and FX2 pages, you can turn off the effects temporarily. This is useful to compare the effected sound and the original sound.*

Below is a brief overview on each effect.

### BIT GRUNGER

This effect adds distortion to the sound to lower the quality of the sound and create the lo-fi sound.

Depth field        Sets the amount to lower the sound quality. The larger the value is, the more lo-fi sound will be created.

## 4 BAND EQ (4 band equalizer)

This effect is the equalizer, which can adjust the 4 frequency bands to correct or process the sound.

Low/Hi EQ is a shelving type equalizer, which boosts or cuts the frequencies higher or lower than the specified frequency.

The Mid1/2 is a peaking type equalizer, which boosts or cuts the specified frequency and the harmonics surrounding the frequency.

Low frq field	You can set the low frequency range.
Low Gain field	You can adjust the gain of the low frequency range.
Mid1 frq field	You can set the frequency of the mid frequency range 1.
Mid1 Gain field	You can set the gain of the mid frequency range 1.
Mid1 Q field	You can set the band range of the mid frequency range 1.
Mid2 frq field	You can set the frequency of the mid frequency range 2.
Mid2 Gain field	You can set the gain of the mid frequency range 2.
Mid2 Q field	You can set the frequency range of the mid frequency range 2.
High frq field	You can set the frequency of the high frequency range.
High Gain field	You can set the gain of the high frequency range.

## COMPRESSOR

This effect compresses sound which exceeds a certain level, to make the sound levels even.

Threshold field: any signals, which exceed the level set here, will be compressed. The lower the value is, the better the result will be.

Gain field	You can adjust the overall level here. As you lower the value in the Threshold field, the overall level is also lowered. You can adjust the final level in this field.
Ratio field	You can set the compression ratio here. The larger you set the value, the greater the compression becomes and you can make the overall level even.
Attack field	You can set the time it takes to start the compression after the incoming signal exceeds the level set in the Threshold field.
Release field	You can set the time it takes to finish the compression after the incoming signal falls below the level set in the Threshold field.

## PHASE SHIFTER

This effect adds sounds with different phases to the original sound, to create a swelling or rotating sound.

Sweep rate field	You can set the speed of the modulation here.
Offset L/R field	You can set the amount of the phase shift of L and R. If you set this field to 00, L and R will be in sync. As you increase the value, the phases of the L and R will shift and you can create the complicated effect.
Feedback field	You can set the feed back level from the output to the effect input. The effect will be boosted and create more a unique sound.
Sweep width field	You can set the depth of the modulation here.
Mid point field	You can set the center frequency for the phase shift. If you set this value high, the phase shift will be applied around the high frequency range.
L/R sweep sync field	If you set it to ON, the Sweep rate will be set at the same cycle for both the Left and Right. If you set to OFF, the sweep rate of the right channel will be set slightly higher than that of the left channel. You will be able to create a more complicated effect.

## TREMOLO

TREMOLO changes the sound level periodically to add a periodic modulation to the amplitude of sound.

Rate field	You can set the speed of the modulation.
Depth field	You can set the depth of the modulation.
Invert field	You can set the inversion of the L/R modulation. When set to OFF, both L and R will be modulated in the same way. When set to ON, L and R will be inverted to create a more complex effect.

## FLYING PAN

This effect changes the normal position of the sound periodically and creates the effect , in which it makes the sound feel like is rotating around your head.

Sweep rate field	You can set the speed of the sound rotation. The higher the value is, the faster the rotation becomes.
Width field	You can set the shift range of the position (move range). If you set this value higher, the position of the sound changes more drastically.
Sweep curve bend field	You can set the type of the movement of the position.
Pan low field	You can set how to move the position. If you select LINER, the position moves horizontally. If you select ROTATE, the position rotates in circle.

## REVERB

This effect adds the reverberation to the original sound, to give the spatial effect and depth to the sound.

Input filter field	You can set the cut off frequency of the low-pass filter that you wish to apply to the input signal.
Time field	You can set the length of the reverb. If you set this value higher, you can enhance the special scope of the sound.
HF damp field	You can set the quality of the reverb. The lower value creates harder sounds, and the higher value creates a softer sound.
Reverb level field	You can set the level of the reverb.

## CHORUS and FLANGER

FLANGER adds modulated delay sounds to the original sound to give a ringing effect to the sound.

Both CHORUS and FLANGER add modulated delay sounds to the original sound to give a ringing effect to the sound. The settings are the same for both effects.

*Note: You can select CHORUS and FLANGER only in the FX2.*

Slow sweep rate field	You can set the modulation speed here.
Slow sweep depth field	You can set the depth of the modulation here.
Vibrato rate field	You can set the detailed speed of the modulation here.
Vibrato depth field	You can set the detailed depth of the modulation here.
Feedback field	You can set the feed back level from the output to the effect input. The effect will be boosted and create a more unique sound.
L/R sweep sync field	If you set it to ON, the Sweep rate will be set at the same cycle for both the Left and Right. If you set it to OFF, the sweep rate of the right channel will be set slightly higher than that of the left channel and you can also create a more complicated effect.

## Using the master effect

The master effect is applied to the overall sound from the stereo out. You can use it separately from the effects of FX1 and FX2. The effects you can use as the master effect are a 4 band equalizer and compressor. With these effects you can add the final touches to the sound.

### 01. In the EFFECT mode, press the [F4] (MASTER) key.

The MASTER page will be displayed. In the MASTER page, you can edit the master effect.

### 02. To use the 4 band EQ, select ON in the EQ field.

### 03. To use the compressor, select ON in the Compressor field.

*Note: If you use neither effects, set these fields to OFF.*

## Editing the master effects

In this section, you will learn how to edit the master effects in details.

### 4 band EQ

```
EQ: OFF
-----
H: 1000 +00
1: 0500 +00 00
2: 0250 +00 00
L: 0100 +00
```

This is the 4 band EQ (equalizer), which consists of two shelving type Eqs for a high frequency and a low frequency and a 2 band parametric EQ. With the equalizers, you can boost or lower a specific frequency to control the sound from the stereo out.

### H field, L field

You can set the frequency and the gain of the equalizers for high frequency (H) and low frequency (L). You can set the frequency in the left field and the gain in the right field.

If you increase the gain in the H field, you can boost the frequency that is higher than the selected frequency.

If you lower the gain, you can lower the level of the frequency that is higher than the selected frequency.

If you increase the gain in the L field, you can boost the frequency lower than the selected frequency. If you lower the gain, you can lower the level of the frequency lower than the selected frequency.

### 1 field, 2 field

You can set the parametric equalizer, which can control the sound around the selected frequency.

The field has the settings for frequency, gain and Q (from the left).

If you increase the gain, you can boost the sound around the selected frequency. If you lower the gain, you can lower the level of the sound around the selected frequency.

Q setting determines how to change the sound around the selected frequency when you change the gain setting. If you set this value larger, only the narrow range around the selected frequency will be changed. As you lower the value, the range will be wider.

### Compressor

This effect compresses the signal level that exceeds the selected level to make the volume even as a whole.

The fields are the same as those of the COMPRESSOR, which is selected in the FX1 and 2.

## *Editing the effect set*

The effect set is a set of FX1/FX2/MAIN effect types and their settings. Each effect set can have different settings individually. You can switch the effect sets in the Eff field of the SELECT page.

*Tips: You can switch the effect sets within the sequence by entering the EFFECT SELECT event to the sequence. For more information, see the "Step editing" section on page 30.*

In this section, you will learn how to change the name of, copy, and reset the effect set.

### Changing the name of the effect set

**01. In the Eff field of the SELECT page, press the [WINDOW] key.**

The Effect Set window will be displayed.

**02. In the Effect name field, turn the DATA wheel.**

The Name window will be displayed and you can change the effect set name. For more information about the operation in the Name window, see page 8.

**03. In the Name window, press the [F5] (ENTER).**

It confirms the name and closes the Name window.

### Copying the effect set

**01. In the Eff field of the SELECT page, press the [WINDOW] key.**

The Effect Set window will be displayed.

**02. In the Effect Set window, press the [F5] (COPY) key.**

The Copy Effect Set window will be displayed.

**03. In the Eff field (up), select the source effect set.**

**04. In the Eff field (down), select the destination effect set.**

**05. Press the [F3] (DO IT) key.**

The effect set selected in the Eff field (up) will be copied to the effect set selected in the Eff field (down). Pressing the [F4] (CANCEL) key cancels the operation and closes the window.

### Resetting the effect set

You can reset the setting for the effect set to the default settings.

**01. In the Eff field of the SELECT page, press the [WINDOW] key.**

The Effect Set window will be displayed.

**02. In the Effect Set window, press the [F2] (RESET) key.**

The Reset Effect Setting window will be displayed.

**03. In the Eff field, select the effect set you wish to reset.**

**04. Press the [F5] (DO IT) key.**

The settings of the effect set selected in the Eff field will be reset to the default settings. Pressing the [F4] (CANCEL) key cancels the operation and closes the window.

## Chapter 15 : Save / Load

The sample or sequence data you made in the MPC1000 will be deleted when you turn off the unit. If you wish to keep the data, you need to save it to a memory card. You can use the saved files again by loading them into the MPC1000.

About a memory card:

The MPC1000 can use the memory card called “compact flash”.The MPC1000 comes with one 32MB (megabyte) compact flash card. You can use any memory card that supports compact flash.

*Tips: MB indicates the size of the memory card. The larger this number is, the more data you can store.*

*Note: The size of the compact flash card that MPC1000 can handle is from 32MB to 2GB.*

*Note: When you use a new compact flash card with the MPC1000, you need to format the card before use it.*

*For more information about formatting the card, see the “Formatting the memory card” section on page 84.*

### Saving the data

In this section, you will learn how to save the data. This is done in the SAVE page, which can be accessed by pressing the [MODE] key and then the [PAD 3] (SAVE).



#### Selecting the destination

You can set the location in the memory card to save the data. Here, you will learn how the data will be saved in the memory card and how to select the destination.

#### 01. Insert a compact flash card in the memory card slot, and press the [MODE] key and then the [PAD 3](SAVE).

The SAVE page will be displayed.

*Note: Make sure that you insert the compact flash card completely in the slot.*

#### 02. In the Save to field, select MEMORY CARD.

#### 03. Select the To field and press the [WINDOW] key.

The Directory window will be displayed. In this window, you can browse the contents of the memory card. The files in the memory card are saved in the directories hierarchically, like other computer files. The folder selected in the To field is displayed in the left of the directory list, and the contents of the folder is displayed in the right of the list. In the picture above, the ROOT folder is selected and the folder has an AUTOLOAD folder.



#### 04. Move through the directory using the left/right cursor keys.

You can use left/right cursor keys to move through the directories. For example, in the picture above, if you press the right cursor key to select the AUTOLOAD folder and then press the right cursor key again, the AUTOLOAD folder will be displayed in the left and the contents of the AUTOLOAD folder will be displayed in the right. If you press the left cursor key, the cursor will move to the left list, and if you press the left cursor key again, the upper directory will be selected and displayed.

*Tips: The ROOT folder indicates the top directory of the memory card. There is no other upper directory.*

#### 05. Select the folder you wish to save the data to.

The folder whose icon is highlighted (in black) in the left list will be selected as the destination. Even when a folder is selected by the cursor in the right list, the folder in the left list will be selected.

**06. Press the [F4] (CLOSE) key.**

This closes the window. The folder selected in the Directory window is selected in the To field.

*Tips: You can also select the destination folder in the To field of the SAVE page. You can select a folder in the same directory that the currently selected folder is located in, by turning the DATA wheel in the To field. If the currently selected folder has a folder inside, you can select that folder (in the lower directory) by pressing the right cursor key. You can also move to the upper directory by pressing the left cursor key.*

## Creating a new folder

You can create a new folder and select it as the destination.

**01. In the Directory window, select a directory you wish to create a new folder to.**

The new folder will be created in the folder currently selected in the left list.

**02. In the Directory window, press the [F5] (NEW) key.**

The Name window will be opened. Enter the folder name in the window.

For more information about setting the name, see the "Setting names" section on page 8.

**03. In the Name window, press the [F5] (ENTER) key.**

The new folder will be created in the selected directory. In the Directory window, the new folder is selected.

## Saving a sample

You can save samples one by one.

**01. In the To field of the SAVE page, select the destination folder.**

**02. In the Type field, select SAVE A SAMPLE.**

**03. In the Item field, select the sample to save.**

You can select the sample data in the memory by turning the DATA wheel.

**04. Press the [F6] (DO IT) key.**

The MPC1000 starts saving the sample.

**When the destination folder has the data with the same name**

If the destination folder already has the data with the same name, the File Exists window will be displayed.

To cancel the operation, press the [F4] (CANCEL) key.

To overwrite the data in the memory card with the new data, press the [F2] (REPLAC) key. The data in the memory card will be replaced with the new data.

Pressing the [F5] (RENAME) key brings up the Name window, where you can change the name of the file you are about to save. When you enter the name in the Name window and press the [F5] (ENTER) key, the MPC1000 will start to save the data.

## Saving a program

You can save a program and the samples used for the program.

**01. In the To field of the SAVE page, select the destination folder.**

**02. In the Type field, select SAVE A PROGRAM.**

**03. In the Item field, select the program to save.**

You can select the program data in the memory by turning the DATA.

**04. Press the [F6] (DO IT) key.**

The Save a Program window will be displayed.

**05. In the Save a Program window, make settings for each field.**

### Save field

You can choose whether or not to save the sample data (sounds) with the program data.

- |              |  |
|--------------|--|
| WITH SAMPLES | The MPC1000 will save the program data and the samples used for the program. Normally you should select this option. When you load the saved program, the MPC1000 will load the samples automatically.                                   |
| PROGRAM ONLY | The MPC1000 will save only the program data. It does not save the sample data. When you are sure that the samples used for the program are in the selected folder, you can reduce the time to save the data by selecting this operation. |

### Replace same samples field

You can set how to handle files when the destination location already has a sample with the same name.

- |     |  |
|-----|--|
| NO  | The MPC1000 will not save the file with the same name. If you loaded the data from the memory card and edited only the program, select NO.                                   |
| YES | The MPC1000 will overwrite the data with the new data, which you are about to save. If you have loaded the data from the memory card and edited the sample data, select YES. |

### 06. Press the [F5] (DO IT) key.

The MPC1000 will start to save the data.

*Note: If the destination folder already has the data with the same name, the File Exists window will be displayed. For more information about the Existing window, see the "Saving a sample" section on page 76.*

## Saving all the programs and the samples at the same time

You can save all the programs and the samples in the MPC1000 at the same time.

### 01. In the To field of the SAVE page, select the destination folder.

### 02. In the Type field, select SAVE ALL PROGRAMS &SAMPLES.

### 03. Press the [F6] (DO IT) key.

The Save ALL Programs window will be displayed.

### 04. In the Save a Program window, make the settings for each field.

#### Make new folder field

When you save the data you can create a new folder, inside in the current folder selected in the To field, and save the data in the new folder. When you use SAVE ALL PROGRAMS &SAMPLES, a lot of data may be saved.

With the Make new folder option, you can easily create a folder for the data you wish to save.

- |     |   |
|-----|---|
| NO  | The MPC1000 will save the data in the selected folder. A new folder is not created. |
| YES | The MPC1000 will create a new folder and save the data in that folder.              |

If you select NO, the Replace same files field will be displayed. If the destination folder already has the file with the same name, select NO to cancel the operation and select YES to replace the data in the memory card with the new data.

When you select YES, the Folder name field will be displayed. Enter the folder name in this field.

### 05. Press the [F5] (DO IT) key.

The MPC1000 will start saving the data.

## Saving a sequence

You can save sequences one by one.

### 01. In the To field of the SAVE page, select the destination folder.

### 02. In the Type field, select SAVE A SEQUENCE

### 03. In the Item field, select the sequence that you wish to save.

You can select the sequence data in the memory by turning the DATA wheel.

**04. Press the [F6] (DO IT) key.**

Save a Sequence window will be displayed.

**05. In the Type field, select the file type.**

SEQ The sequence will be saved as a MPC1000 file. The data specific to the MPC1000 will be saved with the sequence. Normally, select this.

MID The sequence will be saved as the Format 1 of SMF (Standard MIDI File). The SMF is a file format set by MIDI standard. If you wish to load the MPC1000's sequence data to another sequencer, select this option. However, the data specific to the MPC1000 can not be saved.

**06. Press the [F5] (DO IT) key.**

The MPC1000 will start saving the data.

*Note: If the destination folder already has the data with the same name, the File Exists window will be displayed.*

*For more information about the Existing window, see the "Saving a sample" section on page 76.*

### Saving all the sequences and the songs at the same time

You can save all the sequences and the songs in the MPC1000 at the same time.

The MPC1000 will save the data as one file called "ALL file", which include all the sequence and the songs, instead of saving individual sequences and song files. When you load the ALL file, you can reset all the sequences and the songs to the status when they are saved.

The ALL file includes the effect set data.

**01. In the To field of the SAVE page, select the destination folder.**

**02. In the Type field, select SAVE ALL SEQS AND SONGS.**

**03. Press the [F6] (DO IT) key.**

The Save ALL Seqs & Songs window will be displayed.

**04. In the File name field, select the file name to save.**

**05. Press the [F5] (DO IT) key.**

The MPC1000 will start saving the data.

### Saving all the data in the memory at the same time

You can save sample/program/ALL files at the same time.

When you save the data, a project file will be saved, as well as a sample, program and ALL files. The project file does not have actual sample or sequence data, but it has the information about the sample/program/ALL files that are saved when you save the data. When you load the project file, the sample/program/ALL files saved with the project file will be loaded automatically and set the MPC1000 to the same status when you saved the data.

For example, if you select SAVE ENTIRE MEMORY when you save the data after finish working on it for the day, you can start the MPC1000, the next day, from where you finished the previous day.

**01. In the To field of the SAVE page, select the destination folder.**

**02. In the Type field, select SAVE ENTIRE MEMORY.**

**03. Press the [F6] (DO IT) key.**

The Save Entire Memory window will be displayed.

**04. In the Project name field, select the name of the project file to save.**

**05. In the Replace same files field, set how to handle the file when you already have the data with the same name as the loading file in the unit.**

NO The MPC1000 will not save the file with the same name.

YES The MPC1000 will overwrite the data by with new file.

**06. Press the [F5] (DO IT) key.**

The MPC1000 will start saving the data.

## Creating the Autoload folder

When you create an AUTOLOAD folder on the memory card, the MPC1000 will load the contents of the AUTOLOAD folder automatically when you switch on the unit with the memory card in the card slot. You can load the most frequently used drum set program or sequence data automatically.

### 01. In the Type field, select SAVE ENTIRE MEMORY.

AUTOLOAD folder will be created in the ROOT folder, which is located at the top directory, so you do not have to select the destination folder.

### 02. Press the [F6] (DO IT) key.

The Save Entire Memory window will be displayed.

### 03. Press the [F2] (A.LOAD) key.

The Save Auto load File window will be displayed.

### 04. Press the [F5] (DO IT) key.

The MPC1000 will create the AUTO LOAD folder in the ROOT folder and save all the data in that folder.

If the ROOT folder already has the AUTOLOAD folder, the Autoload Folder Exists window will be displayed.

To replace the current AUTO LOAD folder with a new one, press the [F2] (REPLAC) key. In this case, the contents of the current AUTOLOAD folder will be deleted.

To keep the current AUTOLOAD folder, press the [F4] (CANCEL) key to cancel the operation, go to the Directory folder and change the name of the current AUTOLOAD folder.

## Loading a file

In this section, you will learn how to load a file from the memory card. This is done in the LOAD page, which is accessed by pressing the [MODE] key and then the [PAD 2] (LOAD).



## Selecting a file

To select a file to load, proceed as follows:

### 01. Press the [MODE] key and the [PAD 2] (LOAD).

The LOAD page will be displayed. To load a file from the memory card, insert the compact flash card in the memory card slot.

*Note: Make sure that you insert the compact flash card completely in the slot.*

### 02. Select the LOAD from field and select the memory you wish to load the data from.

**INTERNAL MEMORY** The MPC1000 will load the data from the internal preset memory. Normally, when you switch on the MPC1000, it will load the data from the preset memory, but you can load these files individually by selecting INTERNAL MEMORY in this field.

**MEMORY CARD** The MPC1000 will load the files from the memory card in the card slot.


### 03. Select the folder field or File field, and press the [WINDOW] key.

The Directory window will be displayed. You can also select a file in the folder, and in the File field of the LOAD page, but it is easier to use the Directory window, which displays the files in the list.

In the Directory window, you can browse the files in the memory. The files in the memory card are saved in the directories hierarchically, like the other computer files.



The folder selected in the folder field is displayed in the left of the directory list, and the files selected in the File field are displayed in the right of the list. In the picture above, the SNARE LOW file in the AUTOLOAD folder is selected. Each file has an icon according to their types.

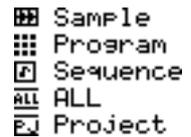

**04. Move through the directory using the left/right cursor keys.**

You can use left/right cursor keys to move through the directories. For example, when a folder is selected in the right list, if you select the folder with the cursor and press the right cursor key, the selected folder will be moved to the left list and the contents of that folder will be displayed in the right. If you press the left cursor key, the upper directory will be displayed.

*Tips: The ROOT folder is the top directory of the memory card. There is no other directory above the ROOT folder.*

**05. Select the file you wish to load.**

**06. Press the [F5] (LOAD) key.**

The MPC1000 will start loading the data. The next procedures differ depending on the type of selected file.

*Tips: You can also select files and switch directories in the File field of the LOAD page. You can select a folder at the same directory level that the currently selected folder is located in, by turning the DATA wheel in the File field. If you have selected a folder in the File field, you can move to the lower directory by pressing the right cursor key. You can also move to the upper directory by pressing the left cursor key in the File field.*

About View field...

The View field of the LOAD page is normally set to ALL FILES to display all types of the files in the File field or Directory window. You can change the setting of the View to display only the selected type of files. It is useful when you need to find a file from a large list of the files. Select the View field and select the file type to display by turning the DATA wheel.

Loading a sample

You can load a sample file one by one. You can also assign the sample to the pad.

**01. Select a sample file and load it. The Load a Sample window will be displayed.**

You can listen to the sample by pressing the [F2] (PLAY) key.

To cancel the loaded sample, press the [F4] (DSCARD) key.

**02. Select the pad to assign the selected sample by hitting it.**

When you hit the pad, the pad number will be displayed in the Assign to pad field.

If you do not wish to assign the sample to any pad, select OFF by turning the DATA wheel to the left.

**03. Press the [F5] (KEEP) key.**

The loaded sample will be assigned to the selected pad.

Loading a program

You can load a program file one by one.

**01. Select a program file and load it. The Load a Program window will be displayed.**

To cancel the operation, press the [F4] (CANCEL) key.

**02. In the Load field, select if you wish to load the samples as well.**

WITH SAMPLES      The MPC1000 will load the samples used for the program as well. Normally select this option.

PROGRAM ONLY      The MPC1000 will load only the program file. It does not load the samples. Select this option when you wish to create a new program by assigning different samples to the saved program.

**03. If you selected WITH SAMPLES in the Load field, make settings in the Replace same samples in memory field.**

You can set how to handle the file when you already have the data with the same name as the loading file in the unit.

- NO The MPC1000 will not load the sample with the same name.  
 YES The MPC1000 will overwrite the data by the new data.

**04. Press the [F5] (DO IT) key.**

The MPC1000 will start loading the data.

## Deleting the data in the memory before loading

When you press the [F2] (CLEAR) key instead of the [F5] (DO IT) key in step 4., you can clear the MPC1000's memory and load only the selected program in the memory.

**01. In the step 4, press the [F2] (CLEAR) key instead of the [F5] (DO IT) key.**

The CAUTION window will be displayed. If you press the [F5] (DO IT) key, the MPC1000 will start loading the program after it clears all its internal memory.

*Note: If you do this operation, all the data saved in the unit will be deleted.*

## Loading a sequence

You can load a sequence file one by one.

**01. Select the sequence file and load it. The Load a Sequence window will be displayed.****02. In the Load into field, select the destination sequence number.**

Select the sequence number to load the data to.

**03. Press the [F5] (DO IT) key.**

The MPC1000 will start loading the data.

## Loading the ALL file

You can load the ALL file, which has sequence and song data. When you load the ALL file, all the sequences and songs, which are currently in the MPC1000, will be replaced by the new data.

**01. Select the ALL file and load it. The Load ALL (SEQS&SONGS) File window will be displayed.****02. Press the [F5] (DO IT) key.**

The MPC1000 will start loading the data.

## Loading an individual sequence from the ALL file

You can load an individual sequence from the ALL file.

**01. Select the ALL file and load it. The Load ALL (SEQS&SONGS) File window will be displayed.****02. Press the [F3] (SEQ) key.**

The Load a Sequence window will be displayed.

**03. In the Load file field, select the sequence to load.**

In the Load file field, you can select a sequence data in the ALL file.

**04. In the Load into field, select the destination sequence.**

Select the sequence number to load the data to.

**05. Press the [F5] (DO IT) key.**

The MPC1000 will start loading the data.

### Loading only the effect set from the ALL file

The ALL file has effect set file, which has the effect setting information. You can load only the effect set from the ALL file.

**01. Select the ALL file and load it. Load ALL (SEQS&SONGS) File window will be displayed.**

**02. Press the [F2] (EFFECT) key.**

The Load Effect File window will be displayed.

**03. In the Load file field, select the effect set to load.**

**04. In the Load into field, select the destination effect set.**

Select the effect set number to load the data to.

If you select ALL in the Load file field, the current effect set in the unit will be replaced by the data from the ALL file.

**05. Press the [F5] (DO IT) key.**

The MPC1000 will start loading the data.

### Loading a folder

You can load a folder and load all the files within the folder at the same time. You can load program, sample, and ALL files.

**01. Select a folder and load it. The Load Folder window will be displayed.**

**02. Make a setting in the Replace same files in memory field.**

You can set how to handle the file when you already have the data with the same name as the loading file in the unit.

NO The MPC1000 will not load the file with the same name.

YES The MPC1000 will overwrite the data in the unit by the loaded file.

**03. Press the [F5] (DO IT) key.**

The loading will begin.

### Loading the folder after deleting the data in the memory

When you press the [F2] (CLEAR) key instead of the [F5] (DO IT) key in step 3, you can clear the MPC1000's memory and load the selected folder.

**01. In the step 3, press the [F2] (CLEAR) key instead of the [F5] (DO IT) key.**

The CAUTION window will be displayed. If you press the [F5] (DO IT) key, the MPC1000 will start loading the folder after it clears all its internal memory.

*Note: If you do this operation, all the data saved in the unit will be deleted.*

*Note: If the folder has several ALL file, the MPC1000 will load only one of them.*

### Loading a project

When you use SAVE ENTIRE MEMORY mode to save the data, the MPC1000 will load the project file that will be created. When you load a project file, all the data currently saved in the unit will be overwritten by the data that the project file will load.

**01. Select a project file and load it. The CAUTION window will be displayed.**

**02. Press the [F5] (DO IT) key.**

The loading will begin.

---

## Renaming a file

You can change the name of the file in the memory card.

**01. In the To field of the SAVE page, press the [WINDOW] key.**

The Directory window will be displayed.

**02. Select the desired file with a cursor key.**

You can move through directories with the left/right cursor keys.

**03. Press the [F3] (RENAME) key.**

The Name window will be displayed.

**04. Enter the new name and press the [F5] (ENTER) key.**

For more information about setting the name, see the "Setting names" section on page 8.

*Note: If you change the file name, the MPC1000 may not be able to load the file properly. For example, the samples used for a program are saved in the program file as the sample name. If you change the name of the sample file, the MPC1000 cannot find it when loading the program.*

## Deleting a file

You can delete the files in the memory card.

**01. Open the Directory window in the SAVE page.**

**02. Select the desired file with a cursor key.**

You can move through the directories with left/right cursor keys.

**03. Press the [F2] (DELETE) key.**

The Delete File window will be displayed.

**04. Press the [F5] (DO IT) key.**

The selected file will be deleted.

*Note: You can select a folder and delete it. If you delete a folder, all the files in that folder will be deleted.*

## Setting the auto load function

In default, the auto load function, which loads the preset sounds and demo sequence automatically when you switch on the MPC1000, is activated. You can deactivate this function so that the MPC1000 will not load anything when switched on.

**01. Press the [WINDOW] key in the LOAD from field of the LOAD page.**

The Load Setup window will be displayed.

**02. In the Autoload field, set the field to OFF.**

**03. Press the [F4] (CLOSE) key to close the window.**

Next time you switch on the MPC1000, it will not load anything.

*Tips: You can load the preset sounds and the demo sequence separately by selecting the INTERNAL MEMORY in the LOAD from field of the LOAD page.*

*Tips: When you insert the memory card, which has AUTOLOAD folder, into card slot and switch on the MPC1000, the MPC1000 will load the AUTOLOAD folder in the memory card automatically, regardless of the setting in the Autoload field.*

## *Formatting the memory card*

You can format the memory card. Please note that if you format the card, all the data in the card will be deleted.

**01. Press the [MODE] key and then the [PAD 2] (LOAD) or the [PAD 3] (SAVE).**

**02. Press the [F3] (UTILIT) key.**

The Utility page will be displayed.

**03. Press the [F6] (DO IT) key.**

The CAUTION window will be displayed.

**04. Press the [F5] (DO IT) key.**

The MPC1000 will start formatting the card.

## *Saving the data to the internal flash memory*

If you select INTERNAL MEMORY in the SAVE to field of the LOAD page, you can save the data to the MPC1000's internal flash memory. This is available only when SAVE ALL PROGRAMS &SAMPLES or SAVE ALL SEQS &SONGS is selected in the Type field. You cannot save the individual sample or sequence data.

The saved data will be loaded automatically when you turn on the MPC1000, like the preset program and the demo sequence.

*Note: The internal flash memory has the factory preset program and demo sequence. When you save the data into the internal flash memory, the new data will overwrite the factory data.*

### When SAVE ALL SEQS & SONGS is selected

**01. Select INTERNAL MEMORY in the SAVE to field of the Save page.**

**02. Select SAVE ALL SEQS & SONGS in the Type field.**

**03. Press the [F6] (DO IT) key.**

The CAUTION window will be displayed. In this window, press the [F5] (DO IT) key.

The CAUTION window will be displayed again, asking for the confirmation. Press the [F3] (DO IT) key to save the data.

### When SAVE ALL PROGRAMS &SAMPLES is selected

The internal flash memory cannot have the file that is larger than 5 MB. Make sure that the value in the Size field, which will be displayed when you select SAVE ALL PROGRAMS &SAMPLES in the Type field of the SAVE page, does not exceed 5M.

**01. In the SAVE to field of the Save page, select INTERNAL MEMORY.**

**02. In the Type field, select SAVE ALL PROGRAMS &SAMPLES.**

**03. Press the [F6] (DO IT) key.**

The CAUTION window will be displayed. In this window, press the [F5] (DO IT) key.

The CAUTION window will be displayed again, asking for the confirmation. Press the [F3] (DO IT) key to save the data.

*Tips: The INTERNAL folder in the compact flash memory that comes with the MPC1000 contains the same factory preset programs and demo sequences that are saved in a MPC1000's flash memory. You can reset the flash memory to the default data, by loading these files from the INTERNAL folder and saving them into the flash memory.*

## Chapter 16 : Connecting the MPC1000 to your computer

The MPC1000 supports the USB mass storage class. When you connect the MPC1000 to a PC that supports USB mass storage class, the PC will recognize the memory card in the MPC1000 as a removable media drive. You can transfer the data between the recognized memory card and the PC.

You can save the data on the memory card to the PC, or you can load the data from the PC to the memory card. You need Windows 2000/Me/XP or later version, or MacOS 9.x/10.x or later version.

Note: The computer cannot recognize the MPC1000's internal memory directly. To save the data in the internal memory to the computer, you need to save the data to the memory card first. Also, the data from the computer will be saved to the memory card. To use the data in the MPC1000, load the data from the memory card.

### *Connecting the MPC1000 to a Windows-based PC*

**01. Insert the memory card in the card slot of the MPC1000.**

**02. Press the [MODE] key and then the [PAD 2] (LOAD), or the [PAD 3] (SAVE).**

**03. In the LOAD page or SAVE page, press the [F4] (USB) key.**

This brings up the USB page, which you use to connect the MPC1000 to the PC. That is all for the MPC1000.

**04. Connect the MPC1000's USB slave jack to the PC's USB host jack via USB cable.**

**05. When you connect the MPC1000 to the PC for the first time, the message, " Found New Hardware " will be displayed and follow the instruction on the display.**

Once the PC recognizes the MPC1000, its "Removal" icon will be displayed in the task bar. In the Device Manager, the MPC1000 will be displayed as a USB Mass Storage Device.

**06. In My computer, the MPC1000 is displayed as a removable disk.**

To save the data to a PC, select the data and drag and drop it from the removable disk to the hard disk.

To load the data, select the data and drag and drop it from the hard disk to the removal media.

**07. When you finish the data transfer, click the "Removal" icon on the PC's task bar and select the " Stop USB Mass Storage Device - Drive( :)" .**

*Note: In the "( :)", the alphabet is displayed, which indicates the drive in the PC.*

When you select to stop the device, the "USB Mass Storage Device is ready to remove safely." dialog box will be displayed.

**08. Remove the USB cable from the USB jacks of the MPC1000 and the PC.**

*Note: Make sure that you do Step 07 "Remove the device" before disconnecting the USB cable.*

*Note: You can transfer the data between the MPC1000 and the PC only when the USB page is displayed.*

*You can not move to another page or mode from USB page unless you disconnect the USB cable.*

## *Connecting the MPC1000 to the Macintosh*

**01. Insert the memory card to the MPC1000's card slot.**

**02. Press the [MODE] key and then the [PAD 2] (LOAD), or [PAD 3] (SAVE).**

**03. In the LOAD page, or the SAVE page, press the [F4] (USB) key.**

This brings up the USB page, which you use to connect the MPC1000 to the PC. That is all for the MPC1000.

**04. Connect the MPC1000's USB slave jack to your computer's USB host jack via USB cable.**

**05. Removal media will be displayed on the desktop.**

To save the data in the computer, select the data and drag and drop it from the removable disk to the hard disk. To load the data from the computer, select the data and drag and drop it from the hard disk to the removal media.

**06. After you finish the data transfer, select the removable media and drag and drop to the trash can.**

When you drag the removal media to the Dock's recycle bin under Mac OS 10.x, the icon will change to the eject icon.

**07. Remove the USB cable from the USB jacks of the MPC1000 and the computer.**

*Note: Make sure that you do Step 06 before disconnecting the USB page.*

*Note: You can transfer the data between the MPC1000 and the PC only when the USB page is displayed.*

*You can not move to another page or mode from USB page unless you disconnect the USB cable.*

## Chapter 17 : Other settings

In this section, you will learn about the other features, which were not mentioned in the other chapters.

### *Foot switch*

You can connect up to 2 foot switch to the MPC1000 and assign several functions (ex. Start/Stop a sequence, etc ...) to them.

**01. Connect a foot switch to the MPC1000's FOOTSWITCH jack.**

**02. Press the [MODE] key, and then the [PAD 10] (OTHER).**

You will enter to the OTHER mode.

**03. Press the [F3] (FOOTSW) key.**

This brings up the FOOTSW page, where you can make settings for the foot switch.

**04. Select the function to assign to the foot switch 1 in the Footswitch 1 field, and the function to assign to the foot switch 2 in the Footswitch 2 field.**

You can select the following functions.

PLAY START	It works the same as the PLAY START key.
PLAY	It works the same as the PLAY key.
STOP	It works the same as the STOP key.
PLAY/STOP	When you step on the switch in stop mode, the MPC1000 will start the playback. When you step on the switch in play mode, the MPC1000 will stop the playback.
REC+PLAY	It works as the same when you press the REC key and the PLAY key simultaneously (recording).
OVER DUB+PLAY	It works as the same when you press the OVER DUB and PLAY key simultaneously (overdub).
REC/PUNCH	When you step on the switch in stop mode, the MPC1000 will start the playback, when you step on the switch in play mode, it starts recording, in recording mode, it starts playback.
OVER DUB/PUNCH	When you step on the switch in stop mode, the MPC1000 will start the playback, when you step on the switch in play mode, it starts overdubbing, in overdub mode, it starts playback.
TEMPO TAP	It works the same as the TEMPO/NOTE REPEAT key.
PAD1 through 16	The MPC1000 will play the selected pad at the fixed velocity of 127 (maximum).
F1 through F6	They work the same as the function keys 1 through 6.
PAD BANK A through D	They work the same as the PAD BANK keys.

## *Adjusting the master level*

You can adjust the level of the headphone and the stereo out by turning the MAIN VOLUME knob. The MAIN VOLUME changes the analog signal level. This will also adjust the entire level of the MPC1000 digitally.

**01. Press the [MODE] key and then the [PAD 10] (OTHER).**

It switches to the OTHER mode.

**02. Press the [F1] (GLOBAL) key.**

The GLOBAL page will be displayed.

**03. In the Master level field, set the level.**

You will set the digital signal level, which will be sent out to the DA converter. The MPC1000 can output up to 32 sounds simultaneously. There is the great difference in the level when you play single sample and play 32 sounds. If you increase the value in the Master level field, you can increase the entire level of the MPC1000 to create more powerful sound with less noise. However, if you playback many sounds at the same time, the level may be overloaded, which may cause distortion. If you decrease the value in the Master level field, you can prevent distortion when you play many sounds at the same time. However, you cannot have a good result in respect to the noise or punch of the sound. Set the appropriate value in the Master level field depending on the application.

## *Adjusting the contrast of LCD*

You can adjust the contrast of the LCD display by turning the DATA wheel with holding [SHIFT] key. Adjusting the contrast of LCD can be done in any page.

## *Initialize to Factory Preset*

Various Sample and Sequence settings can be saved to Compact Flash when the file is saved. The global settings found in the MPC1000 (listed below) are saved to the internal Flash Memory and stored when the MPC1000 is turned off. You can re-initialize the Factory Preset settings using the following procedure.

**01. Turn the MPC1000 on while holding the [ERASE] key.**

**02. Release the [ERASE] key after the display shows [ MPC1000 (##MB installed)].**

Now the MPC1000 is reset to the Factory Preset settings.

The following global settings are stored in the MPC1000 :

- Timing Correct (Note value, Swing%)
- Click/Metronome (Count in, Rate, In play, In rec)
- Step Edit Options (Auto step increment, Duration of recorded notes)
- Active track receive channel
- Soft thru
- Sync in
- Sync out
- Master level
- Sustain pedal to duration
- Truncate duration
- Tap average
- Footswitch 1
- Footswitch 2
- Autoload
- LCD contrast

# Index

[%]	
% field	32
[1]	
1 - 4 field	58
16 level function	40
[A]	
Active track receive channel field	47
AFTER key	44
Amount field	27
Assign pad field	44
Assign to pad field	49
Attack field	61
Auto step increment field	34
Autoload field	83
[B]	
Bars field	36
[C]	
CC field	32
Channel pressure event	33
Click/Metronome feature	14
Control change event	32
Copies field	26
Count in field	14
Current tempo field	32
Cursor, Cursor Keys	7
[D]	
D field	31/32
DATA Wheel	7
Dcy md field	61
Decay field	61
Drum Pad	5
Duration of recorded notes field	34
[E]	
Edit field	25
End field	53
Erase feature	12
Event field	30
Event list	30
Event time field	30
Exclusive data event	33
[F]	
Field	7
Footswitch field	87
Freq field	63
Full level function	40
Function Keys	7
FX Send field	68/69
FX1 type field	69
FX2 type field	70
[H]	
High range/Low range field	44
HOLD key	43
[I]	
Ignore tempo change events in sequence field	39
In play field	14
In rec field	15
Initial tempo field	32
Input field	48
[L]	
Layer 1 field	59
Load field	80
LOAD from field	79
Lp field	56
Lvl field	59
[M]	
MAIN Page	7
Make new folder field	77
Master level field	88
Memory Card	6
MIDI	22
MIDI sequencer	22
MODE key	8
Monitor field	51
Mute group field	64
[N]	
N field	32
Note event	32
Note repeat feature	15
Note variation field	31
Note variation value field	31
Now field	10
NUMERIC key	9

---

[O]	
Out field	67
[P]	
P field	31
Pad banks	40
Pad event	31
Parameter field	44
Peak hold/Reset peak feature	51
Pgm field	58
Pitch bend event	32
Poly pressure event	33
Program	6
Program change event	33
Punch In/Punch Out feature	15
[R]	
RAM	6
Range field	60
Rate field	14
Reference sq field	29
Replace same files field	78
Replace same files in memory field	82
Replace same samples field	77
Replace same samples in memory field	81
Reps field	36/37
Reso field	63
[S]	
Sample	5
Sample field	52
Save field	77
Send level field	70
Sequence	5
Sequence field	36
Sequence list	42
Soft thru field	46
Solo function	41
Song	5
Song field	36
Sq field	10
St field	52
Start/loop link field	57
Step field	36
Step list	36
SUDDEN key	42
Sustain pedal	24
Sustain pedal to duration field	24
Swing feature	13
Sync in field	45
Sync out field	45
[T]	
Tap tempo feature	16
Tempo change event	32
Tempo field	36
Threshold field	48
Timing correct feature	13
To FX2 field	70
Tr field	10
Track	5
Track list	41
Track mute feature	20
Track type	20
Truncate duration field	19
Tune field	59
Type field (16 Levels)	40
Type field (Program)	63
[U]	
Undo Sequence feature	12
[V]	
V field	31/32
V>Freq field	64
V>Level field	59
View field	30/80
Voice overlap field	64
[W]	
WINDOW key	7

---

# Specifications

General	
Display	240 x 64 dot graphic LCD w/back light
Memory card slot	Compact Flash (The size of the compact flash card the MPC1000 can handle is from 32MB to 2GB)
Dimintions (W x H x D)	330 x 75.5 x 228.2(Max 234.6)
Weight	3.45kg
Power requirement	19W
Sound generator	
Sampling rate	44.1kHz
Memory capacity	16MB standard (11.5MB for sound memory), expandable to 128MB
Recording time	136sec. (16MB, MONO), 24m28sec. (128MB, MONO)
Memory expansion slot	1 x for optional EXM128
Data format	16-bit linear
Polyphony	32
Dynamic filtering	2 x 2-pole filter per voice
Filter type	Low pass, Band pass, High pass
Preset sound memory	5MB
Number of programs	24
Effects	
Effects	2 stereo effects and Master effect
Effect type	Chorus, Flanger, Bit grunger, 4 band EQ, Compressor, Phase shifter, Tremolo, Flying pan, Reverb Master effect: 4 band EQ, Compressor
Sequencer	
Maximum events	100,000 notes
Resolution	96 parts per 1/4-note
Sequences	99
Tracks per sequence	64
MIDI output channels	32 (16 channels x 2 outputs)
Song mode	20 songs, 250 steps per song
Drum pad	16 (velocity and pressure sensitive)
Drum pad banks	4
Sync mode	MIDI clock

## Specifications

Inputs / Outputs	
Record input (L and R)	1/4-inch stereo phone x 2, balanced -40dBu, input impedance 11k ohms; Max. Input level +10dBu
Digital input	RCA-pin x 1 S/PDIF
Stereo output (L and R)	1/4-inch phone x 2 unbalanced +11dBu, output impedance 1k Ohms, Max. output level +17dBu
4 individual outputs	1/4-inch phone x 4 unbalanced +11dBu, output impedance 1k Ohms, Max. output level +17dBu
Phones output	1/4-inch stereo phone x 1, 200mW / 100 ohms
Digital output	RCA-pin x 1 S/PDIF
MIDI inputs	5-pin DIN x 2
MIDI outputs	5-pin DIN x 2
USB	Slave connector x 1, USB MASS STORAGE CLASS support. (You need Windows 2000/Me/XP or later version, or MacOS 9.x/10.x or later version. )
Footswitches	1/4-inch phone x 2
Standard accessories	
Standard accessories	32MB Compact Flash card, Power cable, Operator's manual
Options	
EXM128	128MB expansion memory card
Data Compatibility (THRU Computer)	
MPC2000XL	SEQ, WAV, PGM (Most parameters of PGM file can be loaded.)
MPC4000	SEQ, WAV , PGM (DRUM program only. Only note assign and tune are loaded.)
MPC3000	No compatibility
Z4/Z8	WAV only
S5000/6000	WAV only
S1000/3000	No compatibility

AKAI professional M.I. Corp. [MUSIC PRODUCTION CENTER]  
 Model : MPC1000 (Sampler Section)

Date : October, 2003  
 Version : 1.0

## MIDI Implementation Chart

Function	***	Transmitted	Recognized	Remarks
Basic Channel	Default	X	1 - 16	
	Changed	X	1 - 16	
Mode	Default	X	1	
	Messages	X	X	
	Altered	X	X	
Note Number		X	35 - 98	
	True Voice	X	35 - 98	
Velocity	Note on	X	O	
	Note off	X	X	
After Touch	Key's	X	X	
	Ch's	X	O	Used in Note Repeat feature
Pitch Bend		X	X	
Control Change	0 - 127	X	X	
Program Change		X	0 - 127	
	True #			
System Exclusive		X	X	
System Common	: Song Position	X	X	
	: Song Select	X	X	
	: Tune	X	X	
System Real Time	: Clock	X	X	
	: Commands	X	X	
Aux Messages	: Local on/off	X	X	
	: All Note Off	X	O	
	: Active Sense	X	X	
	: Reset	X	X	
Notes:				

Mode 1 : OMNI ON, POLY    Mode 2 : OMNI ON, MONO  
 Mode 3 : OMNI OFF, POLY    Mode 4 : OMNI OFF, MONO

O : YES  
 X : NO

## MIDI Implementation Chart

Function	***	Transmitted	Recognized	Remarks
Basic Channel	Default	1 - 16	1 - 16	
	Changed	1 - 16	1 - 16	
Mode	Default	3	1	
	Messages	X	X	
	Altered	X	X	
Note Number		0 - 127	0 - 127	
	True Voice	0 - 127	0 - 127	
Velocity	Note on	O	O	
	Note off	X	X	
After Touch	Key's	O	O	
	Ch's	O	O	
Pitch Bend		O	O	
Control Change	0 - 127	O	O	
Program Change		O	O	
	True #	0 - 127	0 - 127	
System Exclusive		O	O	
System Common	: Song Position	O	O	
	: Song Select	X	X	
	: Tune	X	X	
System Real Time	: Clock	O	O	
	: Commands	O	O	
Aux Messages	: Local on/off	X	X	
	: All Note Off	O	X	
	: Active Sense	X	X	
	: Reset	X	X	
Notes:				

Mode 1 : OMNI ON, POLY    Mode 2 : OMNI ON, MONO  
Mode 3 : OMNI OFF, POLY    Mode 4 : OMNI OFF, MONO

O : YES  
X : NO

# Preset Programs List

MPC1000's internal flash memory and the compact flash memory card that comes with the unit have the following factory preset programs.

Internal Flash Memory	
DJ-Hip_Set	R_Bass
Nuskool_Set	Rock_GTR
Ill_Hip_Set	Arp_Wave
E_Kit	Str&Bass
Standard_Set	M_Bass
UK_Kit	
R-D&B_Set	
LA_Kit	

Compact Flash Memory Card	
"Autoload" folder	"INTERNAL" folder
Top_Set	DJ-Hip_Set
Sunny_Set	Nuskool_Set
Wanna_Do_Set	Ill_Hip_Set
Time_Set	E_Kit
Studio_Set	Standard_Set
Rock_Set	UK_Kit
Dry_Set	R-D&B_Set
Synth_Set	LA_Kit
Dry_Kit2	R_Bass
LA_Kit2	Rock_GTR
Dance_Kit	Arp_Wave
House_Kit1	Str&Bass
House_Kit2	M_Bass
Hip_Kit	
J-Percussion	
Samba_Kit	

*Note: The internal flash memory and the compact flash memory card also have the demo sequence, which is created with the preset program.*

*Tips: The INTERNAL folder in the compact flash memory that comes with the MPC1000 contains the same factory preset programs and demo sequences that are saved in a MPC1000's flash memory.*



**AKAI professional M.I. Corp.**